

# RepliMap Documentation

---

Description	User documentation for RepliMap – unified mapping and scene editing
Copyright	© 2026 RepliMap – AAI Innovations GmbH

# Table of Contents

---

1 Home

2 Getting Started

2.1 Overview

2.2 Installation

2.3 Login, Profile & Preferences

2.4 Home Overview

2.5 Main Screen Overview

2.6 Validator

2.7 Export Map

2.8 Export XODR to GeoJSON

3 Data Sources & Conversion

3.1 Overview

3.2 GeoJSON

3.3 Mapbox

3.4 Reference Imagery

3.5 Sensor Data

3.6 LiDAR Point Cloud Data

3.7 HERE to OpenDRIVE (XODR)

4 Road Tool

4.1 Overview

4.2 Create Road

4.3 Road Anchor

4.4 Connecting Road

4.5 Cut Road

4.6 Lane Offset

4.7 Lanes

4.8 Width Tags

4.9 Lane Sections

4.10 Lane Marking

4.11 Lane Height

4.12 Road Properties Panel

#### 4.13 Lane Properties Panel

### 5 Objects

#### 5.1 Overview

#### 5.2 Single Object

#### 5.3 Road Painting

#### 5.4 Repeatable Objects

#### 5.5 Pen Tool

#### 5.6 Bridge

#### 5.7 Tunnel

#### 5.8 Gantry

#### 5.9 Suspended Cable

#### 5.10 Object Properties Panel

### 6 Signals

#### 6.1 Overview

#### 6.2 Traffic Lights

#### 6.3 Traffic Signs

#### 6.4 Link

#### 6.5 Link & Snap

#### 6.6 Link, Snap & Adjust

#### 6.7 Adjust All

#### 6.8 Controllers

#### 6.9 Signal Properties Panel

### 7 Elevation Tools

### 8 Trams

### 9 Advance Tools

### 10 Troubleshooting

### 11 Shortcuts

### 12 Product Releases

#### 12.1 Overview

#### 12.2 Release notes

# 1 RepliMap

---

RepliMap is a unified platform designed for HD map editing and 3D scene editing for autonomous driving, enabling engineers to create, customize, and enrich road networks with precision.

This documentation covers everything you need to efficiently create, edit, and manage maps using the RepliMap, from importing data sources to building complete, validation-ready environments.

RepliMap is built around **ASAM OpenDRIVE (.xodr)** as its core format, allowing seamless integration into existing simulation toolchains while reducing manual effort and rework.

---

## 1.1 Why RepliMap?

ADAS and autonomous driving workflows often require rebuilding HD maps for each project, leading to inconsistent data and high manual effort. RepliMap addresses this by enabling:

- Reusable map assets across projects and programs
- Consistent data models across engineering, simulation, and validation
- Reduced manual preparation effort through structured workflows
- Support for regulation-driven validation (e.g., NCAP, GSR2, ISA)

Instead of creating isolated simulation scenes, RepliMap helps you build persistent digital twins that can be continuously improved and reused.

---

## 1.2 Documentation Sections

### 1.2.1 Getting Started

Set up your environment, understand the UI, and create your first map project.

### 1.2.2 Data Sources & Conversion

Import reference data or convert HD data into **ASAM OpenDRIVE (.xodr)** format, including:

- GeoJSON
- Mapbox
- HERE → XODR

- Sensor and imagery data

### **1.2.3 Road Tool**

Create and edit road geometry, lanes, junctions, and connectivity.

### **1.2.4 Objects**

Place and configure static and semantic objects in your map.

### **1.2.5 Signals**

Define traffic lights, signs, and rules that control traffic behavior.

### **1.2.6 Elevation Tools**

Adjust slopes and vertical alignment of roads.

### **1.2.7 Trams**

Model tram networks and integrate them with road infrastructure.

### **1.2.8 Advanced Tools**

Use power features for alignment, validation, batch operations, and optimization.

### **1.2.9 Troubleshooting**

Find answers to common issues and frequently asked questions, helping you quickly identify and resolve problems encountered during map creation, editing, and data workflows.

### **1.2.10 Shortcuts**

Keyboard shortcuts and productivity tips for faster editing.

### **1.2.11 Product Releases**

Release notes and version history for RepliMap.

## 1.3 Workflow Overview

A typical RepliMap workflow looks like:

1. Import data from supported sources
2. Convert existing HD map data to **ASAM OpenDRIVE (.xodr)** format if needed
3. Edit and refine roads, objects, and signals
4. Validate the map for consistency and correctness
5. Export or integrate into simulation and validation environments

This structured workflow helps reduce errors and ensures consistency across teams.

---

## 1.4 About This Documentation

This documentation is being developed incrementally. Each section will include:

- Step-by-step instructions
- Visual examples and screenshots
- Best practices and common pitfalls
- Cross-links between related workflows

Content will evolve alongside the product to reflect the latest capabilities of the RepliMap editor.

# 2 Getting Started

---

# Getting Started

---

Welcome! This guide helps you get up and running quickly with the platform. By the end of this chapter, you'll have everything set up and be ready to start exploring and working with your maps.

## ► What's Included in This Chapter

This chapter covers the essential steps and concepts to get you started

- [Installation](#) – Download, install, and check system requirements
- [Login, Profile & Preferences](#) – Sign in and configure your account settings
- [Maps overview](#) – Understand the Maps dashboard and available map types
- [Main screen overview](#) – Get familiar with the editor layout, tools, and workspace
- [Validator](#) – Validate maps before export and review validation reports
- [Export Map](#) – Export maps in different formats for external tools and simulation platforms
- [Export XODR to GeoJSON](#) – Convert XODR maps to GeoJSON (*coming soon*)

# Installation

---

RepliMap is available through the official **AAI Innovations GmbH** website. Get in touch via the contact form on our website:

- **Product page:** [Get RepliMap on the AAI website](#)

Once you have access, download the latest RepliMap build from the [Software Download Portal](#)

---

## ► Installation Steps

1. Download the RepliMap build.
  2. Run the installer and follow the on-screen instructions.
  3. Accept the license terms and conditions to proceed with installation.
  4. The installer sets up RepliMap in your user directory, for example `C:\Users\YourName\RepliMap`.
  5. During setup, the installer creates a **Start Menu** shortcut for quick access.
  6. When installation is complete, launch RepliMap from the desktop shortcut or from the Start Menu.
- 

## ► After Installation

When you launch RepliMap for the first time, sign in with the credentials provided via email. The application verifies your license and activates your workspace.



Tip

Use the latest RepliMap version for new features and bug fixes.

---

## ► System Requirements

	Minimum	Recommended
<b>CPU</b>	Core i5 (7th gen or newer)	Core i7 (9th gen or newer)
<b>RAM</b>	16 GB	32 GB
<b>GPU</b>	4 GB VRAM	6 GB VRAM
<b>Platform</b>	Windows 10 / 11 (64-bit)	Windows 10 / 11 (64-bit)

#### Supported platforms

RepliMap is officially supported on **Windows 10** and **Windows 11** (64-bit). Ubuntu/Linux builds can be provided for specific user or project requests—contact our support team at [support@aai-innovations.com](mailto:support@aai-innovations.com).

# Login, Profile & Preferences


## ► Login

1. Open RepliMap (see [Installation](#) if you have not installed it yet).
2. On the Login screen, enter the e-mail and password provided via email.
3. Use Remember me if you want the app to keep you logged in on this machine (only on trusted devices).
4. If you forgot your password, use Forgot Password? and follow the instructions, or contact [support](#).

New users without credentials should use **Contact Support** on the login screen or reach out through the [RepliMap Website](#).

## ► User Profile Menu

After you log in, your **name** and **avatar** appear in the **top-right** of the window. Select them to open the profile menu.

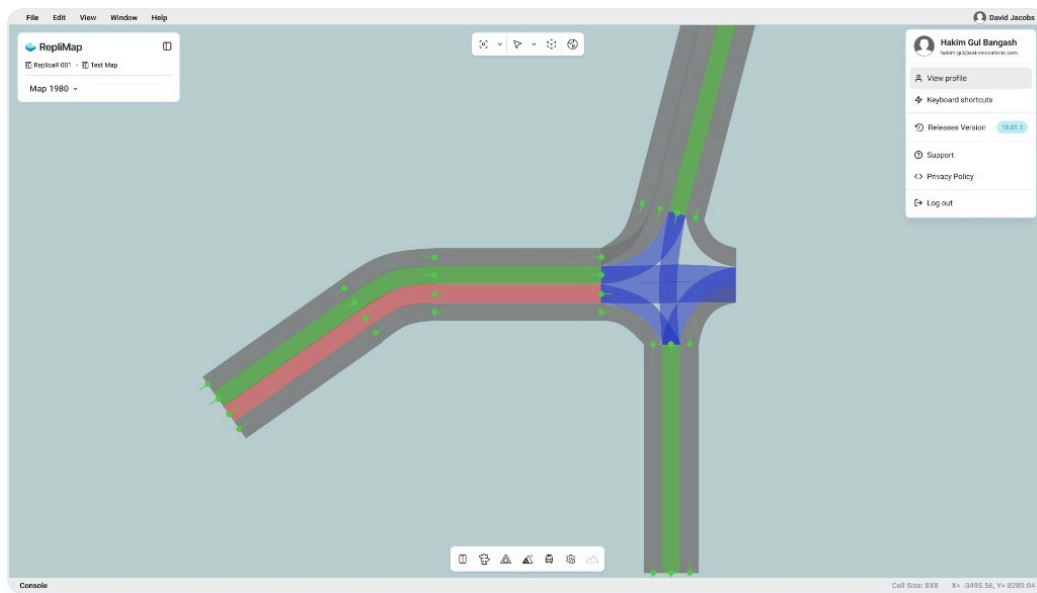

Typical entries include:

Item	Purpose
<b>View profile</b>	Open your account details and profile photo. See <a href="#">View Profile</a> below.


Item	Purpose
<b>Preferences</b>	Change theme, language, instruction panels, and 3D scenery camera speed. See <a href="#">Preferences</a> below.
<b>Keyboard shortcuts</b>	Links to the shortcut pages in the documentation. The shortcuts help speed up your mapping journey.
<b>Releases / version</b>	See the RepliMap versions available on the download portal.
<b>Support</b>	Links to help resources or contact options.
<b>Privacy Policy</b>	Legal information for the product.
<b>Log Out</b>	End your session on this computer.

---

## ► View Profile

Select **View profile** from the profile menu to open your account details.

You can update your **profile photo** here (recommended size: 400×400 px, PNG or JPG). **User name** and **email** are shown for reference only and cannot be changed in the app.




The image shows a user profile form titled "Profile". It features a "Profile Photo" section with a placeholder icon and a pencil icon, with text indicating "Recommended: 400x400px. PNG or JPG.". Below this are two text input fields labeled "User Name" and "Email". At the bottom, there are two buttons: "Cancel" and "Save".


## ► Preferences

Open **Preferences** from the **User Profile** menu: click on your **name** or **avatar** in the **top-right** corner, then select **Preferences** from the dropdown.

In the Preferences window, you can configure:

- **Appearance** – Switch between **Light**, **Dark**, and **System** theme.
- **Language** – Choose the display language. *Currently not Available*
- **Instruction Panels** – The **Instruction Panel** toggle allows users to enable or disable instructional tooltips for the **Bottom Toolbar**.
- **3D Scenery Camera Speed** – Camera movement speed can be adjusted in Preferences, with support up to **10x** for improved navigation in 3D scenes. Hold **Shift** to increase camera movement speed while navigating.

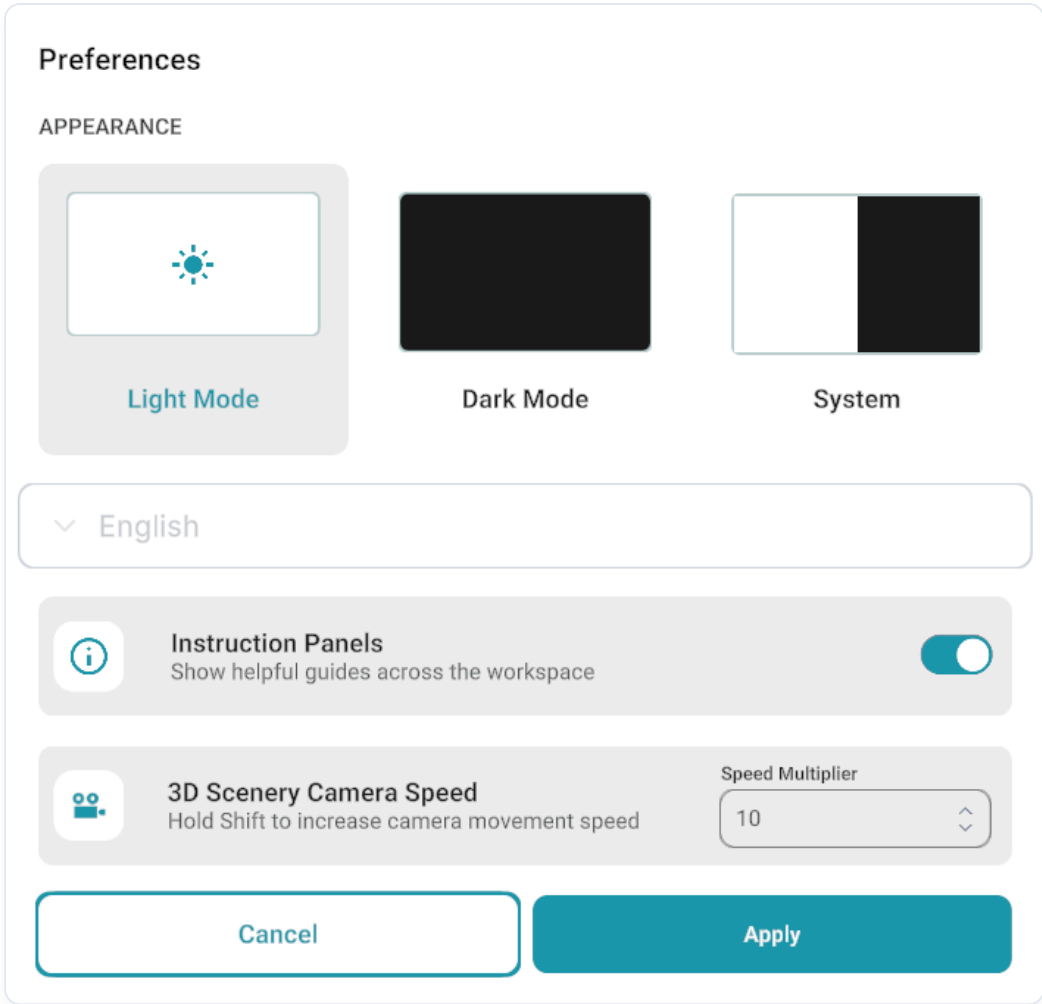

 **Note**

The current beta does not yet include full multi-language support and keyboard shortcuts. Both are planned for an upcoming release.

# Home Overview

---

The Home screen, also called the **Maps screen** or **Dashboard**, is displayed after login and shows the list of all available maps, including RepliMap sample maps, NCAP-oriented maps, and user-created maps. From this screen, users can open existing maps, import maps, or create new maps before entering the editing canvas.

## ► Map Categories (Tabs)

**Tabs** at the top of the Maps view allow users to navigate between different map categories:

Tab	What it shows
<b>User Maps</b>	Maps created, imported, and saved by you or your team are listed in the User Maps tab.
<b>NCAP Maps</b>	Curated maps oriented toward <b>Euro NCAP</b> (or similar) scenarios—useful starting points for regulated test layouts.
<b>Sample Maps</b>	Built-in <b>RepliMap</b> examples for exploring features and workflows without using production data.

### User maps are local

**User maps** are stored on **this computer**. Signing in on another machine with the same account does **not** transfer those files; maps do not follow your login automatically.

## ► Actions: Import and New Maps

- **Import** — Bring in an existing XODR map file from disk. You may import different versions of XODR map into the tool. The features not supported in version 1.6 are ignored or dropped.
- **New Map** — Create a **new** map and land on the mapping editor canvas.

## ► Maps List

The main table usually includes columns such as:

Column	Meaning
<b>Maps</b>	Name of the Map (for example <code>RepliMap_001</code> ).
<b>Path</b>	Location of the Map on the machine.
<b>Creation date</b>	When the Map was created. This date is taken directly from the XODR map date.
<b>Last modified</b>	When the Map was last edited.

Each row often includes a **delete** control (for example a trash icon). Use it only when you are sure you no longer need the Map in RepliMap—this removes the map from the **User Maps** list and from RepliMap’s database view; it does **not** delete the file from disk (see **Path**).

---


## ► Map Selection and Navigation to Canvas.

Select the desired map from the list to enter the [Main screen overview](#) and explore fast and efficient tools to create or edit the map according to your needs.

# Main Screen Overview

After opening a map from the [Maps overview](#), RepliMap displays the Editor, featuring a central Canvas, side Panels, and Toolbars for navigation and editing.

This section provides an overview of each area.

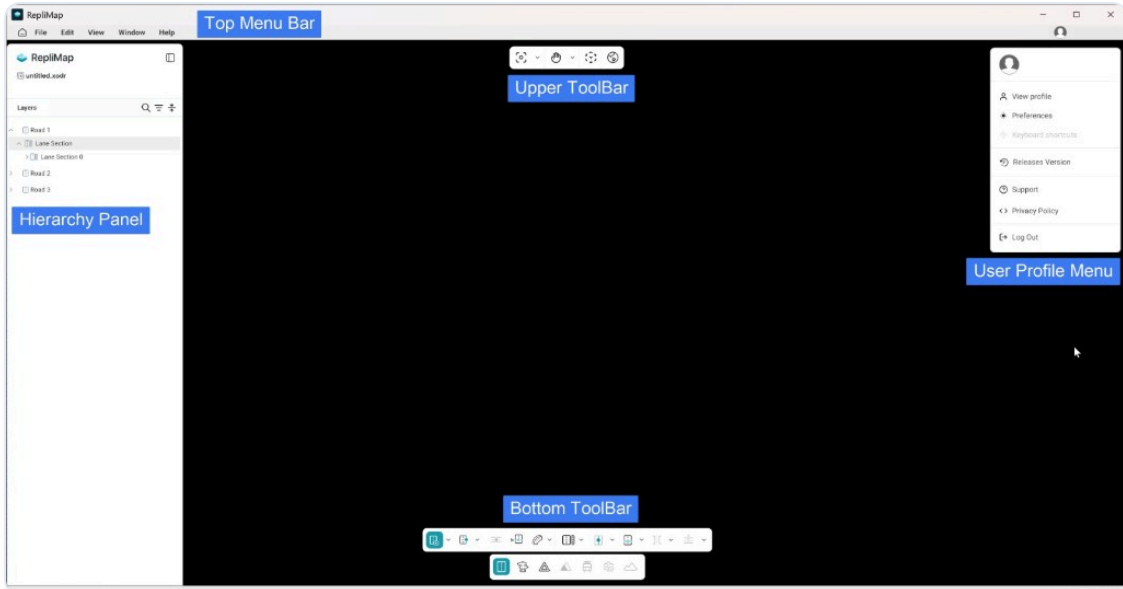

## ► Top Menu Bar

At the top of the interface, you will find the main menu bar:

- **Home Button** – Returns you to the [Maps overview](#) page.
- **Application menus** – Includes File, Edit, View, Window, and Help options.
- **User profile (right side)** – Provides access to [Preferences](#) and other account settings; see [Login, profile & Preferences](#) for more details.

Each menu covers the following:

Menu	What's inside
File	<b>New</b> – Create a new project <b>Open</b> – Open an existing project <b>Import</b> – Import external data ( <a href="#">Sensor data</a> , <a href="#">LiDAR Point Cloud</a> , <a href="#">Reference Image</a> , <a href="#">GeoJSON</a> ) <b>Conversion Pipelines</b> – Run data conversions (e.g., <a href="#">HERE HD to ODR</a> )

Menu	What's inside
	<b>Save</b> – Save the current project <b>Save As</b> – Save the project with a new name or location <b>Export</b> – <a href="#">Export Map</a> ; <a href="#">Export XODR to GeoJSON</a> <b>Quit</b> – Close RepliMap
<b>Edit</b>	<b>Undo</b> and <b>Redo</b> for basic editing steps.
<b>View</b>	<b>Grid</b> – Toggle grid visibility on the canvas <b>Zoom Handle</b> – <i>(disabled for now)</i> <b>Map Colors</b> – Changes how the canvas is drawn (e.g., transparent roads); used when reference data is visible to distinguish primary and connecting roads clearly <b>Map Icons</b> – Hides the icons of map elements/items on the canvas <b>Helper Roads</b> – Hides helper roads on the canvas <i>(explained in a later section)</i> <b>Editor Slots</b> – <i>(disabled for now)</i>
<b>Window</b>	<a href="#">Console</a> ; <a href="#">Validator</a> ; <a href="#">Mapbox</a> panel.
<b>Help</b>	<a href="#">Documentation</a> ; <a href="#">Shortcuts</a> <i>(disabled for now)</i> ; <a href="#">Contact us</a>

## ► Hierarchy Panel (Top Left)

The **Hierarchy (or Project) panel** shows your current position within the project structure.:

- Shows the active map name.
- Lists roads so you can search by road ID and focus quickly on a specific road.
- Lets you inspect road-level content such as objects and signals.
- Provides controls to hide or show roads on the canvas.
- Lets you open the saved **XODR/XML** view for roads, objects, and signals.
- You can collapse the panel to make canvas editing easier.



Hierarchy panel screenshot





## ► Upper Toolbar

The **Upper Toolbar** sits above the canvas (**centred**). It groups **view**, **navigation**, and **reference data** tools, and lets you switch between **2D** and **Scenery** views.




Groups include:

Area	Examples
<b>View / Focus</b>	<b>Focus</b> centres the map and gives you an overall view of it ( <b>Shortcut: F</b> ). <b>Ruler</b> Shortcut ( <b>Ctrl+R</b> ) <i>is currently disabled</i> .
<b>Pan/Gizmo Tool</b>	<b>Palm</b> is used for panning across the map canvas. <b>Move</b> , <b>Rotate</b> , and <b>Scale</b> are gizmo tools that become active when an object is selected, enabling easier editing of objects and signals when required.
<b>Reference Data Panels</b>	Panels such as <b>Sensor</b> , <b>GeoJSON</b> , and <b>Reference image</b> let you reopen loaded reference data; if data is not loaded, they guide you to import it. See <a href="#">Data sources &amp; conversion</a> for details.
<b>2D and Scenery View</b>	Quickly switch between <b>2D</b> (orthogonal) and <b>Scenery</b> (3D) views. Use <b>2D</b> for most road-network editing; objects and signals can be added from either view.

## ► Bottom Toolbar

The **Bottom Toolbar** is the main area for map editing. It includes the following tools groups:

Tool group	What it is used for
<b>Road</b>	Road-level editing, including lane editing, lane markings, lane height, and road elevation adjustments. See <a href="#">Road tools</a> .
<b>Objects</b>	Asset-library workflows and object-editing tools, including items such as road marks and polygon objects. See <a href="#">Objects</a> .
<b>Signals</b>	Signal-library tools for traffic control elements, including traffic lights and traffic signs. See <a href="#">Signals</a> .
<b>Elevation Tool</b>	Junction-level elevation tools to adjust entire junctions. See <a href="#">Elevation tools</a> . <i>(Currently disabled.)</i>
<b>Trams</b>	Tram-network tools for tram road creation, connections, power lines, and related setup. See <a href="#">Trams</a> .
<b>Advanced Tools</b>	Extra quick tools for editing automation. See <a href="#">Advance tools</a> . <i>(Currently disabled.)</i>

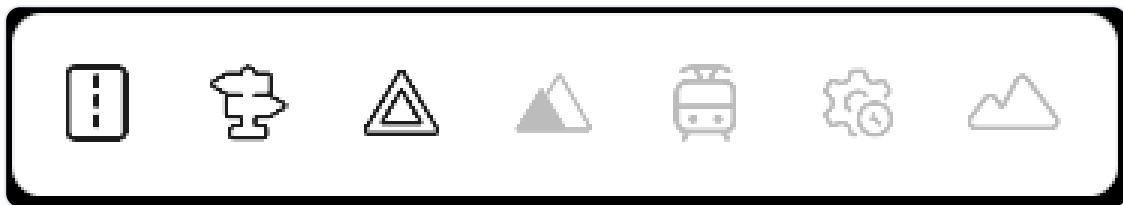

## ► Map Canvas


The **centre** of the window is the main canvas, where you view and edit the road network, lanes, junctions, objects, and signals in **2D** (and **3D/Scenery**, if available).

You can:

- **Pan and zoom** using the palm tool, mouse wheel, or zoom handle. - **Select** lanes, nodes, objects, and signals for editing.
- Switch between **2D** and **Scenery** views to inspect the map from different perspectives.

## ► Status Bar and Console

- **Bottom-left – Console** (or log): opens messages, warnings, or a command line depending on configuration.
- From the **Console**, users can export log output to a `.txt` file using the **Export** icon in the console panel.
- **Bottom-right** – Context data such as **cell size**, **cursor coordinates (X, Y)**, or scale—useful for precise placement and debugging.

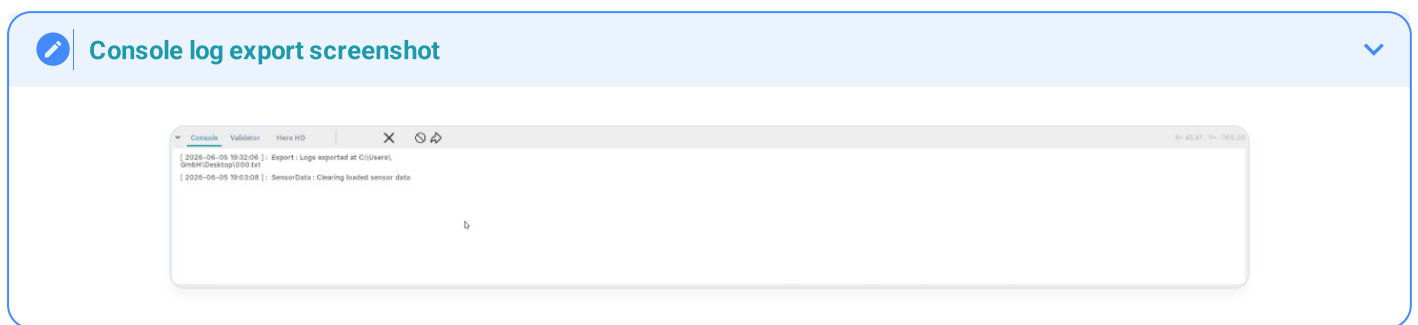


## ► Related

- [Account, login & preferences](#) – profile menu and settings.
- [Maps overview](#) – switching between user, NCAP, and sample maps.

# Validator



The **Validator** is a map verification tool that analyzes the currently open map and identifies potential issues **before export**. It helps ensure your map data meets validation requirements by generating a detailed **validation report** that can be reviewed, saved, and shared.

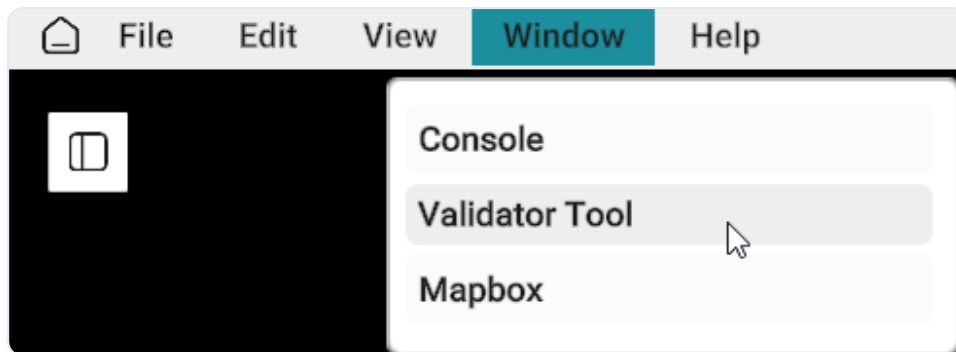


## ► How to Use Validator

Users can validate the map using three different methods: **Validator Tool**, **Save As** export, or **Export Map** pipeline.

Method	Steps
<b>Validator Tool</b>	<ol style="list-style-type: none"><li>1. Go to the <b>Window</b> menu from the menu bar.</li><li>2. Click <b>Validator Tool</b>.</li><li>3. A warning screen will appear.</li><li>4. Click <b>OK</b> to start map validation.</li></ol>
<b>Save As</b>	<ol style="list-style-type: none"><li>1. Go to the <b>File</b> menu from the menu bar.</li><li>2. Click <b>Save As</b>.</li><li>3. Select the export location.</li><li>4. Enable the <b>Run Validation</b> toggle.</li></ol>
<b>Export Map Pipeline</b>	<ol style="list-style-type: none"><li>1. Go to the <b>File</b> menu from the menu bar.</li><li>2. Click <b>Export</b> → <b>Map</b>.</li><li>3. Select the export location and map type.</li><li>4. Enable the <b>Run Validation</b> toggle.</li></ol>

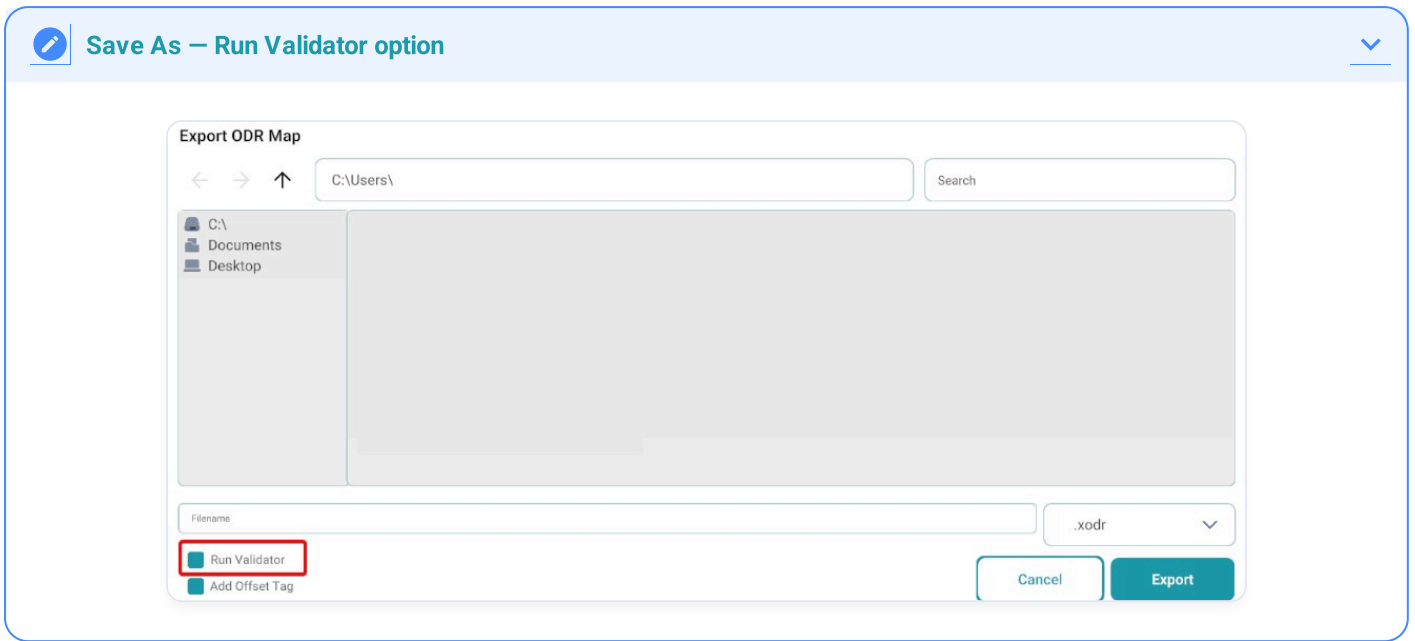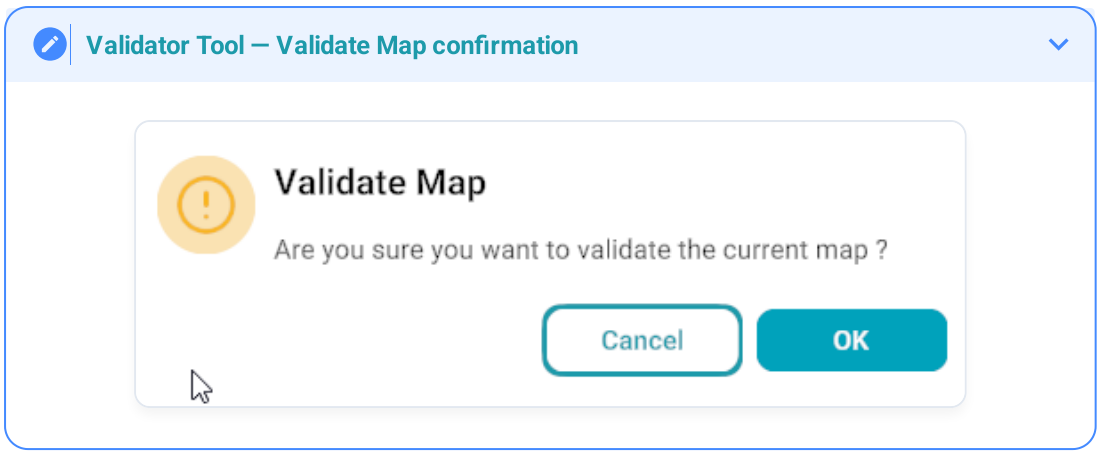

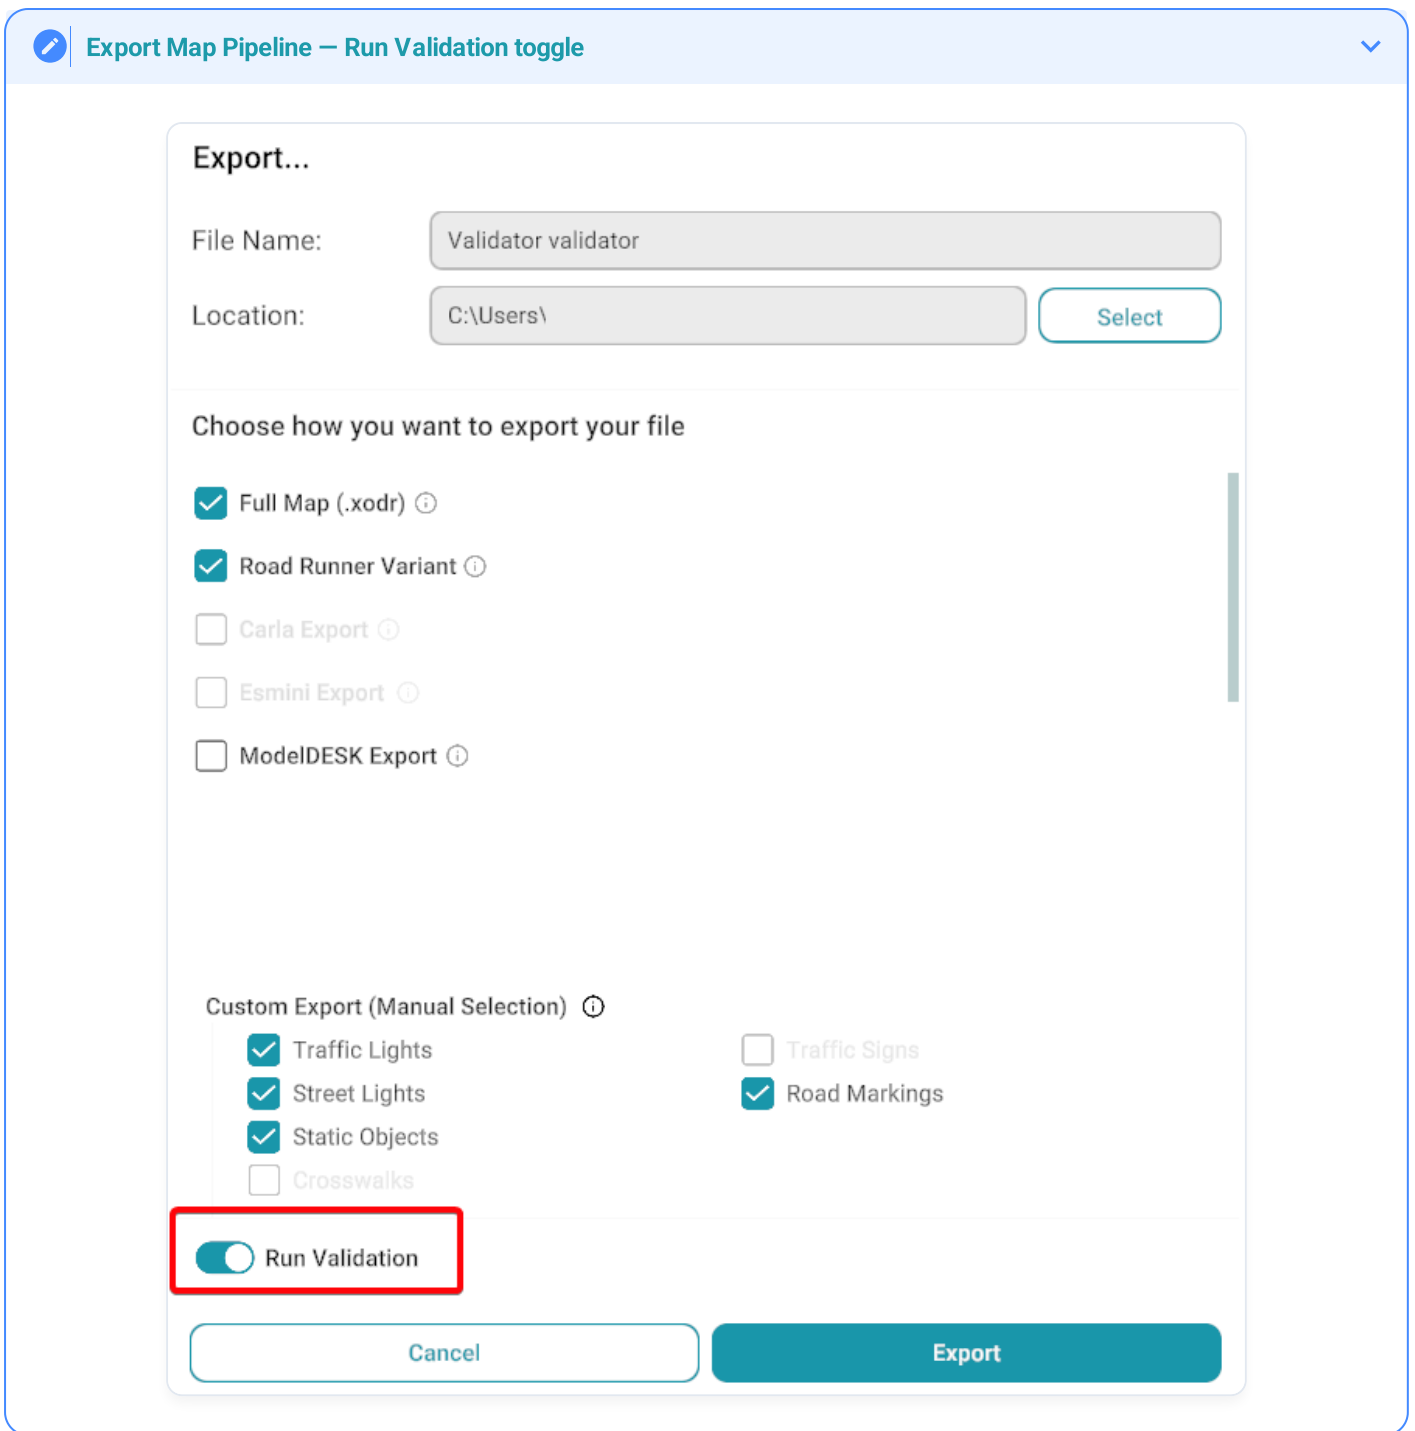

## ► Features

The Validator provides the following capabilities:

- Validates the **currently open map**.
- Generates a **detailed validation report**.
- Displays validation results in the **Map Validator** tab.

- **Automatically opens** the validation report once validation is complete.
  - Allows validation to be **executed before exporting** a map.
  - Saves validation logs as a **text file** using the exported map name and a **timestamp**.
  - Supports **exporting** validation reports as text files.
  - Lets you **choose the output location** when exporting validation reports.
- 

## ► Validation Report

The validation report provides a summary of validation results, including any detected **warnings, errors, or issues** that may require attention before the map is exported.

Reports can be reviewed within the tool or exported for **documentation** and **troubleshooting** purposes.

---

## ► Viewing Validation Reports

After validation is completed, the **Map Validator** tab automatically opens in the console and displays the validation results.

To review issues in more detail or share the results with others:


1. Open the **Console**.
2. Select the **Map Validator** tab.
3. Click the **Export** button in the Validator panel.
4. Choose a **save location** for the log file.

The exported log file contains the **complete validation report** and can be used for detailed analysis, troubleshooting, documentation, or sharing with other team members.

### Note

The generated validation results are also saved in the output directory. You can view the full validation report in the `output_result` file.

## Export validation report from Console

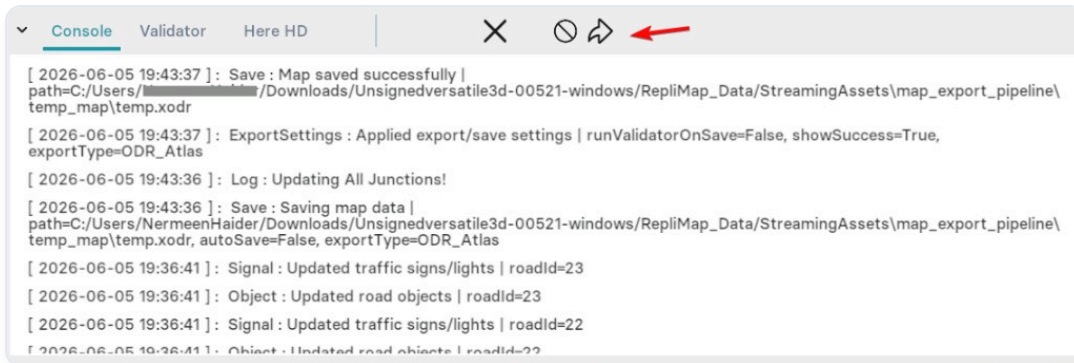

```
[ 2026-06-05 19:43:37 ] : Save : Map saved successfully |
path=C:/Users/.../Downloads/Unsignedversatile3d-00521-windows/RepliMap_Data/StreamingAssets\map_export_pipeline\
temp_map\temp.xodr
[ 2026-06-05 19:43:37 ] : ExportSettings : Applied export/save settings | runValidatorOnSave=False, showSuccess=True,
exportType=ODR_Atlas
[ 2026-06-05 19:43:36 ] : Log : Updating All Junctions!
[ 2026-06-05 19:43:36 ] : Save : Saving map data |
path=C:/Users/NermeenHaider/Downloads/Unsignedversatile3d-00521-windows/RepliMap_Data/StreamingAssets\map_export_pipeline\
temp_map\temp.xodr, autoSave=False, exportType=ODR_Atlas
[ 2026-06-05 19:36:41 ] : Signal : Updated traffic signs/lights | roadId=23
[ 2026-06-05 19:36:41 ] : Object : Updated road objects | roadId=23
[ 2026-06-05 19:36:41 ] : Signal : Updated traffic signs/lights | roadId=22
[ 2026-06-05 19:36:41 ] : Object : Updated road objects | roadId=22
```

## ► Console Integration

The Validator is integrated with the console and provides two tabs:

Tab	What it shows
Console	General application, import, and export logs.
Map Validator	Validation results and validation-related logs.

## ► Related

- [Export Map](#) – validate maps before export from the export workflow.
- [Main screen overview](#) – Window menu and console access.
- [Troubleshooting](#) – resolving issues and error messages.


# Export Map

---

The **Export Map** workflow allows users to generate map files in different formats based on project requirements. Users can export the complete map or create format-specific variants optimized for external tools and simulation platforms.

## ► How to Export the Map (XODR)

1. Go to **File menu** from the top menu bar.
2. Select **Export** from the drop-down menu.
3. Click **Map**.
4. The **Export Map** window will appear.

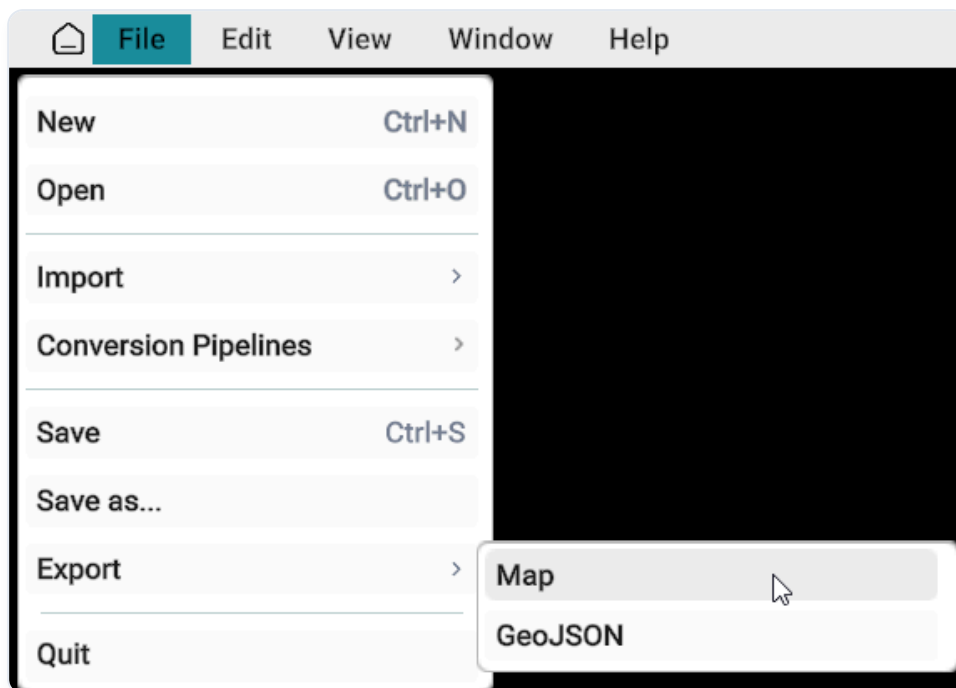


## ► Export File Types

The following export formats are available:

- **Full Map**
- **Road Runner**
- **ModelDESK**
- **CARLA** (*Currently Unavailable*)

- **Esmini** (Currently Unavailable)

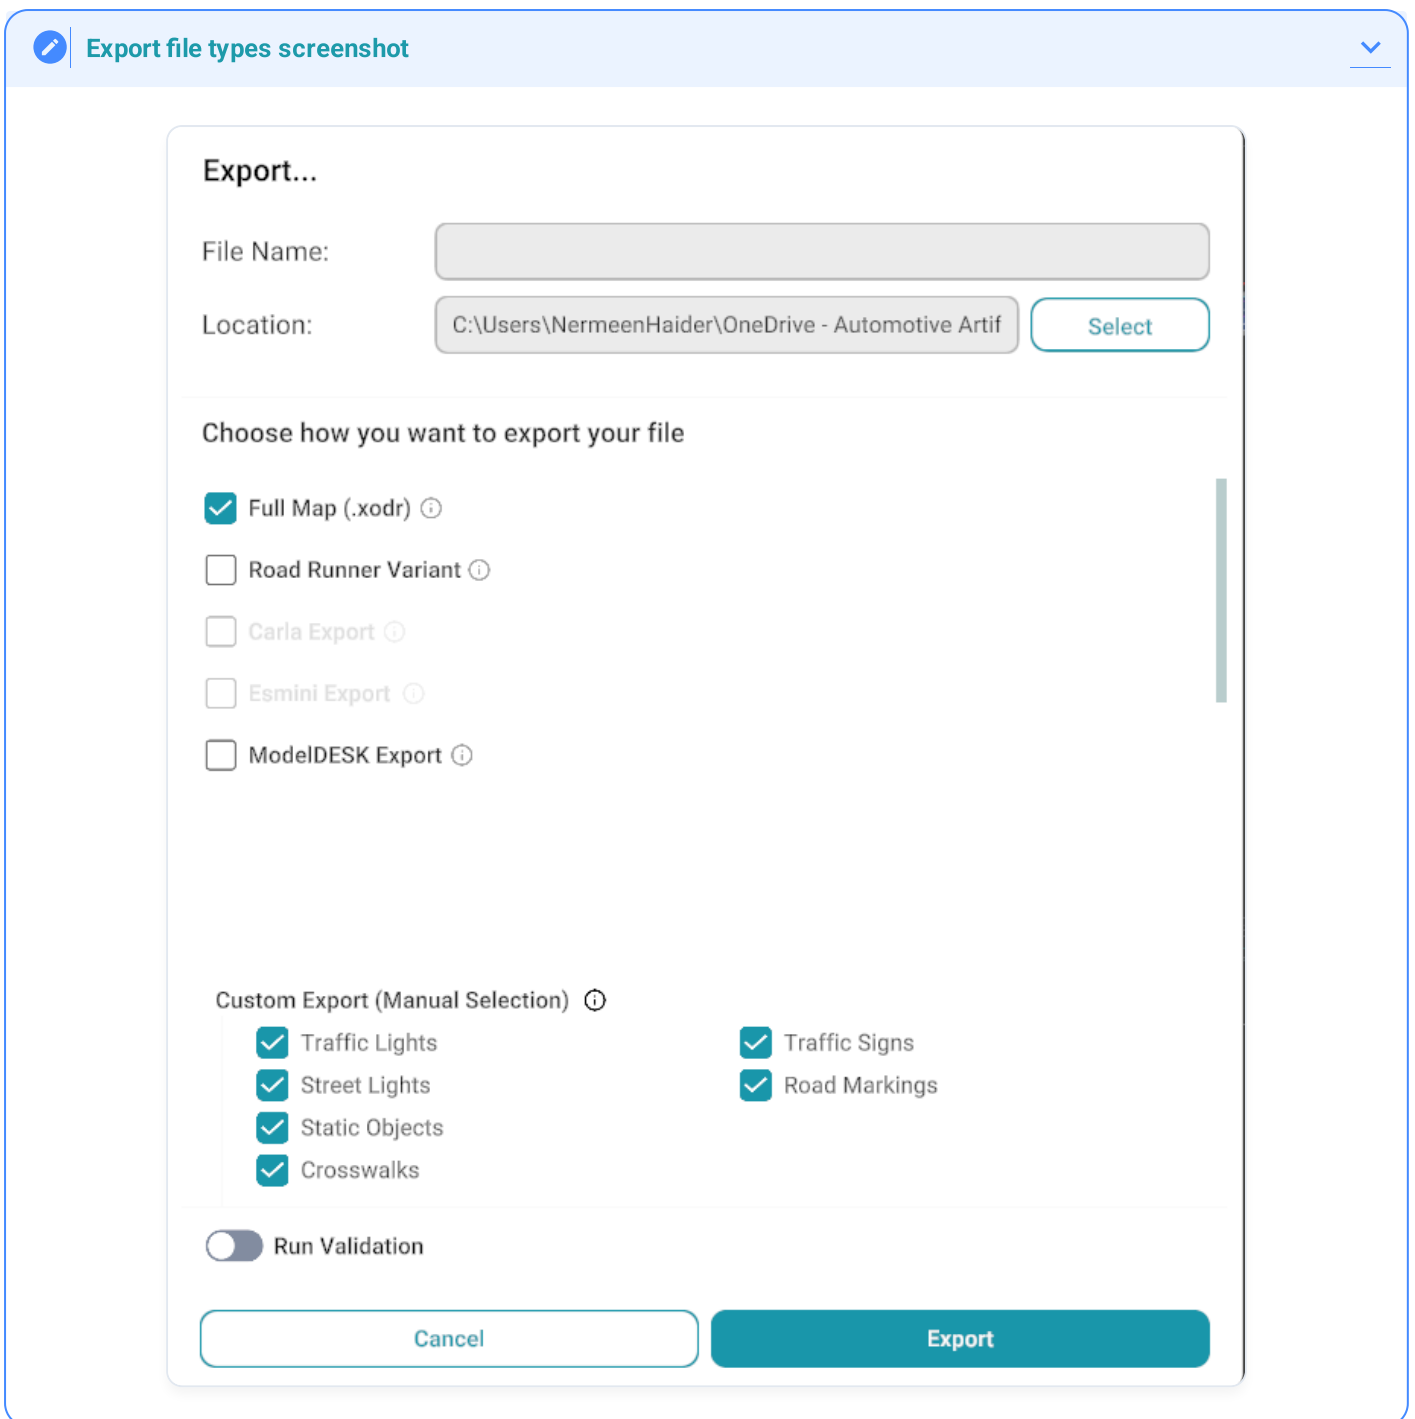

## ► Full Map

The **Full Map** export generates the complete map without applying any modifications or filtering. This export preserves the map exactly as it exists in the project.

<b>Primary Roads</b>	<b>Connecting Roads</b>	<b>Junctions</b>
<b>Traffic Signs</b>	<b>Traffic Lights</b>	<b>3D Objects</b>
<b>Repeatable Objects</b>	<b>Trees and Vegetation</b>	<b>Road Markings</b>
<b>All Map Assets and Metadata</b>		

**Exports:** The Items/ elements selected from "Custom Export"

---

## ► Road Runner

The **Road Runner** export generates a map compatible with Road Runner workflows. This export is intended for users who require a simplified map for Road Runner environments.

**Exports:** The Items/ elements selected from "Custom Export"

---

## ► ModelDESK

The **ModelDESK** export generates a ModelDESK-compatible map variant. During export, the map is processed to remove unsupported elements and improve road connectivity.

**Exports:** The Items/ elements selected from "Custom Export"

### **Additional Processing:**

- Non-drivable roads are removed.
- Connecting roads are converted to primary roads when the lane count matches.
- Connecting roads remain unchanged when lane counts do not match.

### Export...

File Name:

Location:

---

Choose how you want to export your file

ModelDESK Export ⓘ

Current Roads List:

Junctions to Direct Links: <input type="text" value="Road ID"/> <input type="button" value="+"/> <div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;">                     1 <input type="button" value="🗑"/>                      2 <input type="button" value="🗑"/>                      3 <input type="button" value="🗑"/> </div>	Roads disconnection: <input type="text" value="Road ID"/> <input type="button" value="+"/> <div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;">                     6 <input type="button" value="🗑"/>                      8 <input type="button" value="🗑"/> </div>	Remove specified roads list: <input type="text" value="Road ID"/> <input type="button" value="+"/> <div style="border: 1px solid #ccc; padding: 5px; min-height: 100px;"> </div>
---	---	--

Custom Export (Manual Selection) ⓘ

<input checked="" type="checkbox"/> Traffic Lights	<input checked="" type="checkbox"/> Traffic Signs
<input checked="" type="checkbox"/> Street Lights	<input checked="" type="checkbox"/> Road Markings
<input checked="" type="checkbox"/> Static Objects	
<input checked="" type="checkbox"/> Crosswalks	

Run Validation

## ► ModelDESK Tools

### ► Current Roads List

The **Current Roads List** allows users to manage roads that require attention before export.

Users can:

- Upload a list of road IDs.

- Maintain a list of problematic roads.
- Save road IDs for future use.

Option	Description
<b>Junction to Direct Links</b>	Add the IDs of drivable roads whose connecting roads have connectivity or offset issues. The specified roads are processed during export to correct the associated connecting road connections
<b>Roads Disconnection</b>	Add the IDs of problematic non-drivable roads, such as shoulder roads, sidewalks, or other non-drivable road types. These roads are treated as disconnected during export processing.
<b>Remove Specified Roads List</b>	Add road IDs that cannot be corrected through standard methods. These roads are removed from the generated ModelDESK map during export.

### ► Load / Save


Option	Description
<b>Load</b>	Load a previously saved JSON file containing road IDs and export configuration data.
<b>Save</b>	Save the current road IDs and export configuration data to a JSON file for future use.

### ► Custom Export

The **Custom Export** option provides complete control over the export content. Users can manually select which map components should be included in the exported file.

- Displays a checklist of all exportable map elements.
- Allows selection of the required items for export.

- Only items present in the current map are enabled and selectable.
- Items that do not exist in the map are displayed as disabled (greyed out) and cannot be selected.

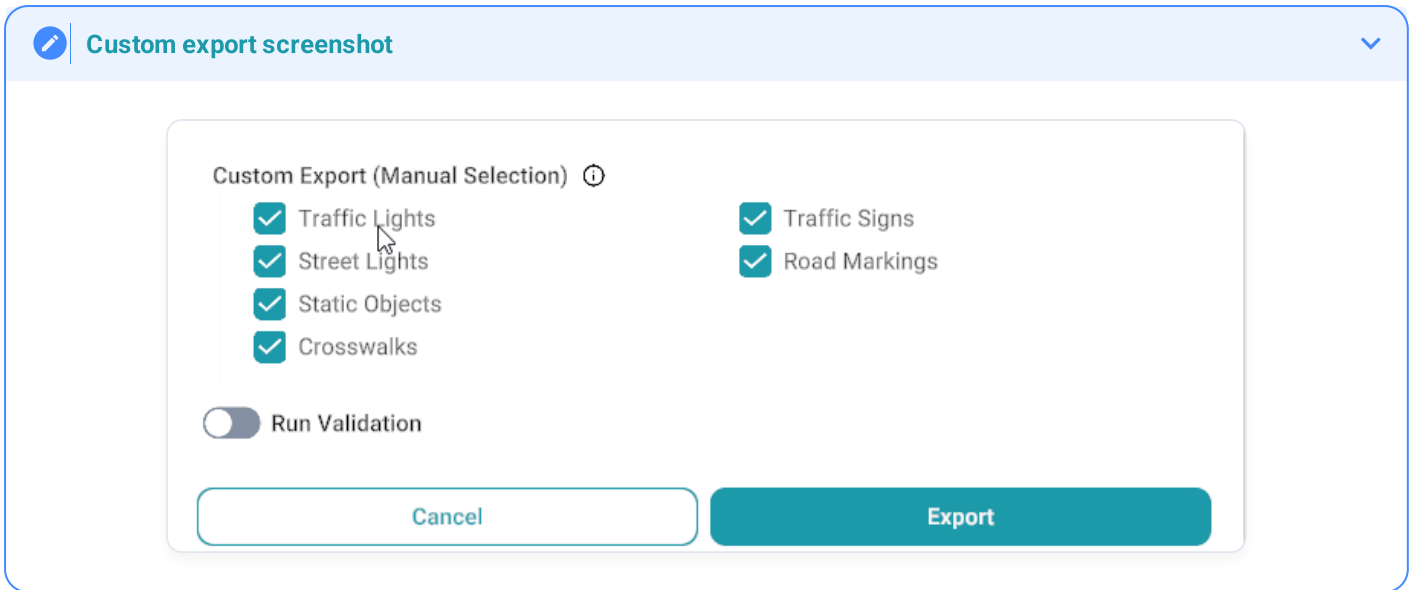

## ► Related

- [Main screen overview](#) – File menu and export access from the editor.
- [Export XODR to GeoJSON](#) – convert exported XODR maps to GeoJSON (*coming soon*).
- [Validator](#) – validate maps before export.

# Export XODR to GeoJSON

---

 Coming soon

This feature will be available soon.

## ► Related

- [Export Map](#) – export maps in different XODR formats for external tools and simulation platforms.
- [GeoJSON](#) – GeoJSON reference data and import workflows.

## 3 Data Sources & Conversion

---

# Data Sources & Conversion

---

RepliMap supports real-world map workflows with reference data from multiple sources, including **sensor-drive data** (for example LiDAR, camera imagery, and trajectory), **GeoJSON**, and **raster/satellite imagery**. **Mapbox** satellite context is also available directly in the editor.

This section also covers conversion workflows that speed up map generation. The **HERE to XODR** pipeline is integrated, and additional pipelines (such as **NDS to XODR**) may be available depending on your license and product version.

Use the pages below to understand what each source is used for, how it fits into the editing workflow, and how it connects to OpenDRIVE export.

---

## ► Topics

Topic	What it covers
<a href="#">GeoJSON</a>	GeoJSON as reference geometry and attributes: CRS, layers, validation.
<a href="#">Mapbox</a>	Mapbox satellite map layers for context and alignment in the editor.
<a href="#">Image</a>	Reference <b>raster imagery</b> (orthophotos, scans): georeferencing and use as a backdrop.
<a href="#">Sensor data</a>	Sensor-derived inputs used to position or refine the map (where supported).
<a href="#">LiDAR Point Cloud Data</a>	Import and align <code>.las</code> / <code>.laz</code> point cloud data in the workspace.
<a href="#">HERE to XODR</a>	End-to-end <b>HERE</b> → <b>OpenDRIVE</b> conversion pipeline: stages, inputs, and XODR output.

## ► See Also

- [Maps overview](#) – opening maps and projects before editing.
- [Road tool](#) – editing road networks after data is loaded.

# GeoJSON

---

**GeoJSON** is a common format for vector geodata (points, lines, polygons) with properties. In RepliMap, GeoJSON often appears as **reference geometry** or **imported layers** that you align with roads, lanes, and junctions, or merge into your map pipeline.

---

## ► Typical Uses

- **Road centrelines** or **boundaries** from GIS tools or open data.
  - **Area features** (zones, polygons) that constrain or annotate the map.
  - **Point features** (signs, poles, landmarks) as hints for placement or validation.
- 


## ► Coordinate Reference (CRS)

GeoJSON is usually **WGS 84** (longitude/latitude). Your project may use a **local** or **projected** CRS internally. When importing:

- RepliMap can convert **WGS 84** GeoJSON to **UTM** (after zone detection) or to **ENU** (using the first GeoJSON coordinate, or the loaded XODR georeference when available).
- If your GeoJSON is already in metre-based coordinates, select the matching CRS option (**ENU** or **UTM**) during import.
- Always choose the correct CRS when aligning to an existing map; a wrong CRS causes visible misalignment and editing errors.
- Preserve **accuracy** near the origin; very large coordinates may need a projected CRS for stable editing.

When you import GeoJSON, RepliMap opens **Specify the Coordinate Reference System (CRS)** so you can choose how coordinates are interpreted.

The dialog offers **WGS84 (EPSG:4326)** (latitude/longitude) with **Convert into: ENU** (local tangent plane from a computed centre) or **UTM** (zone-based projection). You can also pick **ENU** or **UTM** at the top level when your GeoJSON is already in metre-based coordinates in that system. The chosen CRS is stored in the **XODR** header when the map is saved.

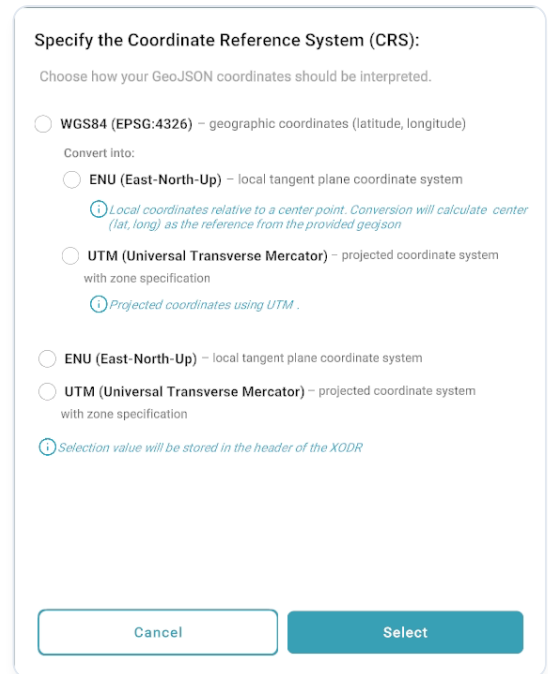


## ► Properties for Visualization

After CRS selection, RepliMap can open **Select GeoJSON Properties:** so you can choose which fields and values are used for drawing the GeoJSON on the canvas. That choice drives how features are grouped for **colouring:** for example, if your features use a property key such as `type`, you can assign a separate colour to each value (`way`, `road_border`, `traffic_sign`, `traffic_light`, and so on).

Use **Fields** to choose which property keys control styling. Under **Values**, RepliMap lists the distinct values for each selected key; only the combinations you include are drawn as separate categories, which keeps complex GeoJSON readable while you align and edit the map.

Keys with **more than 30** distinct values are not available for categorical colouring—high-cardinality fields such as `id` would assign a different colour to almost every feature, which is not useful for visual grouping.

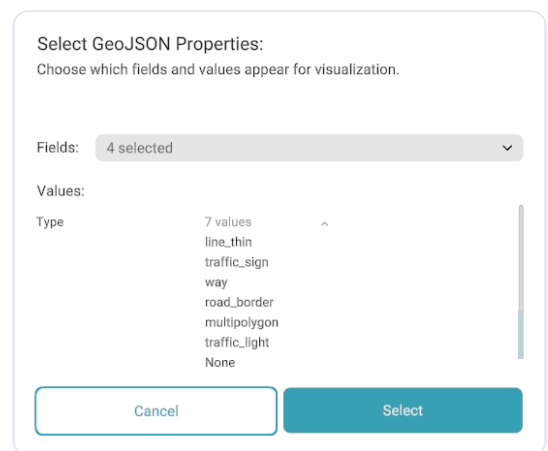

## ► GeoJSON Panel

After GeoJSON is loaded, the **GeoJSON** sidebar keeps reference data under control while you edit: feature styling and visibility, elevation workflows, signals, filtering, and reset actions. The panel follows this broad layout:

1. **GeoJSON features** – display and style features by property.
2. **Elevation** – add or compare elevation and manage deviations.
3. **Signals** – add signal-related data from GeoJSON where supported.
4. **Reset** – clear numeric offsets or related settings.



### ► GeoJSON Features

At the top, the **Field** dropdown chooses which GeoJSON property drives categories (for example `type`). For each distinct value under that field, the list shows a **colour swatch** (edit to change how that category is drawn on the canvas) and a **visibility** toggle so you can show or hide whole categories without removing data.

This matches the property keys and values you chose during import; use it when you want to tune colours or hide clutter while aligning the map.

## ► Elevation

Solid buttons support elevation workflows:

- **Add Elevation** – apply elevation from the GeoJSON or associated processing (behaviour depends on your data and import pipeline).
- **Compare Elevation** – compare against another elevation source or baseline.
- **Save Deviations** – store elevation adjustments you have made.
- **Clear Elevation Markers** – remove elevation markers from the view.

A numeric field with **Reset** clears or zeroes the associated offset or adjustment (for example after experiments).

## ► Signals

**Add Signals** uses GeoJSON properties to place or derive signals. Because feature properties differ between datasets, reliable automation often needs field mapping—see the **GeoJSON customizations** note at the end of this section.

## ► GeoJSON Filtering

Use the **GeoJSON filtering** master toggle to turn filtering on or off. When enabled, **Z Mean** and **Window** sliders adjust how features are filtered—typically refining which geometry is emphasised using vertical (Z) statistics. Exact behaviour depends on your data and version.

### GeoJSON customizations

GeoJSON has no universal property schema, so imports often need source-specific field mapping. Out-of-the-box automation may not support elevation or signal generation for every dataset. Contact us to define the right mapping for safe, reliable import.

## ► Validation

Before relying on GeoJSON in production:

- Check for **invalid geometries** (self-intersections, unclosed rings).
- Ensure **attributes** you need for automation are present in `properties`.


---

## ► Related

- [HERE to OpenDRIVE pipeline](#) – when GeoJSON is an intermediate or sidecar to OpenDRIVE export.
- [Sensor data](#) – combining vector reference with sensor-driven refinement.

# Mapbox

**Mapbox**-style layers (raster or vector tiles, or compatible services) give **visual context** while you edit: streets, labels, or custom styles. They help you **align** RepliMap geometry to the real world without replacing your authoritative HD map data.

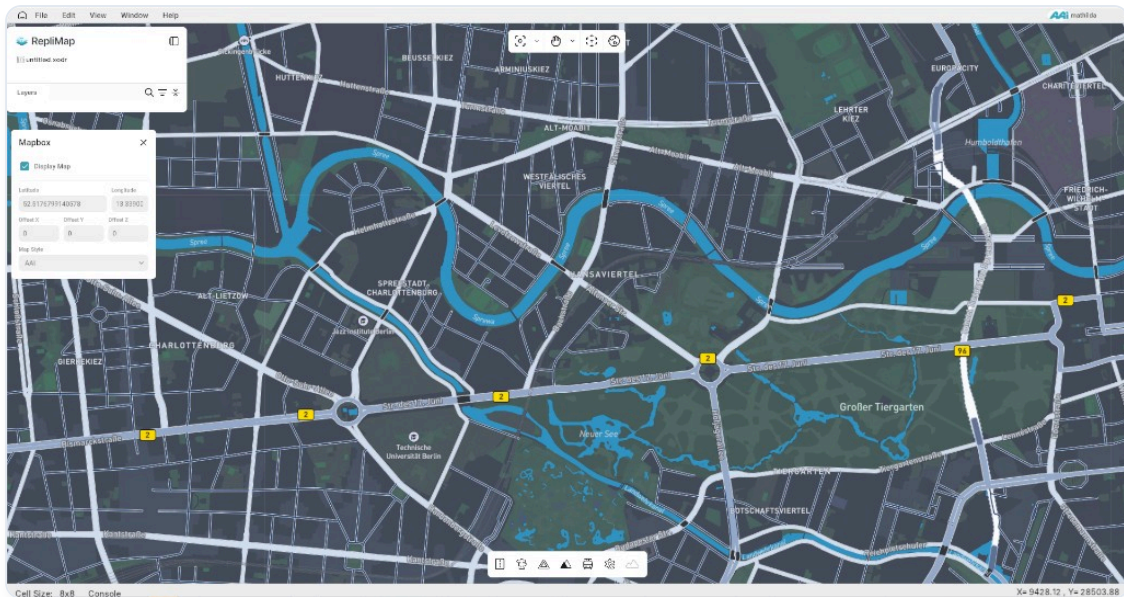

## ► Role in RepliMap

- **Basemap** under your editable layers.
- **Orientation** when georeferencing projects or checking drift.
- **Optional** dependency: many workflows work fully offline once imagery or tiles are cached—this depends on your deployment.


## ► Integration Notes

- Respect **terms of use** and **attribution** for any third-party tiles.
- **Performance**: tile zoom levels and cache size affect editor responsiveness on large scenes.
- **Projection**: Mapbox-style maps typically use **Web Mercator** (often **EPSG:3857**). Your project may use a local **ENU**, **UTM**, or another CRS, so the basemap may not match geometry pixel-perfect out of the box. Use the Mapbox **offsets** (below) to fine-tune alignment in **X** and **Y** when needed.

## ► Mapbox Panel

In the **Mapbox** panel you can:

- **Show or hide** the basemap. By default the map display is **disabled** until you turn it on.
- See **latitude** and **longitude** at the top of the panel. These describe the reference location for the Mapbox view (for example the centre used for the layer).

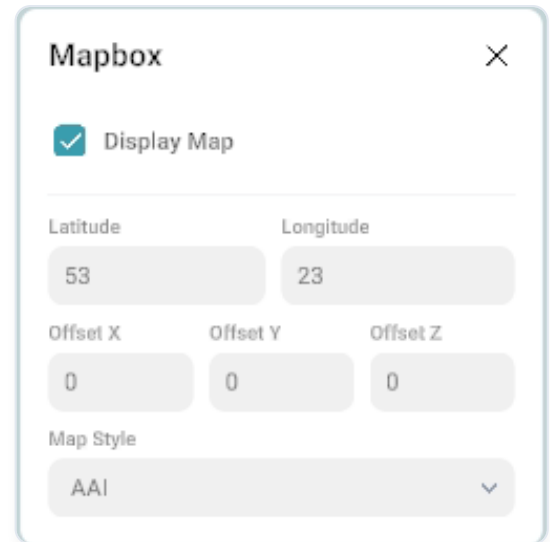

## ► Alignment Using Offsets

If the Mapbox layer does not line up with your road network or reference data, adjust **Offset X**, **Offset Y**, and **Offset Z**:

Offset	Effect
<b>Offset X</b>	Shifts the basemap <b>left or right</b> relative to your map.
<b>Offset Y</b>	Shifts the basemap <b>along the north–south axis</b> (forward/back in map terms).
<b>Offset Z</b>	Adjusts <b>vertical</b> placement (height): moves the basemap <b>up or down</b> for a better match to your scene.

Small iterative adjustments are usually easier than a single large correction, especially after changing zoom or pan.


## ► Related

- [Image](#) – static orthophotos vs tiled basemaps.
- [Main screen overview](#) – where map view and tools interact with the canvas.

# Reference Image

---

**Reference Image** is a raster image used as a georeferenced background layer in the editor. It helps users trace map features, verify alignment, and compare designed data with real-world visuals.

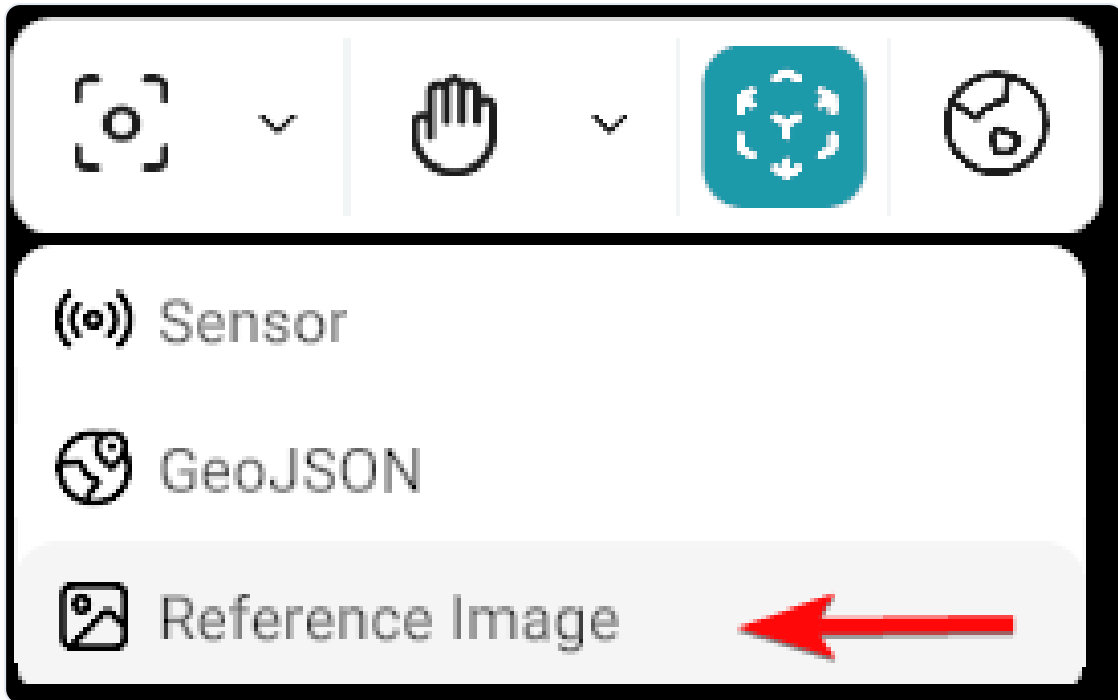

## ► Georeferencing

To accurately place a reference image in the map, the following parameters are used:


Parameter	Purpose
Position (X, Y, Z)	Defines the location of the image in map space.
Rotation (T)	Defines the orientation of the image.
Scale (X.SC, Y.SC)	Defines the scaling of the image in X and Y directions.

Proper georeferencing ensures correct alignment with map geometry. Incorrect values may lead to misalignment and distortion.

## ► Supported Formats

Reference images support the following file formats:

- **PNG**
- **JPEG**
- **BMP** *Currently Not Supported*
- **TIFF**

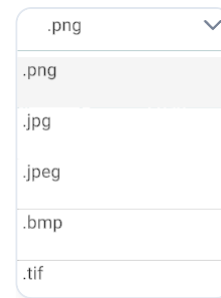

## ► How to Import a Reference Image

A reference image can be imported using either of the following methods:

- **Top-Center Toolbar** – Click the **Reference Image** button in the top-center toolbar.
- **File Menu** – Navigate to **File** → **Import** → **Reference Image**.


### Note

If no reference image is currently loaded, clicking the **Reference Image** button in the top-center toolbar will open the **Import Reference Image** window.

If a reference image is already loaded, clicking the same button will open the **Reference Image Panel** instead of the import window.

To import via the **File** menu:

1. Go to the **File** menu from the menu bar.
2. Click **Import** from the dropdown list.
3. Select **Reference Image** from the import options.

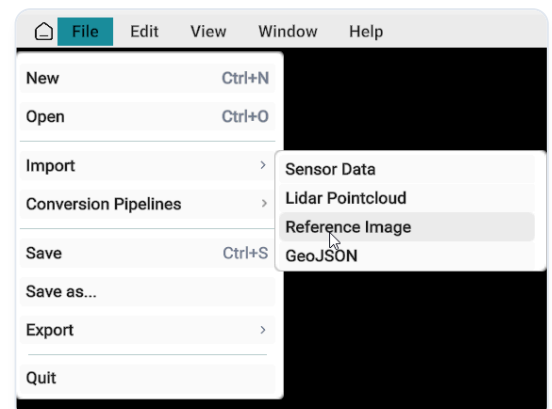

An import window will appear:

1. Select the location of the image file.

2. Choose the image format from the format dropdown (bottom-right side).
3. Click **Load**.


After loading, the **Reference Image Panel** will open.

## ► Reference Image Panel

The **Reference Image Panel** contains the following values:

- **X**
- **Y**
- **Z**
- **T**
- **X.Sc**
- **Y.Sc**

The panel displays transformation and scaling parameters of the imported image. Each parameter can be adjusted to control placement and alignment.

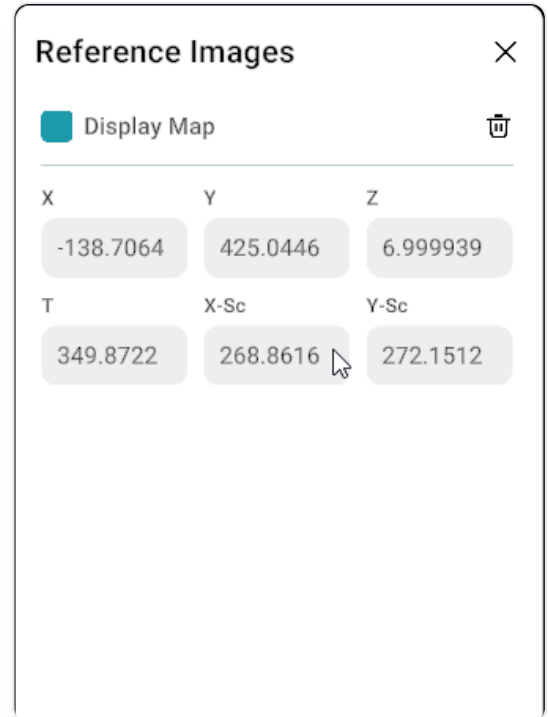

### ► Image Selection

- A **checkbox** is available before the image name in the panel.
- This checkbox is used to **highlight** the image in the map view.

### ► Image Modification & Size Adjustment

Users can adjust the reference image **width, height, scale, and position** using:

- **Reference Image Panel**
- **Gizmo tool**
- **Border handles** around the image

All methods provide direct control over image placement and sizing in the map.



### Warning

There is **no undo option** for reference image transformations. Any changes to size, position, or scaling must be done carefully.

### Note

Reference images are **not visible in Scenery View**.

## ► Related

- [Mapbox](#) – continuous tiled context vs single images.
- [GeoJSON](#) – vector overlays on top of imagery.
- [Main screen overview](#) – reference data panels and import from the File menu.

# Sensor Data

---

**Sensor data** (LiDAR point clouds, camera imagery, trajectory / pose) helps you **align** and **validate** the HD map against the physical world. RepliMap expects sensor datasets to follow the **folder layout and naming rules** below before import.

---

## ► Sensor Panel Overview



After sensor data is loaded, use the **Sensor** and **LiDAR configuration** areas to control what appears in the view:

1. **Ego trajectory** — show or hide the driven path (typically **red**) over the map or point cloud.
2. **Camera views** — show or hide camera-frame markers along the trajectory (**green** icons for each captured frame).
3. **LiDAR point cloud** — toggle the **.las** point cloud in the 3D view.

Use the **playback / frame** controls (slider and step buttons) to move through frames; the range matches the rows in the job's metadata CSV. In **LiDAR configuration** you can adjust **height cutoff**, **max tiles**, **sensor height** (see [Road height offset](#) below), elevation actions (**Add Elevation**, **Compare Elevation**), and related options so the point cloud lines up with the road model.

The layout groups **layer visibility** (trajectory, cameras, LiDAR) with **playback** and **LiDAR** settings. **Sensor height** should match your rig; it works together with [road height offset](#) so the point cloud matches the road model.

---

## ► Supported Folder Layout

To load sensor data into RepliMap, organise files under a **single root folder** you select in the application (below it is called `MyDataFolder` ).

```
MyDataFolder
├─ MyPointCloud.las           # REQUIRED - at least one .las file
├─ MyImagesFolder           # REQUIRED - all camera images and metadata
│  └─ MyImagesSubFolder     # REQUIRED - one subfolder per SphereCam job
│     └─ Job_xxxxx_Sphere.csv # REQUIRED - metadata for the job (one or more CSVs if
multiple objects)
│        └─ Job_xxxxx_Sphere_000001.jpg
│        └─ Job_xxxxx_Sphere_000002.jpg
│        └─ Job_xxxxx_Sphere_000003.jpg
│        └─ ...
```

### ► Mandatory Checklist

- At least one `*.las` file in the **root** folder.
- An **images** folder (name can match your app configuration).
- Inside that folder, a job subfolder.
- Inside the job subfolder:
- At least one **SphereCam-style CSV** ( `Job_<JobId>_Sphere.csv` ).
- All `Job_<JobId>_Sphere_*.jpg` images for that job.

#### Keep folder names stable after tiling

Do **not** rename the main sensor-data folder or child folders after tiles have been generated. Renaming can break references between tiled data, images, and metadata.

### ► Root Folder ( `MyDataFolder` )

- This is the directory you choose when loading the dataset.
- Must contain **at least one** LiDAR file in **LAS** format.
- Must contain the **images** folder; its name must match what you configure in the application.

### ► Point Cloud ( `.las` )

- Extension: `.las`
- **At least one** file is required in the root folder.

- If several LAS files are present, RepliMap loads all of them and breaks the data into tiles for processing and display.

### ▶ Images Folder ( MyImagesFolder )

Contains a single job subfolder for the **camera job** / capture session.

### ▶ Image Subfolder ( MyImagesSubFolder )

The job subfolder must include:

- One or more **CSV** files with camera metadata (**SphereCam CSV** is required for that workflow).
- **All** JPEG images belonging to that job.

Do **not** remove or rename individual images relative to the CSV: the application assumes **each CSV row** matches **one image file**, and that **every image** for the job is listed in the CSV.

---

## ▶ File Naming

### ▶ CSV Metadata

Pattern:

```
Job_<JobId>_Sphere.csv
```

Examples: Job\_01234\_Sphere.csv , Job\_20241015\_Sphere.csv

The `<JobId>` must be consistent with the image filenames in the same folder.

### ▶ Camera Images (SphereCam)

Pattern:

```
Job_<JobId>_Sphere_XXXXXX.jpg
```

Examples: Job\_01234\_Sphere\_000001.jpg , Job\_01234\_Sphere\_000002.jpg

The `<JobId>` in each image name must match the `<JobId>` in the CSV filename for that job.

---

## ▶ SphereCam CSV – General Rules

- **Delimiter:** semicolon ( ; ) by default (may be configurable in settings).
- **Decimal separator:** dot ( . ).
- **Header row:** not required; columns are read **by position**. Header-like rows that cannot be parsed numerically may be **skipped**.
- **Encoding:** **UTF-8** recommended.
- **Each row** describes **one image** and its pose.

## ► SphereCam CSV – Full 17-Field Row (Leica-Style Export)

Many SphereCam exports use **17 fields** per line. The index mapping below is **zero-based**:

#	Field	Description
0	<b>Image file name</b>	Must match the JPEG in the same folder (e.g. <code>Job_..._Sphere_00001.jpg</code> ).
1	<b>Time</b>	Timestamp.
2–4	<b>X, Y, Z</b>	Global camera position (survey / project coordinates).
5	<b>H</b>	Camera <b>height</b> (ellipsoidal or survey height, depending on export).
6–8	<b>OmegaDeg, PhiDeg, KappaDeg</b>	Orientation angles in <b>degrees</b> (rotations about X, Y, Z).
9–17	<b>R11–R33</b>	<b>3×3</b> rotation matrix for camera orientation, usually <b>row-major</b> order.

Example excerpt (two lines):

```
Job_20230313_1303_Track01_Sphere_00001.jpg;130466.7118700000;547873.1150645602;5250450.8538678614;406.9785299627;-106.7567456456;-33.7278665642;195.3433317765;-0.8606026865;-0.0630628213;-0.5053573949;-0.5089119455;0.0689277990;0.8580545380;-0.0192781671;0.9956264556;-0.0914128721
Job_20230313_1303_Track01_Sphere_00002.jpg;130467.3881470000;547874.4756802312;5250448.3003311902;407.0071701808;-106.5458193538;-28.6132552230;195.6047250798;-0.8985378447;-0.0621345425;-0.4344755923;-0.4382320551;0.0725814574;0.8959266699;-0.0241331221;0.9954251507;-0.0924465345
```

Some pipelines produce a **shorter** trajectory-oriented CSV (see below). Use the format that matches your export tool; RepliMap expects **consistent** column counts within a file.

## ► Trajectory CSV – Simplified Five-Column Layout

Some imports use a **minimal** semicolon-separated row with **at least five** fields:

Index	Role	Meaning
0	Image name	JPEG filename for the frame
1	Time	Timestamp for the sample
2	<b>E</b>	UTM <b>easting</b> (or X in the projected frame)
3	<b>N</b>	UTM <b>northing</b> (or Y in the projected frame)
4	<b>U</b>	Elevation / “up” coordinate

Processing behaviour:

- **Zone-encoded easting:** If column **E** is  $\geq 1\,000\,000$ , it may be interpreted as  $\text{zone} \times 1\,000\,000 + \text{easting}$ ; the zone and true easting are derived from that value.
- **Georeferencing:** The **first** row’s UTM **E/N** can seed lat/long alignment for the trajectory.
- **Road height offset:** Column **U** may be adjusted by `roadHeightOffset` (default often **-2.15 m**) so displayed height follows **road level** rather than the raw sensor height. Align **Sensor height** in the LiDAR panel with your vehicle / rig.

### ► Road Height and Sensor Height

The **Sensor height** value in the LiDAR configuration panel should reflect your sensor mounting height above the road **after** applying any `roadHeightOffset` logic used in your pipeline—so the point cloud and trajectory stay consistent with the OpenDRIVE surface you edit.

---

## ► Typical Roles

- **Trajectory / pose** — align road geometry to driven paths or logged poses.
  - **Ego-centric perception** — cross-check lane markings, boundaries, or objects against map content.
  - **Fusion** — combine multiple passes or sensors to reduce noise before export.
- 

## ► Data Handling

- Expect **calibration** metadata (sensor extrinsics, time sync); incorrect calibration misaligns features.
- **Privacy / compliance**: strip identifiers if logs leave controlled environments.

### Try public sample data

Want to explore what sensor data looks like in RepliMap?

Use the public **Berlin HD map sample** on GitHub: [automotive-ai/berlin-hd-map-sample](https://github.com/automotive-ai/berlin-hd-map-sample).

It includes OpenDRIVE map content and drive-data assets you can load to test sensor-data workflows in the tool.

**Important:** follow the repository license terms. The sample is **not for commercial use** and must not be reused beyond the allowed license conditions.

## ► Related


- [GeoJSON](#) — vector layers derived from or compared to sensor outputs.
- [LiDAR Point Cloud Data](#) — standalone `.las` / `.laz` import workflows.
- [HERE to XODR](#) — pipeline outputs may incorporate sensor-corrected geometry.

# LiDAR Point Cloud Data

**LiDAR point cloud data** is a 3D dataset captured using a **LiDAR** (Light Detection and Ranging) sensor. It represents real-world surfaces as a dense collection of spatial points.


Each point may include:

- **X, Y, Z coordinates** (3D position)
- **Intensity** (surface reflectivity)
- **Optional classification** (ground, building, vegetation, objects)

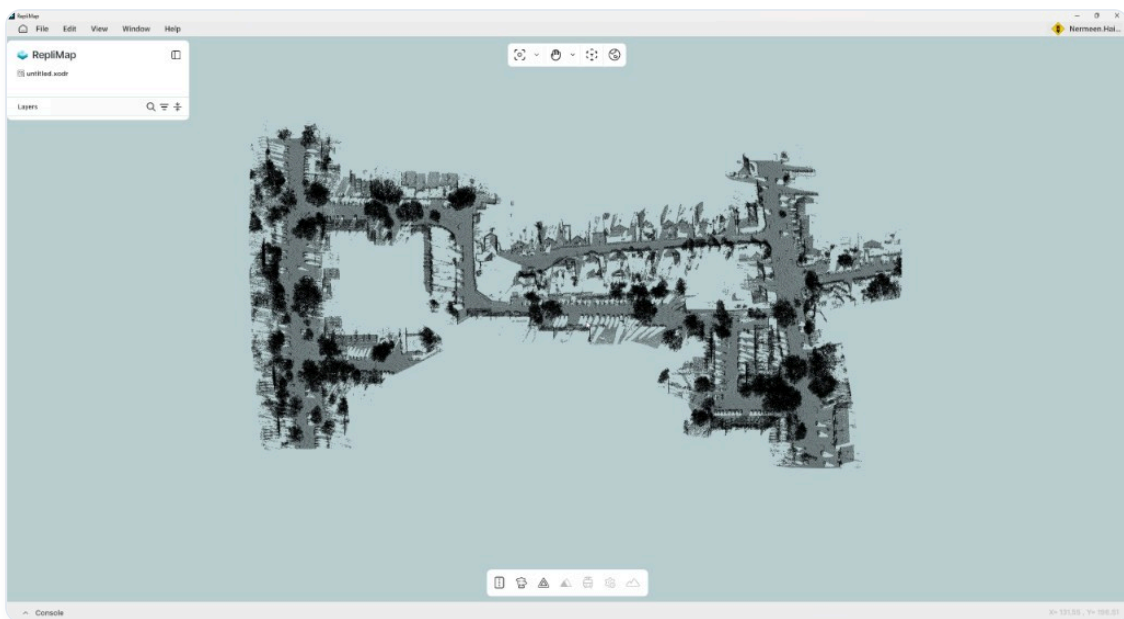


## ► How to Import LiDAR Point Cloud Data

1. Go to the **File** menu from the menu bar.
2. Click **Import** from the dropdown list.
3. Select **LiDAR Point Cloud** from the import options.

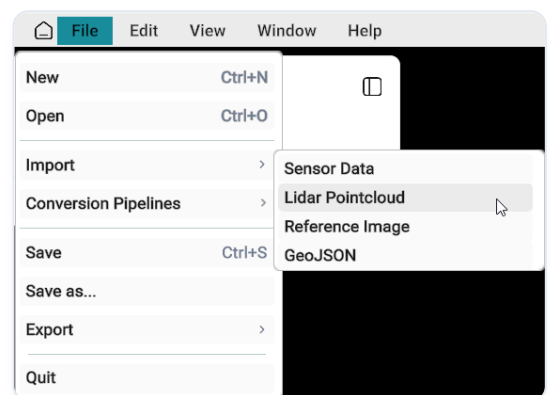

An import window will appear:

1. Select the location of the `.las` file.
2. Choose the file format (`.las` / `.laz`) from the format dropdown (bottom-right side).
3. Click **Load**.

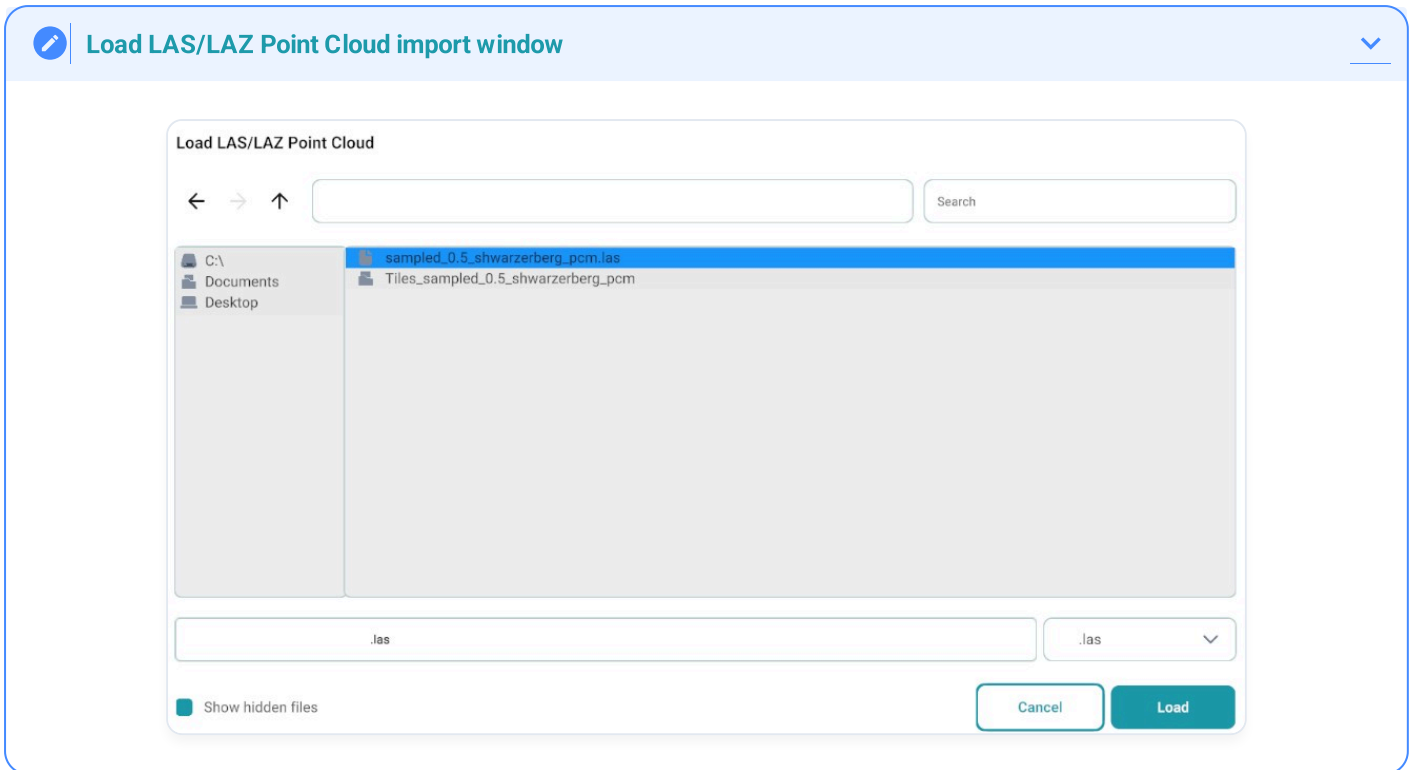

After loading, the LiDAR point cloud will open in the workspace.

## ► Warnings

### ⚠ Warning

- LiDAR point cloud may **not be visible in Translucent View**.
- Use **Light Theme** for proper visibility of point data.
- Do **not interrupt** the import process while data is being loaded.

## ► Recommended Workflow (with Other Reference Data)

If importing multiple datasets together, follow this order:

1. Load existing map (if available)
2. Import **LiDAR Point Cloud Data**
3. Import **GeoJSON** Data
4. Import **GeoTIFF (TIF) Reference Image**

All datasets will align correctly only if they share the **same coordinate system**.

---

## ► Recommended Verification

### Note

After import:

- Verify LiDAR point cloud aligns with the **road network**
  - Ensure consistency with **GeoJSON** features
  - Confirm correct spatial relationship with **reference imagery**
  - Validate overall layer overlap before editing
- 

## ► Related

- [Sensor data](#) – camera imagery, trajectory, and combined sensor folder workflows.
- [GeoJSON](#) – vector reference layers aligned with point cloud data.
- [Reference Image](#) – raster backdrop for spatial verification.
- [HERE to OpenDRIVE \(XODR\)](#) – conversion pipelines after reference data is loaded.

# HERE to OpenDRIVE (XODR)

The **HERE to XODR** pipeline converts HERE source data into **ASAM OpenDRIVE** ( `.xodr` ) inside RepliMap.

Current pipeline scope:

- Supports **HERE HD Live Maps** input.
- Converts **road geometry** and **traffic signs** layers (including elevation handling in the generated road model).
- Is designed to be extendable to additional layers in future releases.



## ⚠ Credentials and coverage required

RepliMap does **not** include default HERE licenses or API keys.

You must provide valid HERE credentials and ensure your account has area coverage for the region you want to convert.

## ► Before You Run Conversion

Prepare the following:

1. **HERE credentials** (API/user/client/access keys required by your deployment).
2. **Area definition in GeoJSON** for the region to convert.
3. **Output folder** where RepliMap should write the generated map files.

You can create the area polygon quickly with [geojson.io](https://geojson.io) and save it as a `.geojson` file.


---

## ► How It Works

In the conversion flow:

1. Enter your HERE credentials.
2. Select the input `.geojson` area file.
3. Select the output folder for converted map data.
4. Start conversion.

RepliMap then fetches HERE data for the selected bounds, runs conversion, and applies internal geometry optimization/fixes.

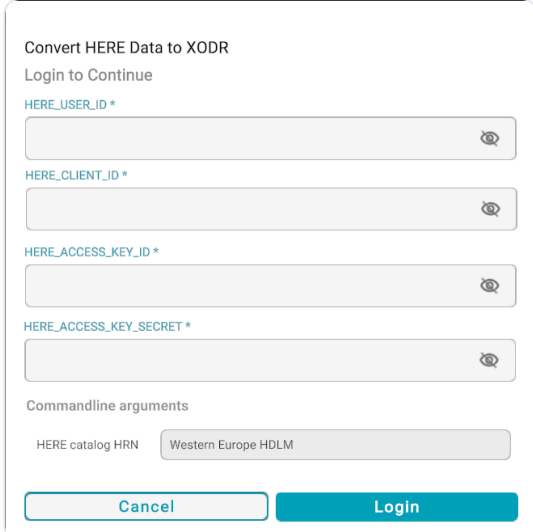

The screenshot shows a web form titled "Convert HERE Data to XODR" with the instruction "Login to Continue". It contains four input fields for HERE credentials: "HERE\_USER\_ID \*", "HERE\_CLIENT\_ID \*", "HERE\_ACCESS\_KEY\_ID \*", and "HERE\_ACCESS\_KEY\_SECRET \*". Each field has a small eye icon on the right. Below these is a section for "Commandline arguments" with a label "HERE catalog HRN" and a dropdown menu showing "Western Europe HDLM". At the bottom are two buttons: "Cancel" and "Login".

---

## ► Conversion Behavior and Quality Notes

- Conversion can take time because it includes **data fetch**, **conversion**, and **post-processing**.
- The map output on the main canvas is **fully automated** (no manual intervention required during generation).
- Generated maps may still contain minor imperfections (for example small mesh overlaps or local gaps).
- The pipeline aims for **continuous drivable geometry**, but some errors are expected depending on source data and bounds.


After conversion, the map is loaded directly into the canvas. You can then use RepliMap tools to review, fix, and further enhance roads, signs, and other elements.

---

## ► Here-to-ODR Console — Log Export

The **Here-to-ODR conversion console** provides a dedicated logging panel that records the complete conversion workflow. It helps users analyze processing behavior, detect lagging issues, and review system activity during conversion.

Users can export the log file using the **Right Arrow** icon available in the console panel. This generates a text-based log file, and the user can select the desired location for saving it.

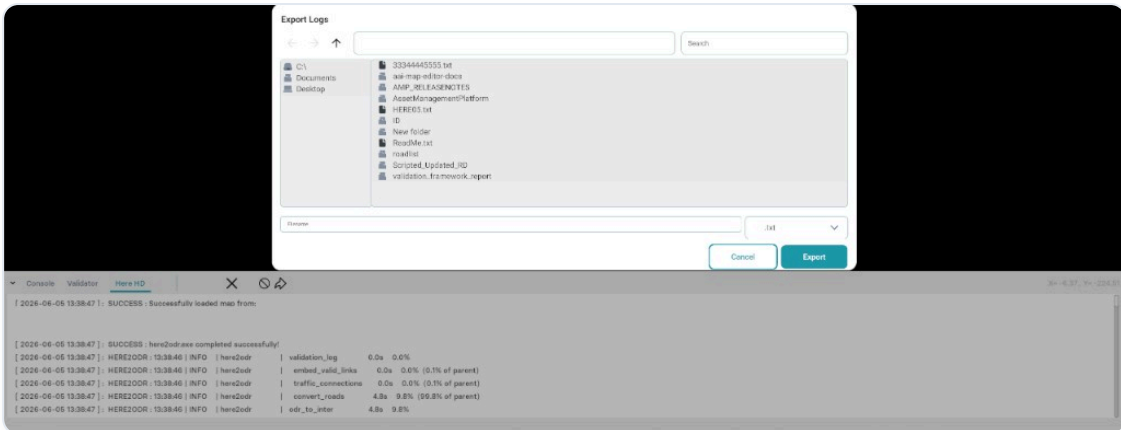

The export process also displays:

- **Total processing time** consumed during conversion
- **Export completion status**

### ► Log Content Included in Export

The exported log file contains the following key sections:

Logs	Description
<b>Pipeline Logs</b>	Records step-by-step execution of the conversion pipeline, showing the processing flow and intermediate stages.
<b>Profile Report Logs</b>	Contains detailed profile-level information, including execution tracking and reference to the profile report path. The related JSON files can be accessed from this path.
<b>Warning Logs</b>	Displays system warnings generated during conversion, helping identify potential issues or irregular behavior.

### ► Additional Export Information

Includes supplementary details such as:

- Profile report path stored in a reference text file within the exported log, used to locate detailed JSON-based logs.
- Authentication credentials status shown at the end of the exported log file for verification purposes.

### ► File Handling & Naming Behavior

Users must use a **unique GeoJSON file name** during conversion.

If a file with the same name already exists in the selected export folder:

- The system will automatically **overwrite** the existing file.
- It is recommended to avoid duplicate naming to prevent accidental data replacement.

#### Notes

- Log export is intended for **debugging, validation, and performance analysis**.
- It is recommended to review logs when:
  - Conversion is slow or lagging
  - Unexpected warnings or issues occur
- Always verify the **export location** before saving the file.
- Maintain **unique file names** for each conversion to ensure data integrity.

### ► Related

- [Data sources overview](#) – where the pipeline sits in the reference-data workflow.
- [GeoJSON](#) – preparing area bounds for conversion.
- [Road tool](#) – refining the generated map after import.

# 4 Road Tool

---

# Road Tool

Use the **Road** workflow to create, edit, and manage drivable road networks. The workflow allows you to place roads, adjust anchors and connections, split geometry where needed, and shape lanes with offsets, sections, widths, markings, and height controls.



## ► Road Tool Active Interface.

While road editing is active, the UI combines:

Component	Description
Canvas	Main area for creating and editing roads. Road elements can be selected and lanes/markings viewed in context. <b>2D</b> view is used for layout work, while <b>3D</b> view is used for visual checking.
Road / Lane Panel	Displays and allows editing of properties for the selected road or lane, such as size, structure, layout, and markings.
Hierarchy View	Helps locate and navigate roads by ID, especially useful in large projects. See the <a href="#">Hierarchy panel</a> .

## ► Selection of Road and Lane

Clicking the **same place** on a road steps through **what is selected**:

Clicks	Selection
Single click	Road

Clicks	Selection
Double-click	Lane section
Triple-click	Lane

**⚠ Important – selection and available tools**

**Tools** in the Road tool group apply according to that selection. If the wrong level is active, an action may be unavailable—for example you generally cannot use **lane height** while only a **road** is selected; switch to a **lane** (triple-click) first.

The **side panels** also change with the selection: **road**, **lane section**, and **lane** each open their own property panel (titles and fields differ by level).

## ► Road Tool Categories


Topic	Description
Create Road	<b>Adding and deleting</b> roads; default lanes for new roads.
Road anchor	<b>Anchors</b> that pin geometry, direction, or continuity along a road.
Connecting road	Dedicated <b>connecting road</b> workflow ( <b>coming soon</b> ); until then use <b>lane slots</b> on <b>Create Road</b> .
Cut road	<b>Splitting</b> the road geometry.
Lane offset	<b>Lateral offset</b> of the lane centre relative to the reference line.
Lanes	<b>Add / delete</b> lanes and lane-level editing workflow.
Width tags	<b>Width along the road</b> : canvas anchors, <b>s</b> -based rules, effect on neighbouring lanes.

Topic	Description
<a href="#">Lane sections</a>	<b>Boundaries</b> along the road; <b>add</b> , <b>move</b> , or <b>delete</b> section breaks on the canvas.
<a href="#">Lane marking</a>	<b>Markings</b> (lines, colours, meaning) on the pavement.
<a href="#">Lane height</a>	<b>Vertical</b> lane / road surface height and transitions.
<a href="#">Road Properties Panel</a>	Identification, road and lane settings, elevation, display options, and advance tools for the selected road.
<a href="#">Lane Properties Panel</a>	Identification, lane configuration, lane properties, and advanced tools for the selected lane.

## ► Related

- [Data sources & conversion](#) – importing context before you edit roads.
- [Main screen overview](#) – toolbars used with road editing.



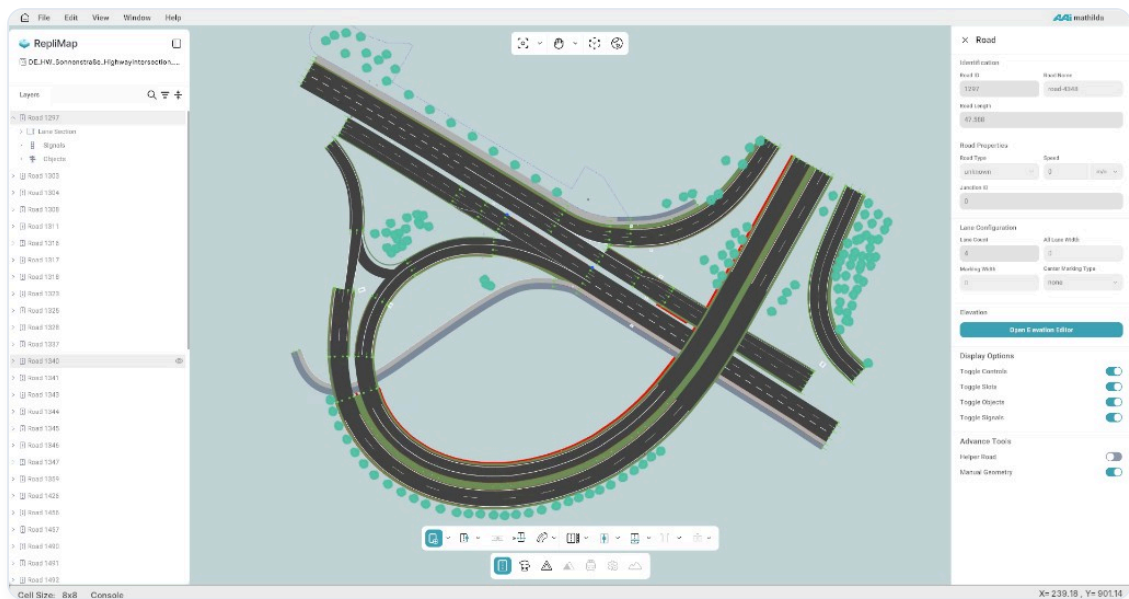

## ► Default Lanes

A newly created road is configured by default as a **two-lane** road. The lanes are placed on the **right** side of the reference line when viewed in the direction of travel.

In **ASAM OpenDRIVE** terminology, these lanes use lane positions **-1** and **-2**, arranged successively outward from the reference line.

For lane-level modifications such as lane order, width, and lane links, use the **Lanes** workflow and the **Lanes** tools available in the **bottom toolbar**.

## ► Junctions with Lane Slots

Dedicated connecting road segment tool is not available in RepliMap yet (Connecting Road tool).

Until this feature is introduced, junctions are created using the standard Road workflow by connecting lanes through lane slots, instead of using a separate connecting segment

### ► Steps to Create a Junction

1. Place and align the incoming and outgoing roads so their ends meet at the junction point.
2. Click the **lane slot** on an incoming lane to start the connection.
3. Click the **lane slot** on the outgoing lane to complete the connection.
4. Repeat for all lane pairs to complete the junction.

5. Check all connections before finishing.

If lane slots are not visible, turn on **Toggle Slots** in the [Road Properties panel](#) under **Display Options**.

---

## ► Related

- [Road tool overview · Road Properties Panel](#)
- [Road anchor](#)

# Road Anchor

**Road anchors** are fixed points placed along a road's reference line.

They keep specific locations stable by controlling position (and sometimes direction), even when you edit nearby parts of the road. This helps preserve smooth connections or intentional shapes while you modify the road network.



## ⚠ Reference line drives the map

In **ASAM OpenDRIVE (.xodr)**, geometry and lane topology are anchored to the **reference line**. Moving **anchors** reshapes that line, so **almost everything tied to the road**—lanes, lane sections, links, and related content—moves or updates with it. Adjust anchors deliberately and re-check lanes and junctions after large edits.

## ► Add / Delete Anchor

Action	Description
Select a Road	<b>Left-click</b> on the road to select it for editing. When a road is selected, the <b>Anchor Tool</b> becomes active by default.
Add an Anchor	With the <b>Anchor Tool</b> active and the road selected, <b>left-click</b> along the road at the desired location to add a new anchor point.
Move an Anchor	<b>Left-click</b> an anchor handle to select it, then drag it to a new position. The reference line and all dependent geometry update automatically in real time.

Action	Description
Delete an Anchor	Open the <b>dropdown</b> menu next to the <b>Anchor Tool</b> in the <b>Road Editing</b> toolbar and select <b>Delete Anchor</b> . Then, <b>left-click</b> on the desired anchor you want to delete.

## ► When to Use Anchors

- **Stabilize** a bend or straight segment while moving nearby control points.
- **Pin** the start or end of a road to a **junction** or **connecting road**.
- **Constrain** edits so imported geometry does not drift.

### Good Practice

- Use the minimum number of anchors needed for your curvature—too many make edits brittle.
- After moving anchors, verify lane offsets and lane sections still make sense along the whole road.

## ► Related

- [Create Road](#) · [Connecting road](#) · [Cut road](#)

# Connecting Road (Currently Not Available)

## Coming soon

A dedicated **connecting road** tool and workflow in RepliMap are **not available yet**—documentation for that feature will land here when it ships.

A **connecting road** is the road inside a **junction** that joins an **incoming** road to an **outgoing** road. It provides a continuous path for vehicles to travel smoothly through the junction while keeping the road network properly connected.



For Current workflow go to [Create Road – Junctions with lane slots](#).

## ► Related

- [Create Road · Junctions with lane slots · Lanes · Lane sections](#)

# Cut Road

**Cut Road** (or **Split Road**) is used to divide a road into multiple sections at a selected point. This helps you modify different parts of the road independently, insert junctions, change road properties for specific segments, or remove unnecessary sections from the road network.



## ► Road Cut / Split Editing

Action	Description
Activate Cut Road Tool	Select the <b>Cut Road Tool</b> from the <b>Road Tool</b> group.
Choose Split Position	Left-click on the road reference line at the position where you want to split the road.
Edit Split Roads	After splitting, two separate road elements are created in the hierarchy. Select each road individually to adjust anchors, lane sections, or other properties independently.
Check the Split Area	Zoom in near the split position to ensure there are no gaps or overlapping zero-length segments between the two road sections.

## ► When to Use Split Roads

- **Insert a Junction** — Split a long road to create space for a junction between road sections.

- **Change Road Properties** — Separate road segments that require different lane counts, speed limits, or other settings.
  - **Remove Unnecessary Sections** — Cut out short or unwanted road segments from the drivable network.
- 

## ► After a Cut

- Re-check **lane sections** and **width tags** on each new segment.
- Update **connecting roads** and **anchors** so there are no gaps at the cut position.

### Topology

A bad cut can leave **zero-length** segments or **broken** predecessor/successor links. Inspect the junction graph after editing.


---

## ► Related

- [Create Road](#) · [Road anchor](#) · [Connecting road](#)

# Lane Offset

**Lane offset** is the **lateral distance** between the road's **reference line** (often the centre line or a baseline) and the **centre** of a given **lane**. Offsets define how lanes sit side by side without overlap.

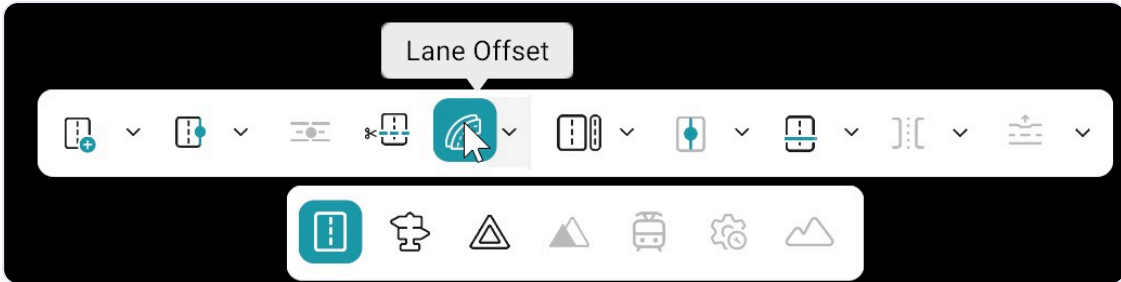

## ► Add / Delete Lane Offset Anchor

Action	Description
Add lane offset anchor	Click on the Lane Offset tool ( <b>Add Lane Offset Anchor mode is enabled by default</b> ), then left-click on the red reference line to add a new lane-offset anchor
Delete lane offset anchor	Click the dropdown menu next to the Lane Offset tool, then select <b>"Delete Lane Offset"</b> option and left-click on anchor to remove
Move lane offset anchor	Select an anchor, drag an anchor point to move it <b>along the road or across the road</b>

### ⚠ Rules

- Lane-offset anchors modify only lateral geometry; the reference line remains fixed.
- Start and end lane-offset anchors cannot be deleted. Only user-added intermediate anchors can be removed.

## ► When to use Lane Offset

- Use lane offset when you need to move lanes slightly left or right without changing the main road path (reference line).
- Use it to fine-tune or correct lane alignment across the road.
- Make small, step-by-step adjustments to keep the road shape stable and predictable.

#### Warning

- Large or sudden offset changes between adjacent anchors may cause lane distortion or overlaps.

#### Good Practice


- After moving purple offset anchors, check neighbouring lanes for width and marking rules.
- Offset interacts with lane width and markings. Adjust them together when redesigning a cross-section.
- After large offset edits, re-check junction connectivity, as lane links may need updating.
- Always verify adjacent lane alignment after edits to ensure correct geometry.

## ► Related

- [Road anchor](#)

# Lanes

A lane is a single drivable strip within a road, defined relative to the road's center line (left or right in OpenDRIVE). Each lane has an ID, type, markings, and width, and it connects to predecessor and successor lanes to define how traffic flows through the network.

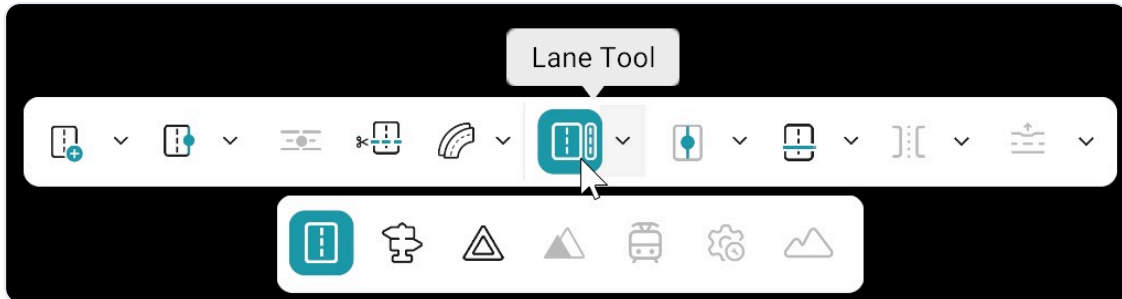

## ► Add / Delete Lanes

Use the Add/Delete Lane option in the Road Tool Bar to add or delete lanes. When the Lane tool is selected, Add Lane is enabled by default.

Action	Description
<b>Add lane</b>	<ol style="list-style-type: none"><li>1. Select a road from the canvas (Lane Tool will become active).</li><li>2. Select the Lane Tool (Add Lane is active by default).</li><li>3. Click on either the left or right side of the reference line to add a lane.</li><li>4. The lane will be added to the road's lane structure.</li></ol>
<b>Delete lane</b>	<ol style="list-style-type: none"><li>1. Select a road from the canvas (Lane Tool will become active).</li><li>2. Select the Lane Tool.</li><li>3. Open the dropdown and choose <b>Delete lane</b>.</li><li>4. Left-click on the lane you want to remove.</li></ol>

### Warning

This updates OpenDRIVE lane indices and may break junction links, so connectivity should be rechecked after deletion.

## ► Lane Direction and Rules

Category	Description
Direction of Travel	<b>Arrows</b> appear on the lane when a road is selected and hovered, showing the Lane's direction relative to the reference line.
Lane Indexing	<b>Lane indexing follows OpenDRIVE conventions:</b> <ul style="list-style-type: none"><li>• <b>Negative</b> indices represent lanes to the left of the reference line.</li><li>• <b>Positive</b> indices represent lanes to the right of the reference line.</li><li>• <b>Index 0</b> represents the reference line itself.</li></ul>
<b>Restricted / Forbidden Lanes</b>	Any forbidden or restricted lanes should be clearly documented in the scenario description, not just visually represented in the drawing.

### Relationships

- Each lane is part of a **lane section** along the road.
- **Lane markings** define and separate individual lanes.
- **Lane offset** and **width tags** together describe how lane shape changes along the road.

## ► Related

- [Width tags](#) · [Lane sections](#) · [Lane offset](#)
- [Lane marking](#) · [Lane height](#) · [Lane Properties Panel](#)


# Width Tags

**Width tags** describe how **lane width** varies with **distance along the road** (station **s** in **OpenDRIVE** terms): **tapers**, **widening**, and **narrowing**. In the editor you often control this with **width anchors** on the canvas while a **lane** is selected.



## ► Canvas: Width Anchors and Lane Width

With a **lane** selected (see [Lanes](#)), use **width anchors** on the canvas to align how **width** is distributed along the road.

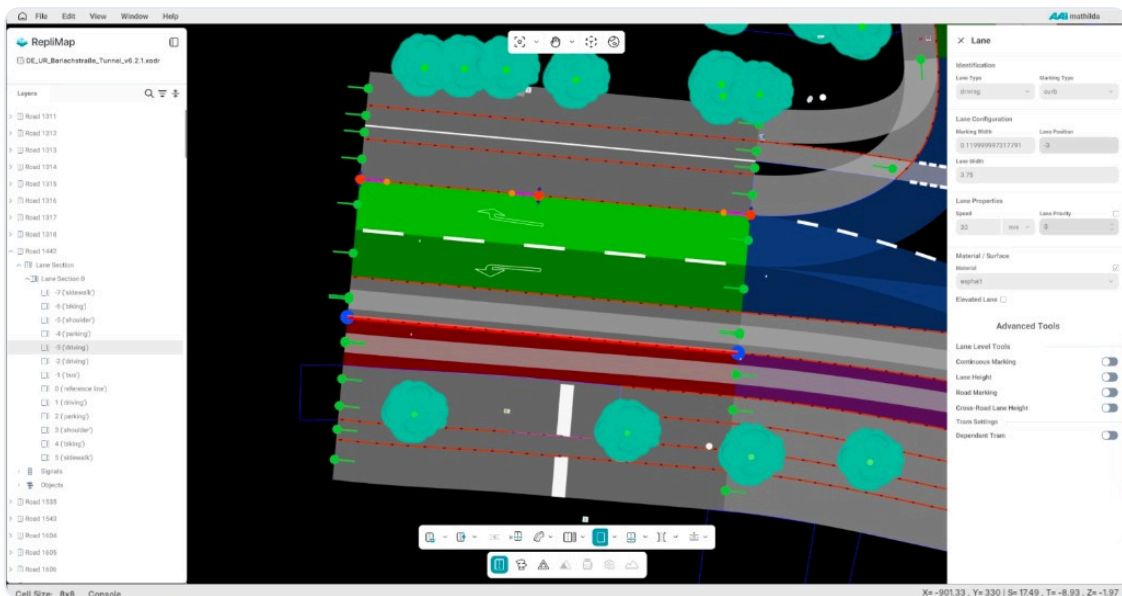

- **Add and delete width anchors** — **Add** anchors where the cross-section should change along **s**; **remove** anchors you no longer need. Use **Delete anchor** from the **dropdown** next to the tool in the **Road editing bar**, same pattern as other anchor tools.
- **Curvature / path handles** — Use the **large circle** on an anchor to **move its position**; use the **small circle** (heading control) to adjust **curvature / heading** at that station.

- **Orthogonal to the reference line** – Width edits follow **OpenDRIVE**: lateral offsets are **perpendicular** to the road **reference line**, not arbitrary screen directions.

### ▶ How Width Changes Affect Neighbouring Lanes

Lane widths are defined **in order** outward from the reference line. Changing the width of an **inner** lane (for example **1** or **-1**) shifts **outer** lanes (**2**, **-2**, ...), because each outer boundary builds on the previous lane. Expect neighbouring lanes to move on the canvas when you edit widths near the centre.

---

## ▶ Road Panel and Tables

- Width rules are often shown as values keyed by **distance along the reference** (station **s**), per **lane** or road, depending on your UI.
  - Values you set in the **Lane** panel's **Lane width** field and related controls stay consistent with **width-anchor** edits on the canvas when the product links them—see [Lane Properties panel](#) for panel fields.
  - Combine width tags with **lane sections** so transitions fall where your scenario needs them.
- 

## ▶ Usage

- Attach width information to **lane** geometry.
  - Keep consistency with [Lane offset](#) so the total cross-section stays plausible.
- 

## ▶ Export

OpenDRIVE represents width through **width** entries along lanes; ensure stations (**s**) align with what you author in the editor before export.

---


## ▶ Related

- [Lanes](#) · [Lane sections](#) · [Lane offset](#)

# Lane Sections

---

**Lane sections** partition a lane or road along its length into **stretches** where properties—**width, type, marking, height**—stay **uniform** or follow a defined rule. They are essential for **tapers, turn pockets, and junction approaches**.

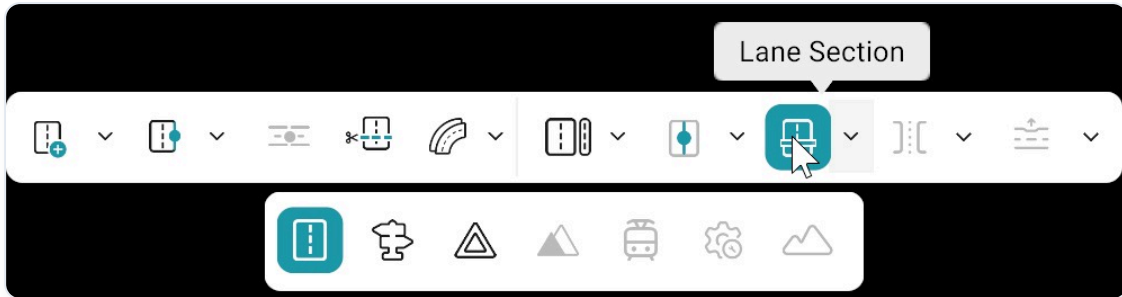

## ► Lane Section Tool on the Canvas

Select the **road** on the canvas, then turn on the **Lane Section** tool from the **Road editing bar** (above the canvas, in the **Road** tool group). The screenshot in the next section shows a **lane section boundary** on the road and the **Lane Section** sidebar.


- **Add a lane section** — **Left-click** on the **selected road** on the canvas to place a new section boundary.
- **Move a lane section** — **Drag** the **handle** on the section boundary (the divider across the road) to slide it along the **length** of the road.
- **Delete a lane section** — Use **Delete lane section** from the **dropdown** next to the **Lane Section** tool in the **Road editing bar** (same idea as **Delete anchor** on other road tools). With delete mode active, **click** the **lane section boundary** on the canvas to remove it.

When you **Cut road**, review lane sections on **both** new segments.

---

## ► Lane Section Panel

When a **lane section** is selected (often **double-click** the road to select **lane section** level—see [selection](#)), the **Lane Section** sidebar lists identifiers for that section. The image shows the canvas with a section boundary and the panel together.

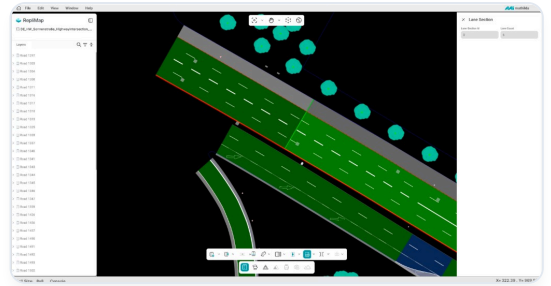

Field	Purpose
<b>Lane section ID</b>	Identifier for this section along the road (often <b>0, 1, ...</b> along the reference).
<b>Lane count</b>	Number of lanes covered by this section on that road.

Boundaries should sit at **clear** stations—often aligned to markings or geometry. After moving or deleting sections, update **Width tags** and **Lane marking** if the cross-section or paint rules change.

## ► Why Sections Matter

- Road rules often change **before** and **after** a junction—sections capture that.
- Simulation and AD tools rely on **consistent** lane properties within a section.

## ► Related


- [Lanes](#) · [Width tags](#) · [Lane marking](#)
- [Cut road](#)

# Lane Marking

---

The **Lane marking tool** is used to define and customise **lane markings** along the **selected road lane**. You can apply different marking **styles, colours, widths, and patterns** on the same lane according to road design requirements.

On the **canvas**, lane markings are driven by **anchors** placed along the selected lane. Each anchor marks where a lane marking configuration **starts** or **changes**.

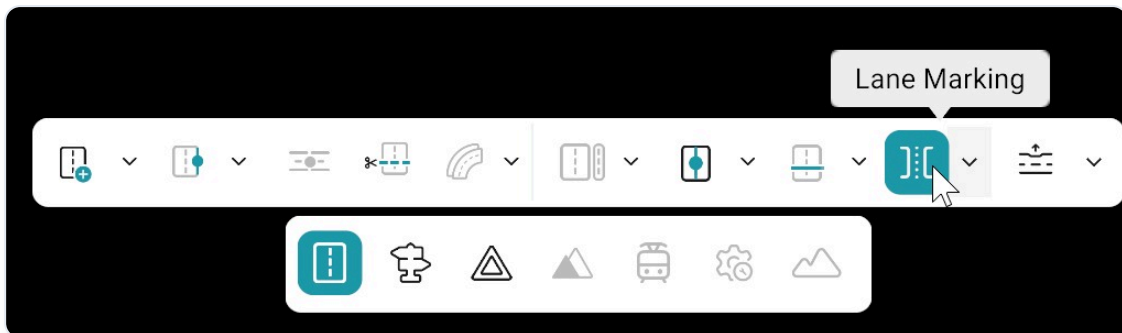

## ► Lane Marking Anchors

Lane marking anchors sit **on the lane** and define lane marking **regions** and **transitions**.

- **Several anchors** can exist on the same lane.
- **Different styles** can apply **between** anchors (segment by segment).
- Anchors give **precise control** over how markings change along the road.
- You can **select** an anchor and **drag** it along the road to move its position.

## ► Enable the Lane Marking Tool

You can turn on lane marking in either of the following ways.

### ► 1. From the Lane Property Panel

1. Open the **Lane property** panel (with the target **lane** selected).
2. Go to the **Advanced tool** section.
3. Enable the **Road Marking** toggle.

4. **Add an anchor** at the desired position on the lane.

## ► 2. From the Road Toolbar

1. **Triple-click** the target lane on the canvas so **lane** selection is active (see [selection on the canvas](#)).
  2. The **Lane marking** icon becomes available in the **Road toolbar**.
  3. Select the **Lane marking** tool.
  4. Click the **dropdown** arrow next to the tool icon. Two options appear:
    - **Add lane marking**
    - **Delete lane marking**
  5. Choose **Add lane marking**.
  6. **Click** on the lane where you want to place a lane marking **anchor**.
- 

## ► Delete a Lane Marking Anchor

Anchors can be removed from the **Road toolbar**.

1. Select the **Lane marking** tool in the **Road toolbar**.
  2. Open the **dropdown** next to the tool icon.
  3. Choose **Delete lane marking**.
  4. **Click** the lane marking anchor you want to remove.
- 

## ► Open the Lane Marking Panel

How you open the panel depends on **how** you activated the Lane marking tool.

Activation	Action
From the <b>Lane property</b> panel	<b>Left-click</b> the anchor to open the <b>Lane marking</b> panel.
From the <b>Road toolbar</b>	<b>Right-click</b> the anchor to open the <b>Lane marking</b> panel.

---

## ► Lane Marking Panel Attributes

The **Lane marking** panel exposes the following properties.

Property	Description
Lane marking type	Lane marking style.
Lane marking colour	Colour of the lane marking.
Lane width	Width of the lane marking.
Lane height	Height / elevation of the lane marking.

## ► Define Line Option

Enable the **Define line** toggle to build **custom** lane marking patterns—for example **dashed** or **segmented** lines.

When **Define line** is on, these extra properties appear:

Property	Description
Length	Length of each lane marking segment.
Space	Gap between lane marking segments.
S offset	Start offset of the marking pattern along the lane ( <b>s</b> -based position).

## ► Scope and Quality

- Markings cover **longitudinal** lines along lanes (solid, dashed, double, custom dash via **Define line**) and fit **lane sections** and **junction** context.

- Prefer markings that match **local highway rules** for your scenario; misalignment with **lane width** or topology can show up in review and in simulators.
- 

## ► Related

- [Lanes](#) · [Lane sections](#) · [Road tool overview](#)
- [Main screen overview](#)

# Lane Height

---

The **Lane height tool** adds height values to the **inner** and **outer** corners of a lane so the selected lane can be **elevated** relative to other lanes on the road.



## ► Lane Height Anchors

Lane height anchors **add** and **control** height transitions along the selected lane.

- **Several anchors** can exist on the same lane.
- Each anchor stores separate **Inner** and **Outer** height values.
- You can **select** an anchor and **drag** it along the lane to move its position.
- When the Lane height tool is **active**, all lane height anchors on the relevant lane become **visible**.

## ► Enable the Lane Height Tool

You can turn on lane height in either of the following ways.

### ► 1. From the Lane Property Panel

1. Open the **Lane property** panel (with the target **lane** selected).
2. Go to the **Advanced tool** section.
3. Enable the **Lane height** tool.
4. **Add an anchor** at the desired position on the selected lane.

### ► 2. From the Road Toolbar

1. **Triple-click** the target lane on the canvas so **lane** selection is active (see [selection on the canvas](#)).
  2. The **Lane height** tool becomes available in the **Road toolbar**.
  3. Select the **Lane height** tool.
  4. **Single left-click** on the desired location on the lane to place a lane height **anchor**.
- 

## ► Add or Delete Lane Height Anchors

A **dropdown** arrow next to the Lane height icon in the **Road toolbar** opens a popup menu:

Option	Purpose
<b>Add lane height</b>	Place new anchors (default mode).
<b>Delete lane height</b>	Remove existing anchors.

By default, the tool is set to **Add lane height** mode.

---

## ► Delete a Lane Height Anchor

1. Choose **Delete lane height** from the dropdown menu.
  2. **Click** the lane height anchor you want to remove.
- 

## ► Open the Lane Height Panel

When the Lane height tool is **active**:

- All lane height anchors on the selected lane are **visible**.
  - **Left-click** a lane height anchor to open the **Lane height** panel.
- 

## ► Lane Height Panel

The **Lane height** panel exposes the following properties.

Property	Description
<b>Inner</b>	Height offset for the <b>inner</b> corner of the lane.
<b>Outer</b>	Height offset for the <b>outer</b> corner of the lane.
<b>Linked</b>	Keeps <b>Inner</b> and <b>Outer</b> height values <b>synchronised</b> .

### ▶ **Linked Height Values**

- By default, **Linked** is **enabled**—both **Inner** and **Outer** stay the same.
- To use **different** inner and outer heights (for example a **sloped** or **tilted** lane surface):
  - a. **Disable Linked**.
  - b. Enter separate values in **Inner** and **Outer**.

## ▶ **Lane Height Toolbar Functions**

Extra actions appear when the Lane height toolbar is **active**.

### ▶ **Apply Default Height**

Applies the **default** lane height values to **all** lane height anchors on the selected lane.

Default	Value
<b>Inner</b>	0.12
<b>Outer</b>	0.12

### ▶ **Reset All Height**

Sets **Inner** and **Outer** on **all** lane height anchors for the selected lane to **0**.

### ▶ Copy Height to Current Group

If the selected lane type is **Curb**, copies lane height values to **all lanes on the right side** of the selected lane.

### ▶ Copy Height to Both Groups

If the selected lane type is **Curb**, copies lane height values to:

- All lanes on the **right** side of the selected lane.
  - All lanes on the **left** side of the selected lane.
- 

## ▶ Editing Tips

- Use lane height anchors for **smooth** elevation transitions along the road.
  - Keep **Inner** and **Outer linked** for **uniform** lane elevation.
  - Turn **Linked off** when you need **sloped** or **tilted** lane surfaces.
  - After changing heights, check **road continuity** near **junctions** and **adjacent** lanes.
  - Use **Reset all height** before **redesigning** lane elevation.
- 

## ▶ Related

- [Lanes](#) · [Lane sections](#) · [Road tool overview](#)
- [Lane marking](#) · [Create Road](#)

## Road Properties Panel

---

When you single-click a road with the left mouse button, the corresponding **Road Properties** panel opens on the right side of the canvas.



Road Properties panel screenshot



### × Road

---

#### Identification

Road ID	Road Name
<input type="text" value="1297"/>	<input type="text" value="road-4348"/>

Road Length

---

#### Road Properties

Road Type	Speed
<input type="text" value="unknown"/> ▾	<input type="text" value="0"/> <input type="text" value="m/s"/> ▾

Junction ID

---

#### Lane Configuration

Lane Count	All Lane Width
<input type="text" value="4"/>	<input type="text" value="0"/>

Marking Width	Center Marking Type
<input type="text" value="0"/>	<input type="text" value="none"/> ▾

---

#### Elevation

[Open Elevation Editor](#)

---

#### Display Options

Toggle Controls	<input checked="" type="checkbox"/>
Toggle Slots	<input checked="" type="checkbox"/>
Toggle Objects	<input checked="" type="checkbox"/>
Toggle Signals	<input checked="" type="checkbox"/>

---

#### Advance Tools

Helper Road	<input type="checkbox"/>
Manual Geometry	<input checked="" type="checkbox"/>

## ► Sections in the Panel

### ► Identification

Field	Purpose
Road ID	Unique system ID for the road (read-only).
Road Name	Editable name of the road.
Road Length	Total length of the road (read-only, updates automatically).

### ► Road Properties

Field	Purpose
Road type	Category for the road (for example motorway vs urban).
Speed	Design or legal speed with a <b>unit</b> (for example <b>m/s</b> or <b>km/h</b> —check the dropdown).
Junction ID	Associates the road with a junction when applicable (-1 or empty often means “no junction”).


### ► Lane Configuration

Field	Purpose
Lane count	Number of lanes on this road (road-level default; you can still refine per lane later).

Field	Purpose
All lane width	A uniform width applied across lanes when using this shortcut (use <b>0</b> or leave default if you set width per lane elsewhere).
Marking width	Width used for painted markings (centre line, lane separators) where the product applies it at road level.
Center marking type	Style of the <b>centre marking</b> between opposing directions (for example <b>none, solid, dashed</b> ).

### ► Elevation

Opens the elevation editor for the road's vertical profile. This is used to define and adjust road heights and slopes, and to align the road with elevation or design requirements.

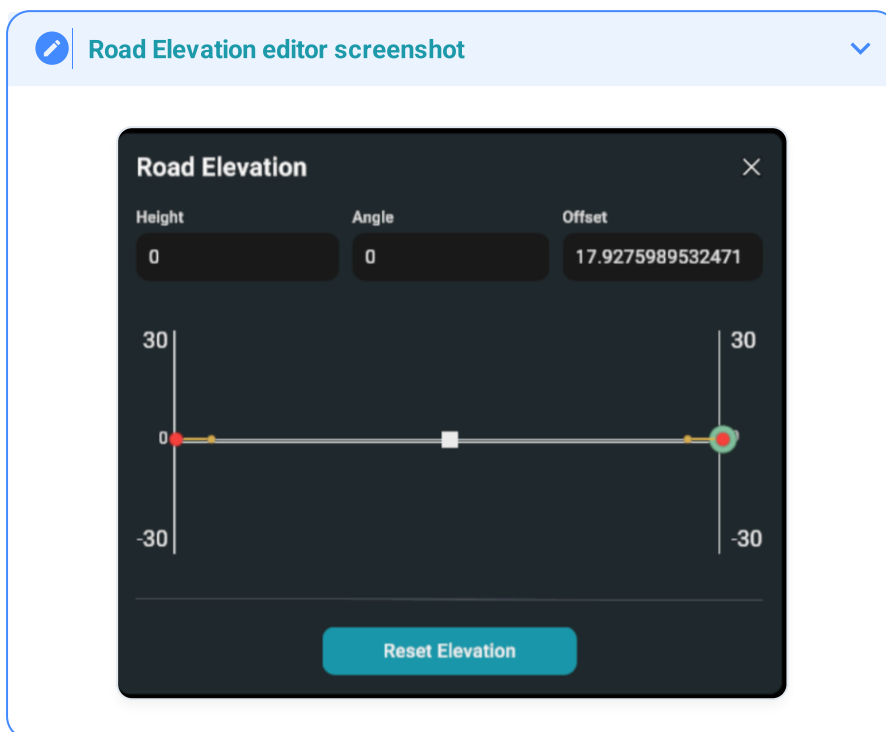

### ► Display Options

It controls what is shown for the selected road in the editor. They only affect visibility and do not change or delete any data.

Field	Purpose
<b>Toggle Controls</b>	Show or hide edit handles and control points on the canvas.
<b>Toggle Slots</b>	Show or hide lane slots and connection points used for linking roads and lanes.
<b>Toggle Objects</b>	Show or hide objects placed on the road.
<b>Toggle Signals</b>	Show or hide signals such as traffic signs and lights.

### ► Advance Tools

Field	Purpose
<b>Helper road</b>	An extra support path used while creating or editing a main path or shape. It helps guide the process but is not part of the final result.
<b>Manual geometry</b>	Lets you directly control and shape the path yourself instead of the system automatically adjusting it.

### ► Related

- [Road tool overview](#) · [Create Road](#) · [Road anchor](#) · [Lanes](#)

# Lane Properties Panel

---

When you select a lane on the canvas (typically by triple-clicking the road), the **Lane Properties** panel opens on the right side of the editor.



Lane properties panel screenshot



×
**Lane**

---

**Identification**

Lane Type

driving
▼

Marking Type

curb
▼

---

**Lane Configuration**

Marking Width

0.119999997317791

Lane Position

-3

Lane Width

3.75

---

**Lane Properties**

Speed

30
m/s ▼

Lane Priority

0
↕

---

**Material / Surface**

Material

asphalt
▼

Elevated Lane

**Advanced Tools**

**Lane Level Tools**

---

Continuous Marking

Lane Height

Road Marking

Cross-Road Lane Height

---

Tram Settings

Dependent Tram



## ► Sections in the Panel

### ► Identification

Field	Purpose
Lane type	Role of the lane (for example <b>driving</b> , <b>sidewalk</b> , <b>bus</b> ).
Marking type	Boundary style toward the adjacent lane or shoulder (for example <b>curb</b> , line style).

### ► Lane Configuration

Field	Purpose
Marking width	Width of the marking strip at the lane boundary (when applicable).
Lane position	OpenDRIVE <b>lane index</b> relative to the reference line (often read-only).
Lane width	Width at the current edit context; detailed width-along-road behaviour is covered under <b>Width tags</b> .

### ► Lane Properties and Surface

Field	Purpose
Speed	Design speed with <b>unit</b> (for example <b>m/s</b> ).
Lane priority	Priority hint for routing or simulation.
Material	Surface type (for example <b>asphalt</b> ).

Field	Purpose
Elevated lane	When enabled, marks elevated or bridge-style lane behaviour.

### ▶ [Advanced Tools](#)

Optional toggles include **lane height**, **road marking**, and **tram**-related options.

### ▶ [Related](#)


- [Road tool overview](#) · [Lanes](#) · [Width tags](#)
- [Lane sections](#) · [Lane marking](#) · [Lane height](#)

# 5 Objects

---

# Objects

The **Object Tool** in the **Bottom Toolbar** allows you to add and place different types of objects/Assets in the scene. When activated, the **Object Bar** opens on the screen, providing access to options such as single objects, road painting, repeatable objects, Pen Tool, bridges, tunnels, gantries, and suspended cables.

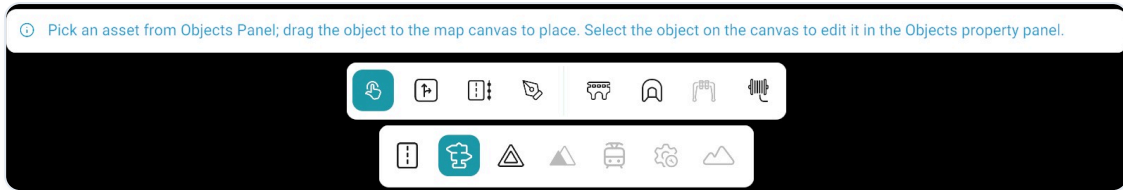

## ► Objects Tool Active Interface

While object editing is active, the UI combines:

Component	Description
Canvas	Main workspace for placing, selecting, moving, and managing objects in both 2D and 3D views.
Object Tools	Provides object creation and placement tools such as Single Objects, Road Painting, Repeatable Objects, Pen Tool, Bridge, Tunnel, and related editing features (availability may vary by build and licence).
Object Property Panel	Displays and allows editing of the selected object's properties, including position, dimensions, deletion options, and type-specific parameters.

## ► Objects Tool Categories

Topic	Description
Single object	Opens the Objects panel, which contains the complete inventory of individual assets organized into categories such as buildings, poles,

Topic	Description
	trees, signs, barriers, and more.
Road painting	Create and edit road markings using preset markings or custom shapes drawn directly on the surface.
Repeatable objects	User selects a road, creates segments within the road boundary/length, then chooses assets from the Repeatable Objects panel to automatically place them across the selected sections.
Pen tool	The Pen Tool is used to create polygon objects on the map. It allows users to draw custom shapes and freeform layouts directly on the canvas.
Bridge	Allows users to place premade bridges on selected roads.
Tunnel	Allows users to place premade tunnels on selected roads.
Gantry	Allows users to place gantries on selected roads. (Currently disabled.)
Suspended cable	Allows users to add suspended cables between poles and suspended lights.
Object Properties Panel	Identification, preview, placement, dimensions, behaviour, repeat list, and delete object for selected assets.


## ► Related

- [Road tool](#) – tool used to create and edit roads, including drivable paths, lanes, and road markings.

# Single Object


Clicking **Single Object** opens the **Objects Panel** on the right side of the RepliMap canvas, enabling users to add individual objects or assets directly to the map or scene.

Each object is defined according to its type and subtype as specified in the **OpenDRIVE** document, ensuring consistency with the road network model.

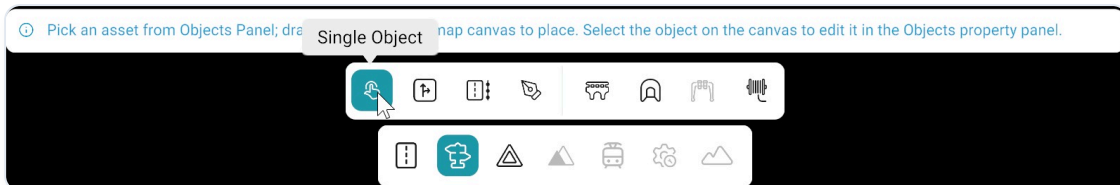


The panel provides a variety of object categories, including:

- Buildings
- Obstacles
- Patches
- Poles
- Streetlamps
- Trees
- Parking spaces
- Traffic islands
- Road markings
- Road surfaces

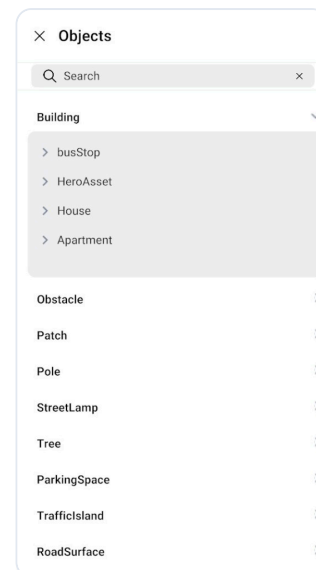

## ► How to Add Single Objects

1. Open the **Objects Panel** to view all available object categories.
2. Browse objects by category or use the **Search Bar** to quickly find an object by name.
3. Select the desired object and **drag** it onto the canvas.
4. **Drop** the object at the preferred location on the map.
5. Click the placed object to open the **Object Properties Panel** on the right side.
6. Configure and update the object's attributes from the properties panel.

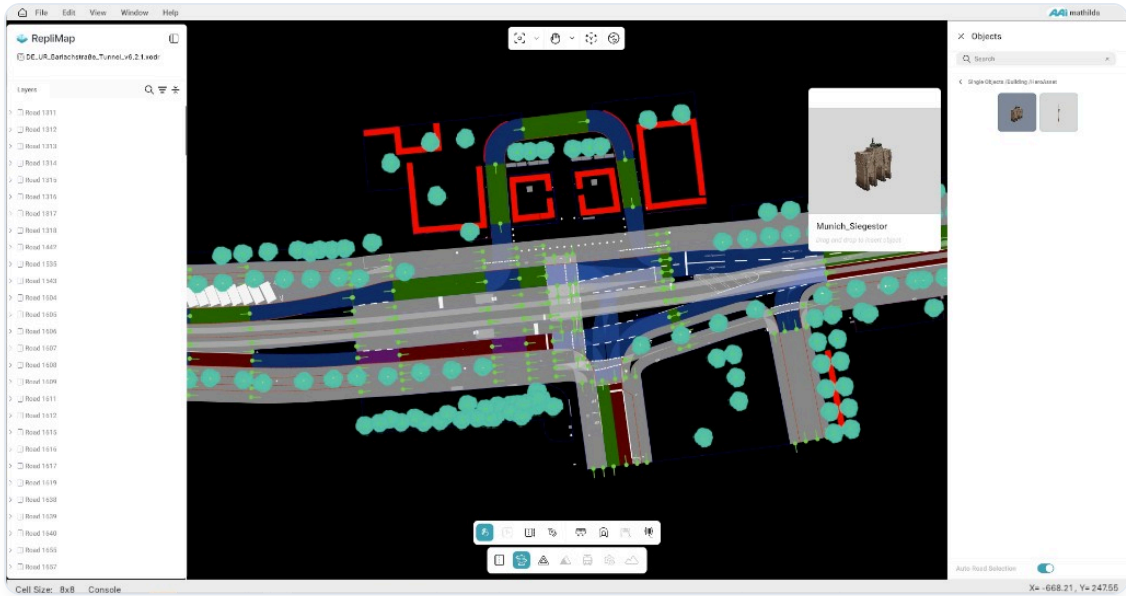

## ► Auto Road Selection Tool

The **Auto Road Selection** tool controls which road receives the object when you place it on the canvas.

Setting	Behaviour
<b>Enabled</b>	Objects are automatically added to the <b>nearest</b> road.
<b>Disabled</b>	Select the road using <b>Right-Click</b> before placing; the object is placed only on the <b>selected</b> road.

*For complex junctions where automatic detection may be wrong, turn Auto Road Selection off, Right-Click the road you want, then place the object with drag and drop.*

## ► Related

- [Objects overview](#) · [Object Properties Panel](#) · [Repeatable objects](#) · [Pen tool](#)


# Road Marks (Road Painting Tool)

---

The **Road Marks** tool is used to place all types of road surface markings on the map. These markings represent real-world traffic guidance elements such as:

- Arrows
- Symbols
- Text markings
- Crosswalks (zebra crossings)
- Lane direction indicators

Road Marks are essential for creating accurate and readable road layouts in RepliMap.

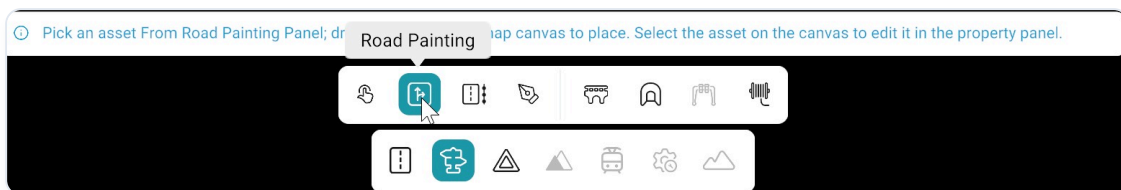


## ► How to Use Road Marks

Road Marks are added using a simple drag-and-drop workflow.

### ► Step-by-Step Process

1. Open the **Road Marks** panel from the bottom bar.
2. Browse through available categories or search by name using the search bar.
3. Select the required road mark object (for example arrow, text, or crosswalk).
4. Drag the selected object onto the canvas.
5. Drop it at the desired position on the road surface.
6. Click the placed object to open the **Object Properties Panel** on the right side.
7. Adjust and configure the object settings as needed.

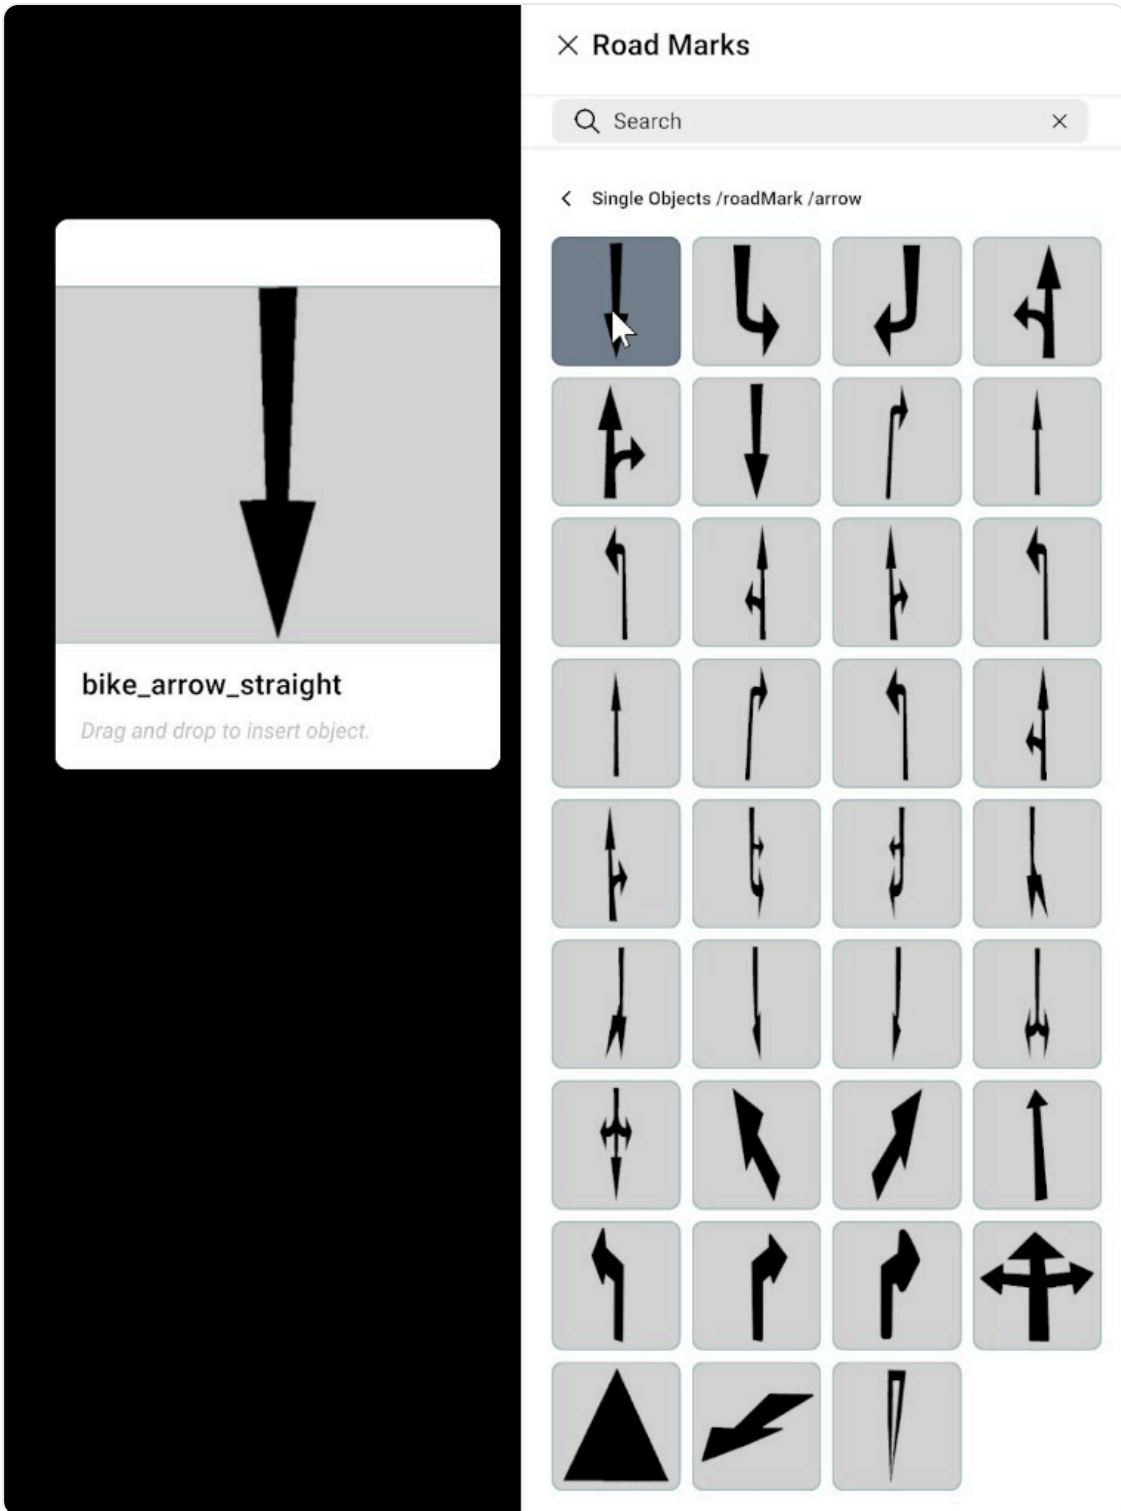

## ► Auto Road Selection

The **Auto Road Selection** tool controls which road receives the road mark when you place it on the canvas.

Setting	Behaviour
Enabled	Road marks are automatically added to the <b>nearest</b> road.
Disabled	Select the road using <b>Right-Click</b> before placing; the road mark is placed only on the <b>selected</b> road.

*For complex junctions where automatic detection may be wrong, turn Auto Road Selection off, Right-Click the road you want, then place the road mark with drag and drop.*

## ► Object Properties Panel

After placing a Road Mark, the **Object Properties Panel** allows you to modify its attributes. It is the same panel as the [Object Properties Panel](#) used for other objects.

You can adjust:

- Position alignment
- Rotation (direction of markings)
- Scale (size adjustment)
- Visibility settings
- Style and appearance (depending on object type)



Road mark object properties screenshot



## ✕ Objects

### Identification

Object ID

11279

Name

roadMark\_triangle

Type

roadMark

Subtype

arrow

### ▼ Preview



### Placement

S

4.254

T

-4.326

Z Offset

0

hdg

0

Pitch

0

Roll

0

### Dimensions

Width

0

Length

0

Height

1

Radius

0

### Behaviour

Dynamic

No

Valid Length


0

Repeat List



Repeat-0



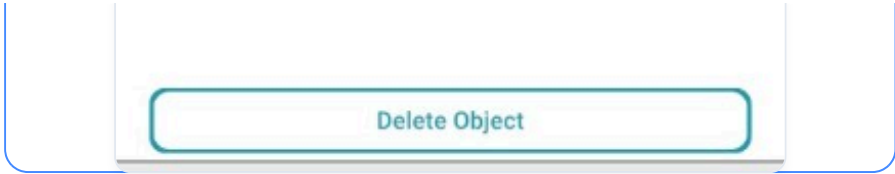

► **Related**


- [Objects overview](#) · [Pen tool](#) · [Single object](#) · [Road tool – Lane marking](#)

# Repeatable Objects

---

**Repeatable Objects** are used to place objects repeatedly along a road path, such as fences, walls, guardrails, hedges, trees, and parking spaces.

These objects can be customized with different spacing, alignment, and repetition settings.

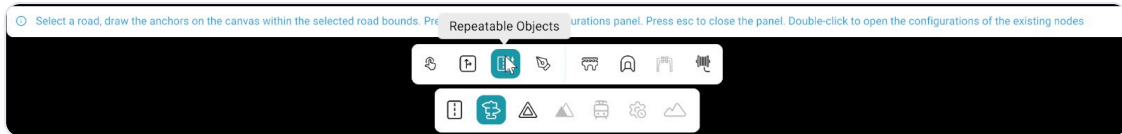

## ► How to Add Repeatable Objects

1. Select the road by **left-clicking** on the location where you want to place the repeatable object.
2. Draw the outline or path of the object along the road using **left-clicks**.
3. After completing the outline, press the **Enter** key.

Place anchors within the selected road bounds. When the path is complete, **Enter** opens the **Path** configuration panel on the right.

4. In the **Path** panel, configure the required object properties such as:
  - Spacing
  - Alignment
  - Width
  - Height
  - Length
  - Z-offset
5. Choose the required segment type:
  - **Line** – for straight segments
  - **Spline** – for curved segments (available only for Discrete objects)
6. Select the object category:
  - **Discrete** – for spaced objects such as trees and parking spaces
  - **Continuous** – for connected objects such as fences, hedges, and guardrails
7. If required, enable **Generate Per Segment** to edit each segment individually.
8. After configuring all settings, click **Insert Object** to create the repeatable object on the road.



Path panel screenshot



×
**Path**

---

**Identification**

ID

1

Line
  Spline

---

**Objects**

Discrete
▼

Tree
▼

birch
▼

Generate per segment

Object Values ⌵

Insert Object

**Values**

Line segment 1

	Width	Height	Length	Z-offset
start	1	1	1	0
end	XX	XX	XX	XX

Spacing

max 15
2



## ► Types of Segment

Segment Type	Description
Line	Creates segments in a straight-line format along the selected path.
Spline	Creates segments in curved paths. This option is available only for the <b>Discrete</b> object category and is commonly used for placing objects such as trees along curved roads or paths.

## ► Object Types / Categories

Category	Description	Examples
Discrete	Used for objects that require spacing between each repeated object.	Trees, Parking spaces
Continuous	Used for objects that form an uninterrupted structure along the road.	Fences, Hedges, Guardrails


## ► Generate Per Segment Feature

The **Generate Per Segment** feature allows users to edit object properties either segment-by-segment or for the entire object.

Option	Description
<p><b>Enabled</b></p>	<p>Allows users to edit each segment individually. Different values can be assigned to different segments. The <b>Values Bar</b> allows modification of <b>Width, Height, Length, and Z-offset</b> for both the starting and ending points of each segment. After making changes, click <b>Save</b> to apply the modifications.</p>
<p><b>Disabled</b></p>	<p>Allows users to edit the entire repeatable object as a single unit. Any changes made will apply to the complete object instead of individual segments. The <b>Values Bar</b> allows modification of <b>Width, Height, Length, and Z-offset</b> for the starting and ending points of the full object. After making changes, click <b>Save</b> to apply the modifications.</p>

## ► Insert Object

After assigning the desired values and settings, click **Insert Object** in the **Object Values** section of the **Path** panel to create and place the repeatable object on the road.

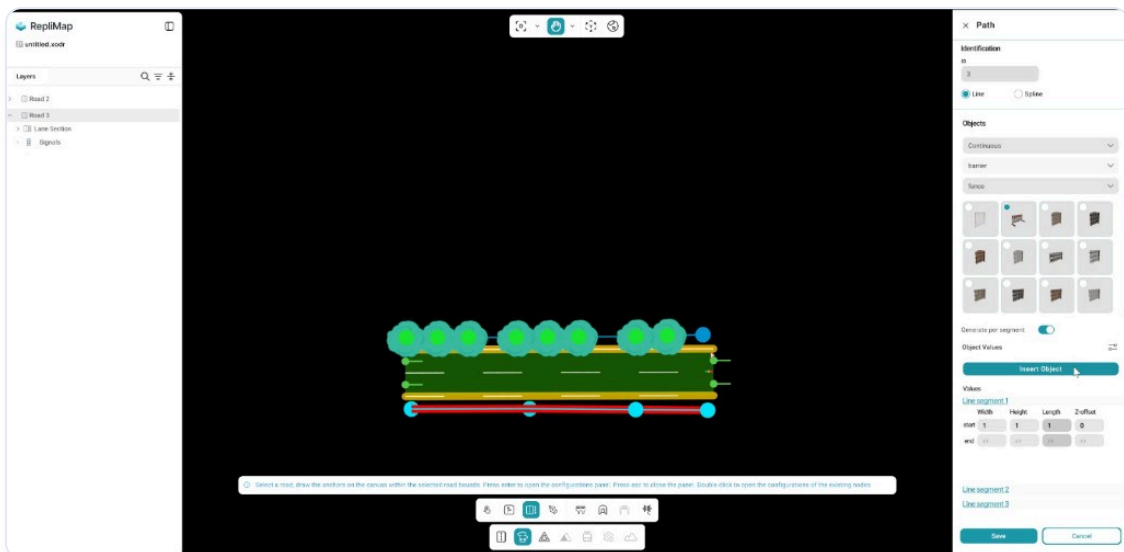

## ► Repeatable Object Properties Panel

The **Repeatable Object Properties Panel** is the same as the [Object Properties Panel](#).

After inserting the repeatable object along the road, clicking on the object opens the **Repeatable Object Properties Panel** on the right side of the editor. From this panel, users can modify and adjust the object properties.

## ► Related


- [Objects overview](#) · [Single object](#) · [Pen tool](#)

# Pen Tool

---

The **Pen Tool** is used to create polygon-based objects on the map. It allows users to draw custom shapes and corners using **left-click** points. The Pen Tool is commonly used for creating:

- Restricted Areas
- Traffic Islands
- Parking Lines
- Road Markings
- Gantries

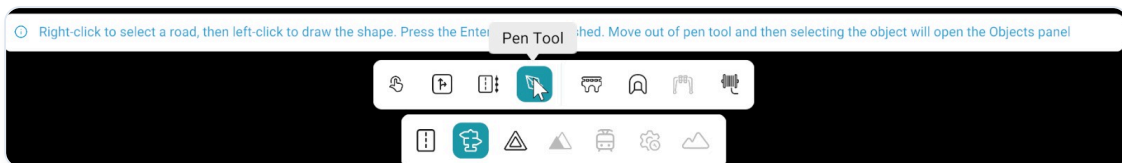

## ► How to Create an Object Using the Pen Tool

Follow these steps to create an object on the map:

1. **Right-click** on the desired road.
2. Use **left-clicks** to draw the outline of the object.
3. Continue placing points until the shape is complete.
4. Press **Enter** to finalize and create the object.

## ► Polygon Properties Panel

When the **Pen Tool** is selected, the **Polygon Properties Panel** appears on the RepliMap interface. This panel allows you to configure polygon properties.



Polygon properties panel screenshot



✕ Polygon Properties

Relative Z

Consider lane height

---

Z

Height

---

Closed

Border

Marking

---

Lane Type

Fill Type

Object Type

Name

Mark Width

---

Object-wide z/height

✕ Object-wide z/height

Outline only

---

z

Set z

height

Set height

offset z

Set offset z

offset h

Set offset h

---

Convert z to relative z for all corner points

Convert relative z to z for all corner points

## ► Polygon Properties

Property	Type	Description
<b>Relative Z</b>	Toggle	Sets the polygon height (Z value) relative to the ground or lane level instead of using an absolute world height.
<b>Consider Lane Height</b>	Toggle	Automatically adjusts the polygon height according to lane elevation.
<b>Z</b>	Numeric field	Defines the vertical position of the polygon from the ground.
<b>Height</b>	Numeric field	Defines the thickness or vertical size of the polygon.
<b>Closed</b>	Toggle	When enabled, the polygon becomes a closed shape by connecting the first and last points. When disabled, the polygon remains open.
<b>Border</b>	Toggle	Adds a visible outline or border around the polygon.
<b>Marking</b>	Toggle	Enables road marking behaviour on the polygon.

## ► Type Selection Options

Option	Type	Description
<b>Lane Type</b>	Dropdown	Defines the lane category associated with the polygon (e.g., driving lane, sidewalk).
<b>Fill Type</b>	Dropdown	Specifies the polygon surface material (e.g., asphalt, grass).
<b>Object Type</b>	Dropdown	Defines the object category (e.g., Traffic Island, Roadmark, Gantry).
<b>Name</b>	Text field	Assigns a custom name to the polygon object.

### ► Polygon Object Properties Panel

The **Polygon Object Properties Panel** functions similarly to the [Object Properties Panel](#).

After creating a polygon object, selecting it opens the **Polygon Object Properties Panel** on the right side of the editor. This panel allows users to view, modify, and adjust the polygon object properties.

### ► Adding a Gantry Using the Pen Tool

1. **Left-click** to select the **Pen Tool**. **Right-click** on the road to select it.
2. **For a single gantry:**
  - Draw three polygon points where you want to place the gantry.
  - Place the first two points at the same position where the gantry starts.
  - Place the third point where the gantry ends.
3. **For a double gantry:**
  - Draw two points on one side of the gantry.
  - Draw two more points on the other side (the opposite end).

After drawing the polygon, open the **Polygon Properties Panel** to set values.

## ► Important Note


Object-wide **Z / Height** is not required for gantry creation and should not be used for gantry objects.

## ► Related

- [Objects overview](#) · [Gantry](#) · [Road painting](#) · [Single object](#)

# Bridge

The **Bridge Tool** is used to add bridges to the road scene.

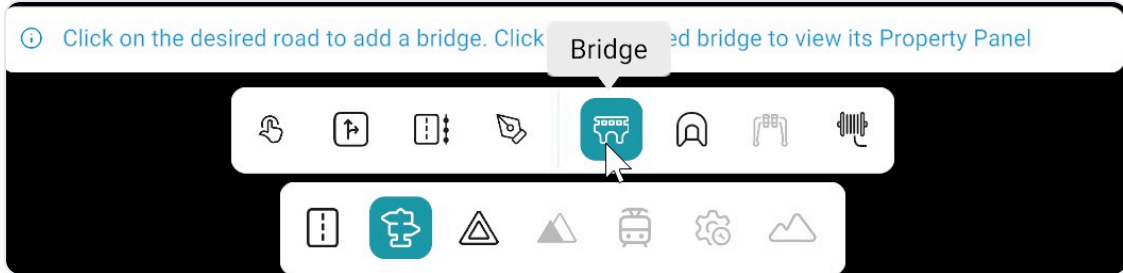

## ► Adding a Bridge

1. Select the **Bridge Tool**.
2. **Left-click** on the desired road location.
3. The bridge is automatically placed at the selected position.

## ► Bridge Properties Panel


**Right-click** on a bridge to open the **Bridge Properties Panel**. This panel allows modification of the bridge properties.

Property	Description
<b>S</b>	Defines the starting position of the bridge along the road
<b>Length</b>	Controls the total length of the bridge
<b>Type</b>	Specifies the bridge material or style (for example, concrete)

## ► Lane Validity


Specifies which lanes the bridge applies to on the road. Use **+** to add lane validity rules and limit the bridge to selected lanes.

When a rule is added, open the **Edit Lane** dialog. Set **From Lane** and **To Lane** to define the lane range, then click **Apply**.

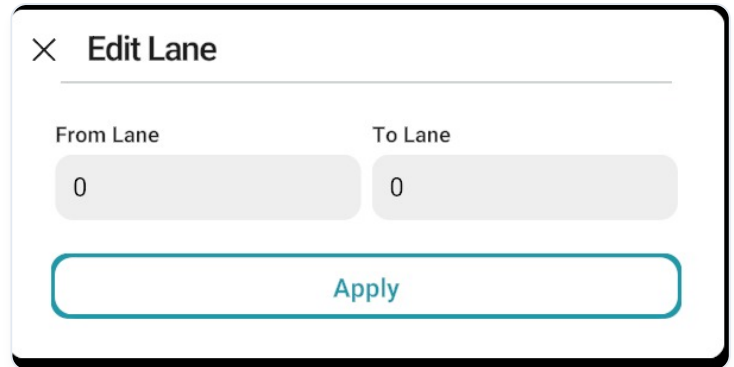

## ► Delete Bridge

The **Delete Bridge** option removes the selected bridge from the scene.

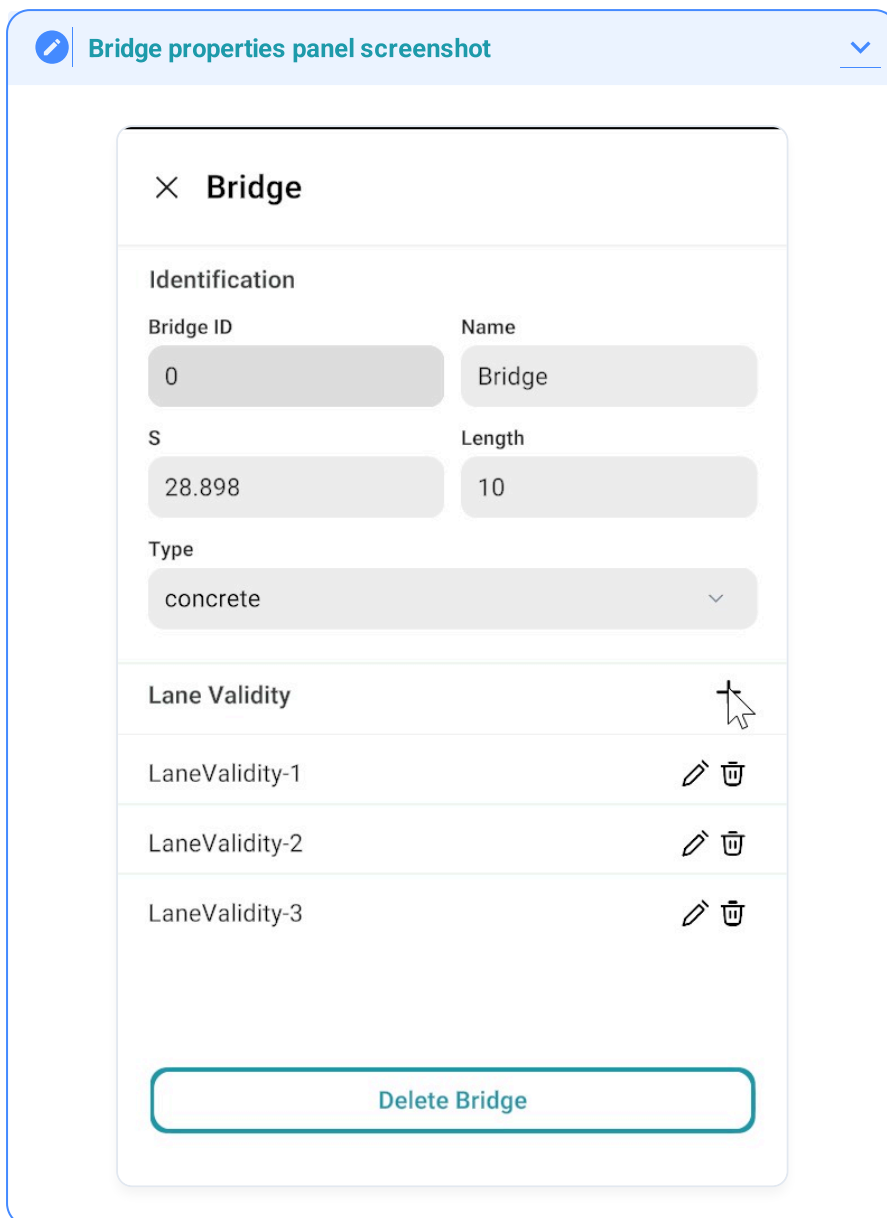


## ► Related

- [Objects overview](#) · [Tunnel](#) · [Road tool](#) · [Elevation tools](#)

# Tunnel

The **Tunnel Tool** is used to add tunnels to the road scene.

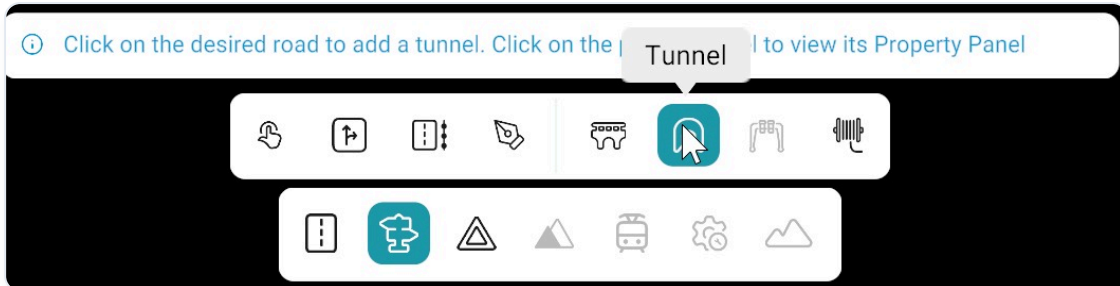

## ► Adding a Tunnel

1. Select the **Tunnel Tool**.
2. **Left-click** on the desired road location.
3. The tunnel is automatically placed at the selected position.

## ► Tunnel Properties Panel


**Right-click** on a tunnel to open the **Tunnel Properties Panel**. This panel allows modification of the tunnel properties.

Property	Description
Type	Specifies the tunnel type
S	Defines the starting position of the tunnel along the road
Length	Defines how far the tunnel extends

## ► Lane Validity

Specifies which lanes the tunnel applies to on the road. Use **+** to add lane validity rules and limit the tunnel to selected lanes.

When a rule is added, open the **Edit Lane** dialog. Set **From Lane** and **To Lane** to define the lane range, then click **Apply**.

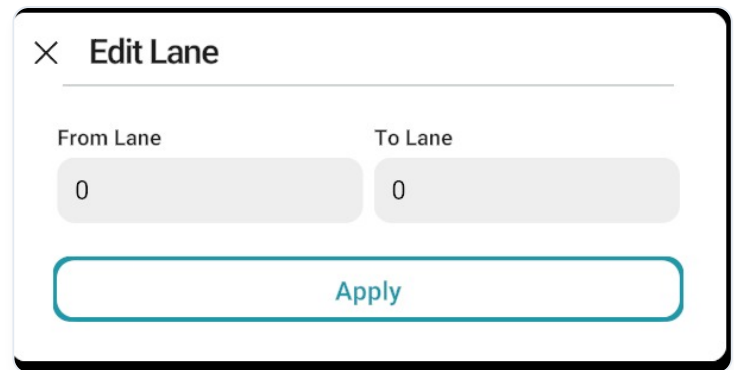

The image shows a dialog box titled "Edit Lane" with a close button (X) in the top left corner. Below the title bar, there are two input fields: "From Lane" and "To Lane", both containing the number "0". At the bottom of the dialog is a large blue button labeled "Apply".

## ► Delete Tunnel

The **Delete Tunnel** option removes the selected tunnel from the scene.

✕ Tunnel

**Identification**

Tunnel ID: 0      Name:

Type: standard

S: 17.071      Length: 10

Lighting: 0      DayLight: 0

Lane Validity +

LaneValidity-1 ✎ 🗑

**Delete Tunnel**

## ► Related

- [Objects overview](#) · [Bridge](#) · [Road tool](#)

# Gantry Tool (Currently Not Available)


## Coming soon

A dedicated **Gantry Tool** workflow in RepliMap is **currently not available**—documentation for that feature will be expanded here when it ships.

The **Gantry Tool** is used to add gantry structures to the map within the RepliMap interface.

Gantry structures are commonly used for:

- Overhead sign supports
- Traffic monitoring systems
- Highway information displays
- Road infrastructure elements

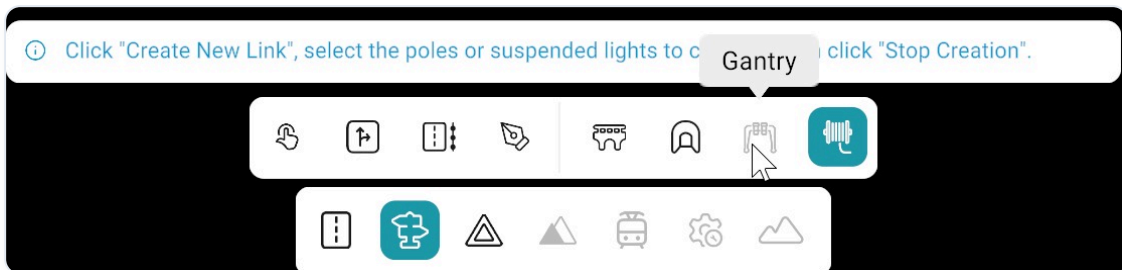

## ► Adding a Gantry

Currently, gantries can be created in two ways:

Method	Description
<b>Gantry Tool</b>	Dedicated tool for creating gantries directly.
<b>Pen Tool</b>	Gantries can also be created manually using the <a href="#">Pen Tool</a> .


## ► Related

- [Pen tool – Adding a Gantry](#) · [Objects overview](#) · [Signals](#)

# Suspended Cable Tool

The **Suspended Cable Tool** is used to create wire connections between poles and suspended lights.


These cables represent real-world overhead wiring systems and help improve infrastructure realism in RepliMap.

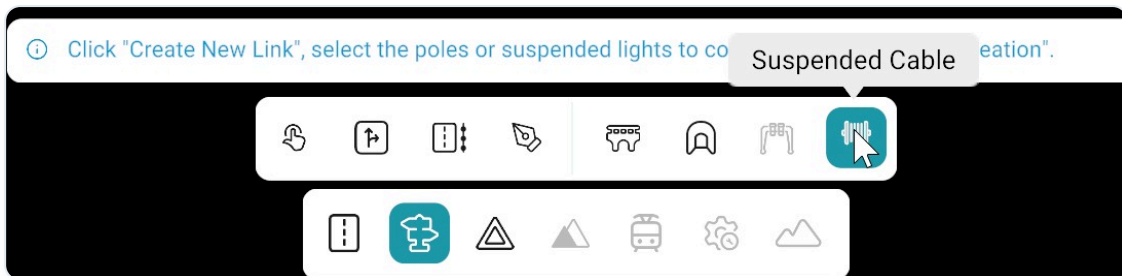

## ► How to Create New Links

To create suspended cable connections:

1. Click **Create New Links** in the **Objects Link Panel**.
2. **Left-click** on the first pole.
3. **Left-click** on the suspended light or second pole to connect it.
4. A red link will appear, confirming the connection.
5. Repeat the process for additional connections if required.
6. Once finished, click **Stop Creation**.
7. Enable **Wire Settings**.
8. Adjust wire settings to match real-world appearance.

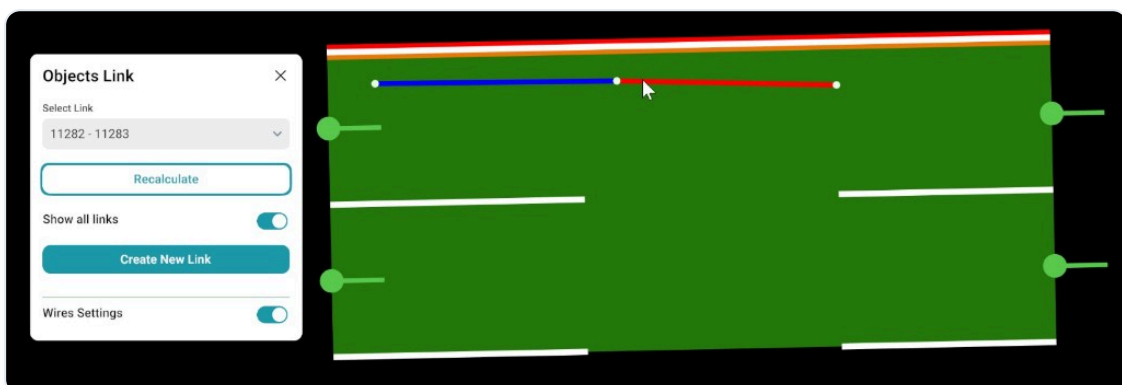

## ► Wire Settings

The **Wire Settings** option allows customization of cable appearance and behaviour.

Users can adjust settings to ensure realistic representation of suspended cables in the scene.

## ► Objects Link Panel

Option	Description
<b>Select Link</b>	Displays the list of existing links. Used to view or edit a specific connection.
<b>Recalculate</b>	Updates the selected link when objects are moved or modified.
<b>Show All Links</b>	Toggles visibility of all links in the scene.
<b>Create New Links</b>	Activates link creation mode to connect poles and suspended objects.

### Objects Link

Select Link

None

Recalculate

Show all links

Create New Link

---

Wires Settings

Number of Wires

Signal

Height

Signal

Gap

Signal

Sag %

Signal

► Notes

#### Note

- A red line indicates an active cable connection.
- Always click **Stop Creation** after finishing link creation.
- Use **Recalculate** if object positions change.
- Wire appearance can be adjusted using **Wire Settings** for realism.

## ► Related

- [Objects overview](#) · [Pen tool](#) · [Gantry](#)

# Object Properties Panel

---

When an object is selected, the **Object Properties Panel** opens on the right side of the editor. The available sections and fields are dynamically displayed based on the selected asset type.



Object properties panel screenshot



## ✕ Objects

### Identification

Object ID

11268

Name

Munich\_Siegestor

Type

building

Subtype

HeroAsset

### ▼ Preview



### Placement

S

51.576

T

4.664

Z Offset

0

hdg

0

Pitch

0

Roll

0

### Dimensions

Width

24.451

Length

11.955

Height

28.516

Radius

0

### Behaviour

Dynamic

No

Valid Length

0

Repeat List




Repeat-0



Repeat-0



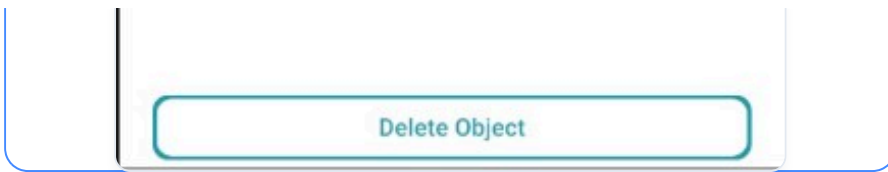

## ► Sections in the Panel

### ► Identification

Field	Purpose
Object ID	Internal identifier for this instance (read-only in normal editing).
Name	Asset or instance name as shown in the editor.
Type	High-level category (for example <b>pole</b> ); often chosen from a dropdown.
Subtype	Finer classification for rules, export, or filtering (for example <b>bollard</b> ).

### ► Preview

If present, Preview expands to a 3D thumbnail of the selected asset so you can confirm the prop before editing numeric fields.

### ► Placement

Field	Purpose
S	Station along the placement <b>reference</b> (longitudinal position), in map units.
T	<b>Lateral</b> offset from that reference (left/right), in map units.
Z Offset	Vertical offset measured from the road reference line.
hdg	<b>Heading</b> (yaw), in degrees.

Field	Purpose
Pitch	Tilt about the lateral axis, in degrees.
Roll	Twist about the longitudinal axis, in degrees.

For assets placed in world coordinates instead of road-relative S/T, the editor may show X/Y or equivalent fields instead—same meaning as elsewhere in the map.

### ► Dimensions

Field	Purpose
Width	Extent across the object's width, when editable.
Length	Extent along the object's length, when editable.
Height	Vertical extent.
Radius	Radial size for cylindrical or capsule-style props, when used.

Not every asset exposes all dimension fields; fixed templates may keep some values at zero or hide them.

### ► Behaviour


Field	Purpose
Dynamic	Whether the object participates in <b>dynamic</b> simulation behaviour (for example <b>No</b> for static props).
Valid length	Length used when behaviour or placement rules depend on a valid segment (often <b>0</b> when unused).

Exact behaviour options depend on the asset and product version.

## ► Repeat List

The **Repeat list** adds entries for objects that are placed multiple times along a path. Each entry controls how one instance is repeated and lets its settings be adjusted separately.

Below is an example of the Repeat List panel, showing how each repeated instance is set and managed.

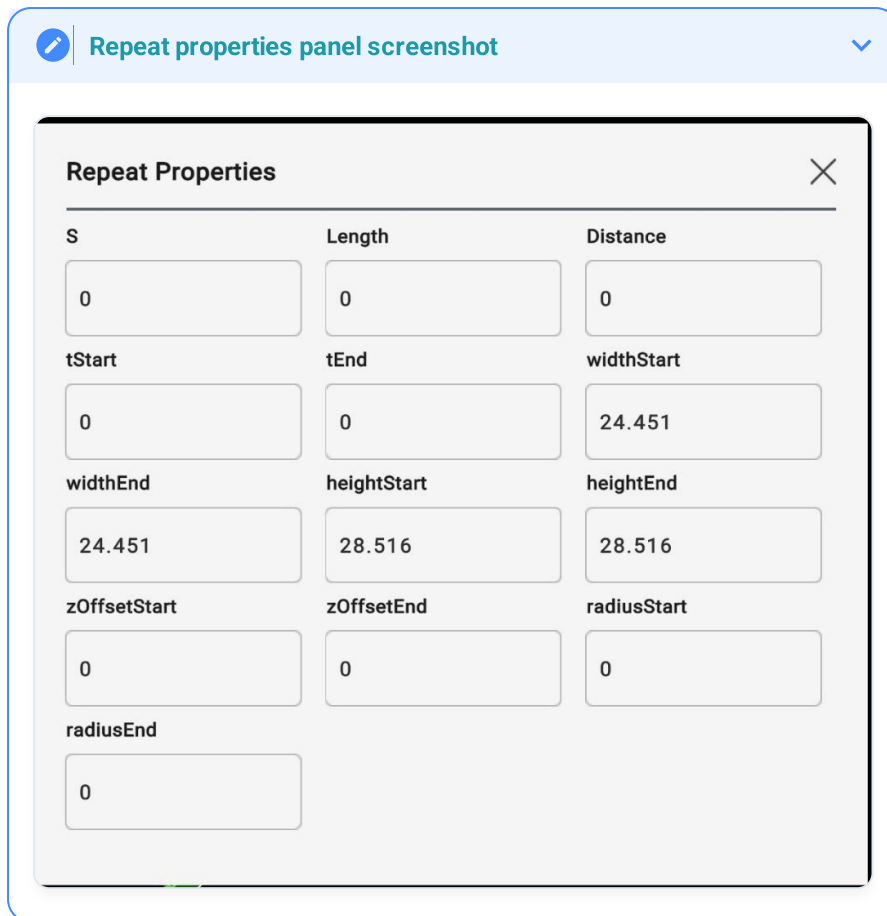

## ► Delete Object

Delete an object using the **Delete Object** option at the bottom of the panel, or by using the editor's delete action for the selected object. This removes the object from the scene.

The example below shows the property panel for **Munich\_Siegestor** (building, HeroAsset).

## ► Related

- [Objects overview](#) · [Single object](#) · [Road painting](#) · [Repeatable objects](#) · [Pen tool](#)


# 6 Signals

---

# Signals

The **Signals** tool (available in the **Bottom Toolbar**) contains **Traffic Light** and **Traffic Sign** panels, from where you can add traffic lights and signs on canvas and use options such as **Link**, **Link & Snap**, and **Link, Snap & Adjust** to position and align them correctly on the map.

Additional editing options become available when a signal or sign is selected.

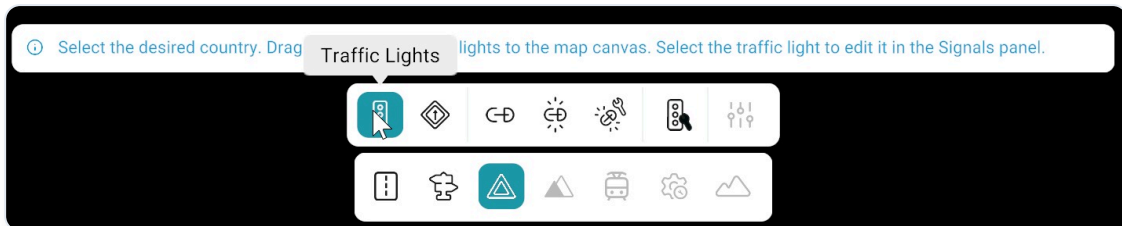

## ► Signals Tool Categories

Feature	Description
<b>Traffic Lights</b>	Tool for placing traffic lights with country selection, drag-and-drop placement, and automatic road association.
<b>Traffic Signs</b>	Tool for placing traffic signs using the same workflow as traffic lights, sharing the same properties panel.
<b>Link</b>	Links signs and signals to a pole, allowing manual positioning and Z-offset adjustment after linking.
<b>Link &amp; Snap</b>	Links and automatically snaps items to the pole with support for Z-offset adjustments.
<b>Link, Snap &amp; Adjust</b>	Links, snaps, and vertically aligns items automatically; Z-offset is applied only to the bottom item.
<b>Adjust All</b>	Adjusts the vertical positioning of all linked signs and signals across the map at once.


Feature	Description
<a href="#">Controllers</a>	Assigns signals to a junction controller for managing signal behavior within a junction.
<a href="#">Signal Properties Panel</a>	Provides detailed configuration including identification, preview, geometry, attributes, and advanced settings.

## ► Related

- [Main screen overview](#) – bottom toolbar and panels used with signal editing.
- [Objects](#) – poles and other props often used with linked signs and signals.
- [Road tool](#) – road network and lanes that signals reference.

# Traffic Lights

Traffic lights can be added to the map using the **Traffic Lights** tool. This tool includes a **Country** selection option, which lets you choose the appropriate Traffic Light type based on a specific country. Traffic Light **types** and **subtypes** follow the **ASAM OpenDRIVE** standard.

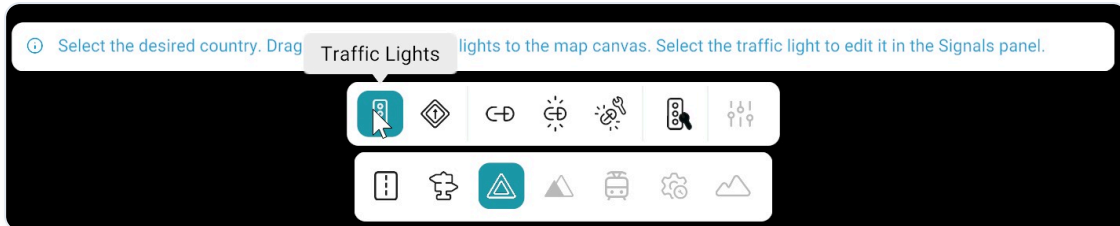

## ► How to Add Traffic Lights

Follow these steps to place a Traffic Light:

1. Select the **Traffic Lights** tool.
2. Choose the required **Country** and Traffic Light **type**.
3. Place the Traffic Light on the map using **drag and drop**.

## ► Auto Road Selection

The **Auto Road Selection** tool controls which road receives the Traffic Light when you place it.

Setting	Behaviour
Enabled	Traffic Lights are automatically placed on the <b>nearest</b> road.
Disabled	Select the road using <b>Right-Click</b> before placing the Traffic Light.

*For complex junctions where automatic detection may be wrong, turn Auto Road Selection off, Right-Click the road you want, then place the traffic light with drag and drop.*

## ► After Placement

Click on placed Traffic Light on the canvas to edit it in the [Signal properties panel](#). The panel uses the same sections and fields described on that page.

---



Traffic Lights panel screenshot



## × Traffic Lights


Q Search ×

Country

Germany ▾

< All



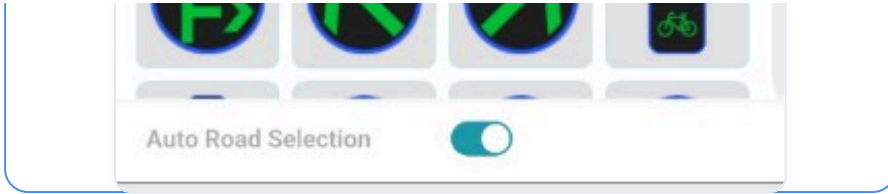


## ► Related

- [Signals overview](#) · [Traffic signs](#) · [Signal properties panel](#)

# Traffic Signs

Traffic signs can be added to the map using the **Traffic Signs** tool. This tool includes a **Country** selection option, which allows you to choose the appropriate traffic sign type based on a specific country. Traffic sign **types** and **subtypes** follow the **ASAM OpenDRIVE** standard.

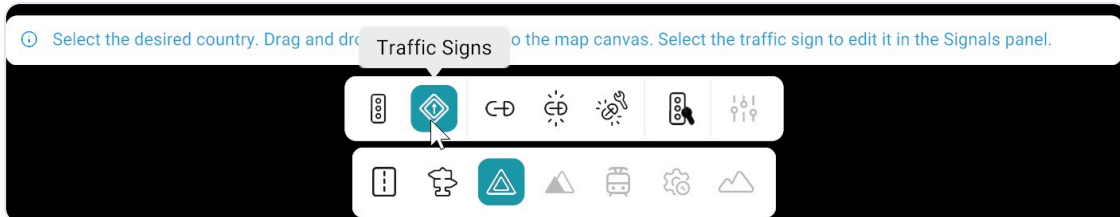

## ► How to Add Traffic Signs

Follow these steps to place a Traffic Sign:

1. Select the **Traffic signs** tool.
2. Choose the required **Country** and Traffic Sign **type**.
3. Place the traffic sign on the map using **drag and drop**.

## ► Auto Road Selection

The **Auto road selection** tool controls which road receives the Traffic Sign when you place it.

Setting	Behaviour
<b>Enabled</b>	Traffic Signs are automatically placed on the <b>nearest</b> road automatically.
<b>Disabled</b>	Select the road using <b>Right-Click</b> before placing the Traffic Sign.

*For complex junctions where automatic detection may be wrong, turn Auto road selection off, Right-Click the road you want, then place the traffic sign with drag and drop.*

## ► Signal Properties Panel

The **Signal Properties** panel is used to configure and manage selected Traffic Signs. It uses the **same sections and fields** as for [Traffic Lights](#).

For field-by-field details, see [Signal Properties Panel](#).

---



Traffic Signs panel screenshot



## × Traffic Signs

Q Search

×


Country

Germany

▼

< All / Warning signs



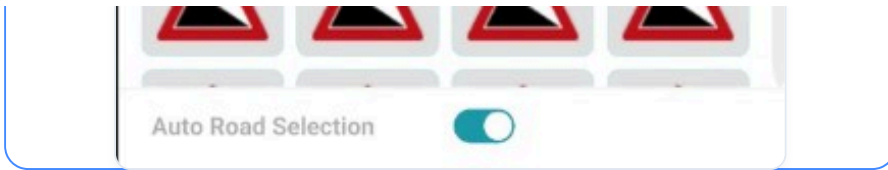


## ► Related

- [Signals overview](#) · [Traffic lights](#) · [Signal Properties Panel](#)

# Link

---

The **Link** tool connects multiple **traffic signs** and **traffic signals** to a **single pole**. It links the items without changing their position, allowing you to manually adjust their placement and **Z-offset** after linking.

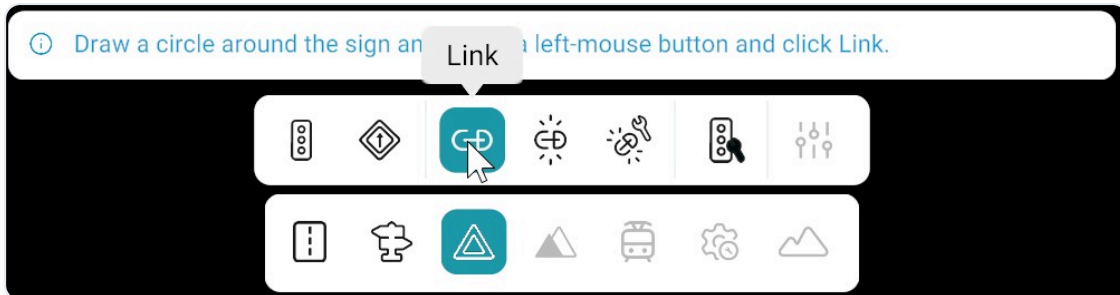

## ► How to Use Link

Follow these steps to link signs and signals to a pole:

1. Activate the **Link** tool in the **Signal bar**.
2. Draw a **circular selection** around the pole and all signs and signals you want to link.
3. Click **Link** from Right side panel.

The selected signs and signals are linked to the pole.

## ► After Linking

Adjust **position** and **Z-offset** for **each** linked sign or signal so they sit correctly on the pole. RepliMap does not snap or align them for you when you use **Link** alone.

## ► Related


- [Signals overview](#) · [Link & Snap](#) · [Link, Snap & Adjust](#) · [Objects – Single object](#)

# Link & Snap

---

The **Link & Snap** feature allows you to connect multiple **Traffic Signs** and **Traffic Lights** to a pole and automatically position them in a structured way. After linking, you may still need to adjust the **Z-offset** for proper vertical placement of all items.

For linking without snapping, see [Link](#). For automatic vertical alignment, see [Link, Snap & Adjust](#).

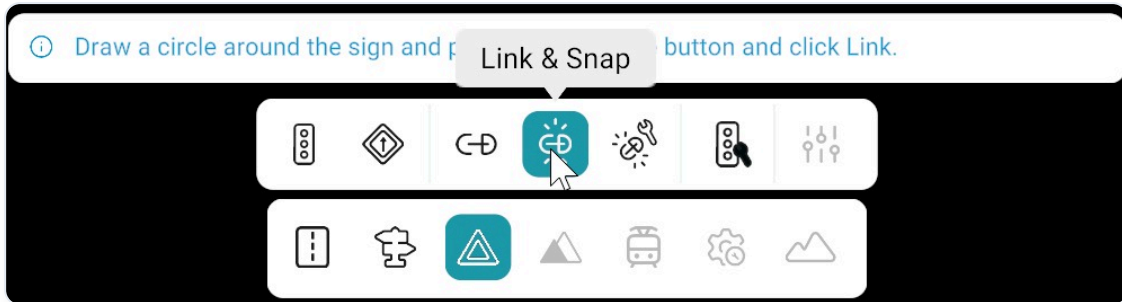

## ► How to Use Link & Snap

Follow these steps:

1. Activate the **Link & Snap** tool from **signal bar**.
2. Draw **circular selection** around the desired pole, traffic signs, traffic lights.
3. Click on **Link** button from right panel.

All selected **Traffic Signs** and **Traffic Lights** will be linked and automatically snapped to the Pole.

## ► After Linking

Adjust **Z-offset** for each linked sign or light to fine-tune height on the pole. Horizontal placement is handled by the snap step.


## ► Related

- [Signals overview](#) · [Link](#) · [Link, Snap & Adjust](#)

# Link, Snap & Adjust

The **Link, Snap & Adjust** feature allows you to connect multiple **Traffic Lights** and **Traffic Signs** to a pole and automatically position them with accurate vertical alignment.

Only the **Z-offset** of the bottom **Traffic Light** or **Traffic Sign** needs to be adjusted, as all other linked items are automatically aligned with the pole.

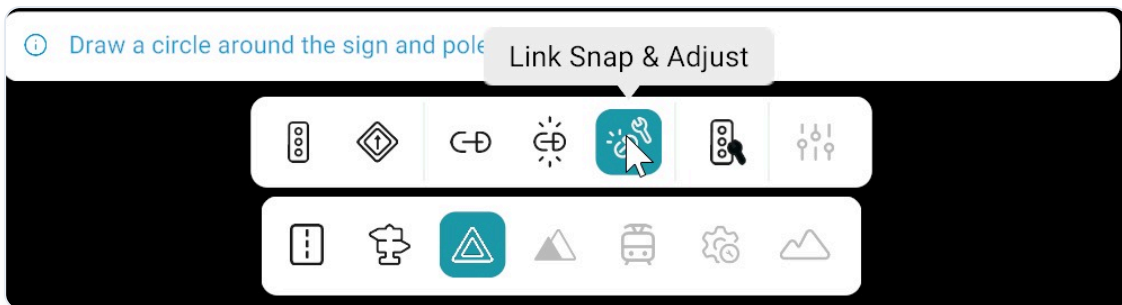

## ► How to Use Link, Snap & Adjust

Follow these steps:

1. Activate the **Link, Snap & Adjust** tool from the **signal bar**.
2. Draw a circular selection around the desired pole, **Traffic Signs**, and **Traffic Lights**.
3. Click **Link** from Right panel.

Selected **Traffic Signs** and **Traffic Lights** will be linked, snapped, and aligned to the pole.

## ► Comparison: Link Tools at a Glance

Tool	Links to Pole	Snaps to Pole Position	Auto Vertical Alignment	Manual Adjustment Required
Link	Yes	No	No	Position + Z-offset of all signals

Tool	Links to Pole	Snaps to Pole Position	Auto Vertical Alignment	Manual Adjustment Required
<a href="#">Link &amp; Snap</a>	Yes	Yes	No	Z-offset of all signals
<b>Link, Snap &amp; Adjust</b>	Yes	Yes	Yes	Z-offset of bottom signal only

## ► After Linking

Set **Z-offset** for the **bottom Traffic Light** or **Traffic Sign** only. All other linked items follow the pole's vertical alignment automatically.


## ► Related

- [Signals overview](#) · [Link](#) · [Link & Snap](#)

# Adjust All

---

**Adjust all** lets you adjust the **vertical** position of Traffic Signs and Lights across the whole map in one action, instead of editing each instance separately.

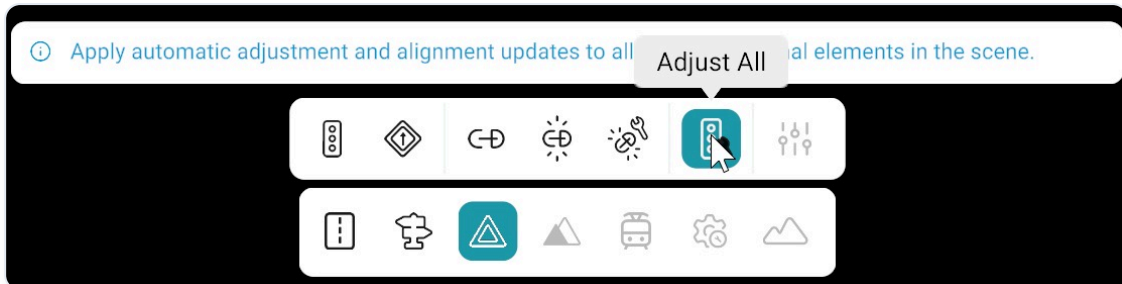

---

## ► How to Use Adjust All

Follow these steps:

1. Click on **Signals** tool and open the **Signal bar**.
2. **Left-click** on **Adjust all** from signal bar.

RepliMap applies the vertical adjustment to **every** sign and signal on the map at once.

---


## ► Related

- [Signals overview](#) · [Signal properties panel](#) · [Link, Snap & Adjust](#)

# Controllers (Currently Not Available)

---

**Controllers** are used to manage Traffic Signals within a Junction. They define which signals belong to a specific Junction and help coordinate their behaviour and timing.

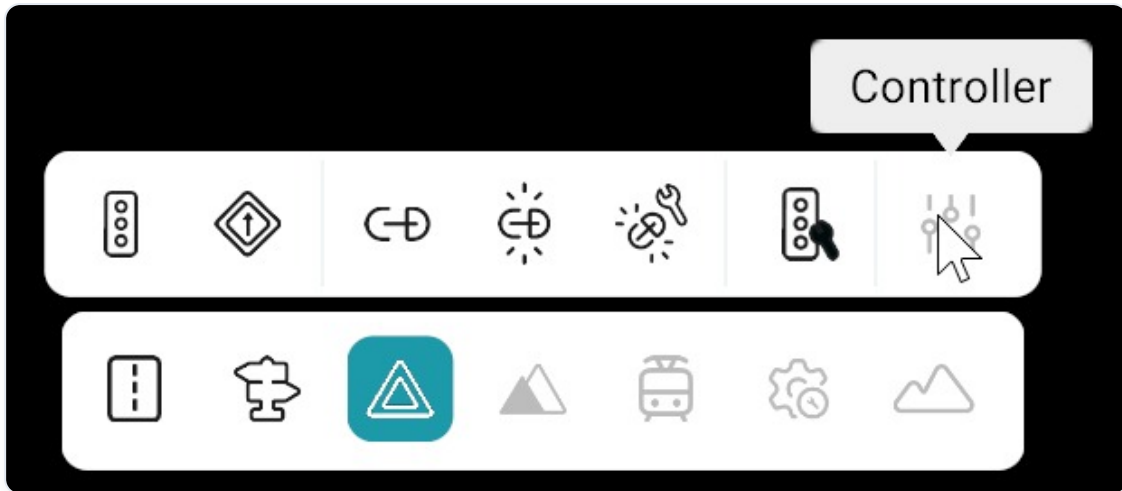

---

## ► Controller Panel

In the **Controller panel** (available from the **Left sidebar**), you can create and manage controllers. The map displays all available **Junction IDs**, which can be assigned to controllers for signal management.

## ► How to Assign Signals to a Controller

Follow these steps:

1. View the available **Junction IDs** on the map.
2. Select the required **Junction ID** from the **Map Junction** list.
3. The selected junction will appear in the **Junction bar**.
4. Add all **Traffic Signals** that belong to this junction.
5. The selected signals will appear in the **Signals bar**.

 **Note**

This feature is currently disabled.

---

**► Related**

- [Signals overview](#) · [Traffic lights](#) · [Road tool](#)

# Signal Properties Panel

---

When a **Traffic Light** or **Traffic Sign** is selected on the canvas, the **Signal Properties** panel opens on the side. The sections below describe the usual layout for both lights and signs.



Signal Properties panel screenshot



## ✕ Signal Properties

### Identification


Signal ID

0

Name

1000001

^ Preview



### Geometry

Orientation

none

Size

N/A

Height

1

Width

1

H Offset

0

Z Offset

4.5

S

38.959

T

-2.922

### Attributes

Dynamic



Frame



Type

1000001

Subtype

-1

Country

DEU

Unit

m/s

Value

0

Text

Pitch

0

Roll

0

Lane Validity





## ► Sections in the Panel

### ► Identification

Field	Purpose
Signal ID	Unique identifier assigned to the signal (e.g., 0)
Name	Label for the signal, often combining type and subtype (e.g., 1000001_00)

### ► Preview

Shows a visual representation of the selected signal or sign to help confirm the asset before editing properties.

### ► Geometry

Field	Purpose
Orientation	Direction or alignment of the signal
Size	Overall display size (e.g., Small, Medium, Large), when applicable
Height	Physical height of the signal object
Width	Physical width of the signal object
H Offset	Horizontal offset from the reference position
Z Offset	Vertical height above the ground or reference surface
S	Position along the road reference line (longitudinal)

Field	Purpose
T	Lateral offset from the road reference line (left or right)

### ► Attributes

Field	Purpose
Dynamic	Enables state changes during simulation (e.g., traffic light cycle: red, yellow, green)
Frame	Controls frame-related display or behaviour for the signal, when applicable
Pitch	Forward or backward tilt of the signal (in degrees)
Roll	Side-to-side tilt of the signal (in degrees)

### ► Advanced Settings


Field	Purpose
Type & Subtype	OpenDRIVE classification (e.g., type 1000001, subtype 00)
Country	Country standard used (e.g., DEU for Germany)
Unit & Value	Measurement unit and value when required by the asset
Text	Additional label or text on the signal

*Exact fields may vary depending on the asset and product version.*

### ► Lane Validity

Specifies which lanes the signal applies to on the road. Use **+** to add lane validity rule and limit the signal to selected lanes.

When a rule is added, open the **Edit Lane** dialog. Set **From Lane** and **To Lane** to define the lane range, then click **Apply**.

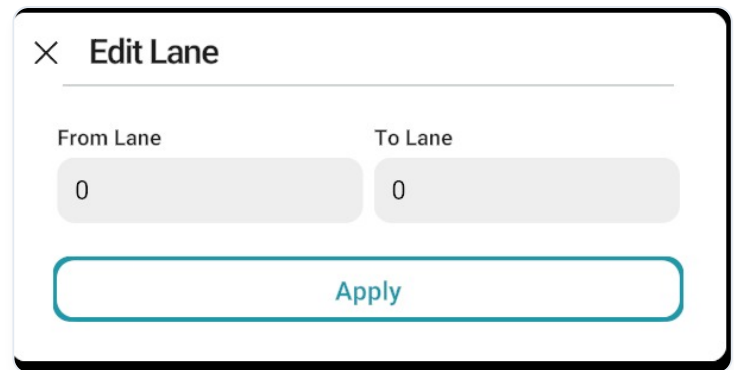

× **Edit Lane**

From Lane To Lane

0 0

Apply

### ▶ **Delete Signal**

Removes the selected signal or sign from the map.

### ▶ **Related**

- [Signals overview](#) · [Traffic lights](#) · [Traffic signs](#) · [Object Properties Panel](#)

# Elevation Tools

---

 Coming soon

**Elevation tools** are **not yet available** in RepliMap. Documentation for this feature will be published here when it is released.

# Trams

---

 **Coming soon**

**Trams** are **not yet available** in RepliMap. Documentation for this feature will be published here when it is released.

# Advance Tools

---

 Coming soon

**Advance Tools** are **not yet available** in RepliMap. Documentation for this feature will be published here when it is released.

# Troubleshooting

---

 **Coming soon**

This section will be updated soon.

# Shortcuts

---

 **Coming soon**

This section will be updated soon.

# 12 Product Releases

---

# Product Releases

---

Release notes and installers for the RepliMap map editor. Version details are on [Release notes](#) (newest first).

## ► All releases

Version	Release Date	Type	What's New	Build	Guide
<a href="#">v7.1.0</a>	Jun 04, 2026	Stable	Latest RepliMap build	<a href="#">↓</a>	NA
<a href="#">v7.0.1</a>	May 20, 2026	Stable	Instruction panels, new assets, traffic lights, movable panels	<a href="#">↓</a>	<a href="#">↓</a>
<a href="#">v7.0.0</a>	May 06, 2026	Stable	UI/UX redesign, Editor Bar, panel improvements	<a href="#">↓</a>	<a href="#">↓</a>
<a href="#">v6.3.0</a>	Jan 30, 2026	Stable	Leica elevation, GeoJSON signals, elevation compare	<a href="#">↓</a>	<a href="#">↓</a>
<a href="#">v6.2.8</a>	Jan 23, 2026	Stable	ASAM QC validation, HERE → ODR, hierarchy & speed bumps	<a href="#">↓</a>	NA
<a href="#">v6.2.7</a>	Nov 03, 2025	Minor	Signal tool updates and optimizations	<a href="#">↓</a>	NA
<a href="#">v6.2.6</a>	Oct 20, 2025	Minor	Elevation tools improvements	<a href="#">↓</a>	NA
<a href="#">v6.2.5</a>	Sep 19, 2025	Minor	Object library updates and fixes	<a href="#">↓</a>	NA
<a href="#">v6.2.4</a>	Sep 01, 2025	Minor	Tram tool improvements	<a href="#">↓</a>	NA
<a href="#">v6.2.2</a>	Aug 04, 2025	Minor	Data import/export fixes	<a href="#">↓</a>	NA

Version	Release Date	Type	What's New	Build	Guide
<a href="#">v6.2.1</a>	Jun 20, 2025	Minor	Performance and stability improvements	<a href="#">↓</a>	NA

Click a **version** to open that release's notes on the [Release notes](#) page.

# Release notes

---

Release notes for RepliMap versions. Installers and the full version table are on [Overview](#).

---

## ► v7.1.0

**Download:** [RepliMapSetup\\_v7.1.0.519.exe](#)

Detailed release notes will be added once they are available.

---

## ► v7.0.1

**Download:** [RepliMapSetup\\_v7.0.1.490.exe](#)

### ► Overview

This release introduces multiple workflow improvements and usability enhancements to make map creation more efficient and intuitive. Instruction Panels, new Hero Assets and objects, improved traffic light support, and movable property panels have been added to enhance flexibility and user experience. The release also includes several stability improvements and fixes related to lane editing, GeoJSON generation, UI behavior, panel handling, and theme visibility.

### ► Features & Enhancements

- **Instruction Panels:** Added instruction panels in the Bottom Editor Bar to guide users on how to use tools and workflows more efficiently.
- **New Assets & Objects:** Introduced new assets and objects to make map creation easier, faster, and more interactive.
- **Traffic Lights:** Added new Germany-specific traffic light assets for improved regional mapping support.
- **Frame Toggle Support:** Introduced a Frame Toggle option in the Signal Property Panel for improved signal visibility.
- **Movable Right-Side Panels:** Enabled all dependent right-side property panels to be movable for a more flexible workspace experience.

### ► Bug Fixes

- **UI Issues Resolved:** Fixed multiple UI-related inconsistencies and interaction issues across panels and tools.
- **Lane Validity Fix:** Resolved issue where lane validity values were not updating correctly and are now properly reflected in XODR.
- **Lane Width Tag Generation:** Fixed incorrect lane width tag generation behavior.
- **GeoJSON WGS/UTM Issues Resolved:** Fixed UTM/WGS GeoJSON generation and conversion related issues.
- **Mapbox & Map Color Toggle:** Resolved issues related to Mapbox visibility and Map Color toggle behavior.
- **Lane Marking Panel Trigger:** Fixed Lane Marking panel generation behavior on left click.
- **Dark Theme Preview Visibility:** Improved preview visibility issues in Dark theme.
- **Panel Overlapping:** Resolved panel overlapping issues for improved panel management.
- **Traffic Elements Visibility:** Fixed visibility issues for Traffic Light and Traffic Sign icons, and updated JSON handling accordingly.

### ► Known Issues

- **Road Selection Issue:** Roads may not be selectable after adding elevation data from GeoJSON.
- **Dark Theme – Object Panel:** Minor visual inconsistencies observed in the Objects panel under Dark theme.
- **Mapbox Visibility:** Mapbox panel disappears when switching between tools.
- **Reference Images Panel:** First image does not correctly display its name in the panel.
- **Editor Bar Hover State:** Hover effect color is missing in the Editor Bar and Tool bar.
- **Traffic Sign/Light + Repeatable Objects Preview Panel:** Preview panel is missing in Traffic Sign, Traffic Light, and Repeatable Objects panels.
- **Property Panel Closing Behavior:** Property panels close when editing fields.
- **Gizmo Functionality:** Objects sometimes may not move, rotate, or resize correctly using the Gizmo tool.
- **Sensor Data Panel:** “Reset LiDAR Point Cloud” button is missing.
- **Light Theme Visibility:** Objects placed on roads may not be clearly visible in Light theme.
- **Minor Dark Theme Issues:** Minor Dark theme inconsistencies may still exist in some panels.
- **Gizmo Shortcuts:** Shortcut keys are not synchronized with Gizmo functionality.
- **Traffic Sign/Light Preview:** Some traffic sign previews are not visible in icons.
- **Central Lane Marking – Node Addition:** Node addition behavior may not work correctly for central lane markings.
- **Left-side panels overlapping:** Panels overlap each other in the left-side section of the UI.
- **Polygon Property Panel value reflection issue:** Updated polygon property values are not consistently reflected in the corresponding fields.
- **GeoJSON Conversion (WGS → ENU):** Conversion is not synchronized with Mapbox and may result in incorrect output.

- **Map Canvas Centering:** The canvas is not centered (0,0).
- **Manual Geometry Anchors (Yellow):** Yellow anchors are not visible in the interface.

### ▶ Known Limitations

- **Upcoming Features:** A few features are still under development and will be introduced in the next release with a more refined and user-friendly UI/UX experience.
  - **Menu Bar Behavior:** The menu bar dropdown closes by default when the user is in the Road tool. Otherwise, the user needs to reselect the dropdown to reopen it.
  - **Z-Offset Adjustment:** Z-offset values cannot currently be adjusted using Gizmo and can only be updated through the Property Panel.
- 

## ▶ v7.0.0

### ▶ Overview

This release introduces a completely redesigned RepliMap with a modern and user-friendly interface. The updated UI ensures that all features are easily accessible without hidden tools, enabling faster and more efficient workflows. The interface has been thoughtfully restructured to deliver a seamless experience, with intuitive navigation and instant access to tools that significantly enhance user efficiency.

### ▶ Features & Enhancements

- **UI/UX Redesign:** Introduced a fully redesigned interface with an improved layout structure, eliminating hidden tools and ensuring all functionalities are directly accessible.
- **Splash Screen & Theme Update:** Added a new splash screen and updated the application theme to enhance visual consistency and overall user experience.
- **Menu Bar Restructure:** Reorganized menu options to improve discoverability and reduce navigation effort.
- **Toolbar Reorganization:** Optimized tool placement to improve usability and reduce time spent locating features.
- **Centralized Toolbar Access:** Consolidated key functionalities, including Focus, Gizmo, reference data, and scenery views, into a single toolbar for quick access.
- **Editor Bar Enhancements:** Moved road creation and object placement tools (Objects, Traffic Lights, Traffic Signs) to the Editor Bar for streamlined workflows.
- **Lane Editing Support:** Enabled editing of lane attributes (lane marking, lane height) directly from the Editor Bar.
- **Link & Snap Accessibility:** Integrated Link and Snap features into the Editor Bar for easier access, along with an updated and improved panel.

- **Improved Snapping & Linking:** Enhanced Link and Snap behavior for traffic lights and traffic sign poles to ensure more accurate placement and connections.
- **Repeatable Objects Redesign:** Redesigned repeatable objects with improved functionality and a more user-friendly workflow.
- **Tooltip Improvements:** Standardized tooltips to provide clearer guidance and improve tool identification.
- **Panel Redesign:** Updated Object, Traffic Light, Traffic Sign, and Reference Data (GeoJSON/Sensor Data) panels for improved usability and structure.
- **Property Panel Optimization:** Refined property panels to display only relevant attributes based on selection.
- **Object Deletion from Panel:** Added a Delete Object option within the Property Panel, allowing direct deletion of objects.
- **Movable Panels:** Enabled repositioning of right-side panels within the canvas workspace for better flexibility.
- **Polygon Panel Update:** Updated polygon object panels to be non-fixed, providing a more flexible and user-friendly experience while drawing polygon objects.
- **New Canvas Option:** Added a dedicated option to clear all existing data and initialize a new canvas.
- **Preferences Panel:** Introduced a Preferences section for managing theme and language settings.
- **Application Exit Control:** Added a Quit option to allow users to exit the application directly.
- **User Profile Access:** Introduced a user profile dropdown for quick access to user-related actions.

## ► Known Issues

- **Road Selection Issue:** Roads may not be selectable after adding elevation data from GeoJSON.
- **Dark Theme – Object Panel:** Minor visual inconsistencies observed in the Objects panel under Dark theme.
- **Intermittent Road Selection Behavior:** Road selection may occasionally become inconsistent and requires further investigation.
- **Mapbox Visibility:** Mapbox panel disappears when switching between tools.
- **Mapbox Default State:** “Mapbox” toggle and “Map Color” checkbox are not enabled by default.
- **Lane Marking Panel Trigger:** Lane Marking panel opens on right-click unexpectedly.
- **Reference Images Panel:** First image does not correctly display its name in the panel.
- **Editor Bar Hover State:** Hover effect color is missing in the Editor Bar and Tool bar.
- **Traffic Sign/Light Panel Preview:** Preview panel is missing in Traffic Sign and Traffic Light panels.
- **Dark Theme Preview Visibility:** Traffic sign and traffic light previews are not clearly visible in Dark theme.
- **Property Panel Closing Behavior:** Property panels close when editing fields.
- **Repeatable Objects Preview:** Preview support is pending for repeatable objects for next release.
- **Sub Map Navigation:** Navigation between sub-map pages is inconsistent.
- **Gizmo Functionality:** Objects sometimes may not move, rotate, or resize correctly using the Gizmo tool.

- **Sensor Data Panel:** “Reset LiDAR Point Cloud” button is missing.
- **Light Theme Visibility:** Objects placed on roads may not be clearly visible in Light theme.
- **Minor Dark Theme Issues:** There might be some minor dark theme issues in some panels.
- **GeoJSON Generation (UTM/WGS):** Issues observed in GeoJSON generation for UTM and WGS coordinate systems.
- **GeoJSON Conversion (WGS → ENU):** Conversion is not synchronized with Mapbox and may result in incorrect output.
- **Mapbox & GeoJSON Alignment:** Mapbox and GeoJSON layers may not align correctly in certain scenarios.
- **GeoJSON Visibility Control:** Global “Hide GeoJSON” toggle is missing.
- **Gizmo Shortcuts:** Shortcut keys are not synchronized with Gizmo functionality.
- **Traffic Sign Preview:** Some traffic sign previews are not visible in icons.
- **Lane Marking Persistence:** Lane markings persist after adding tram to a lane.
- **Suspended Cable DropDown:** Dropdown list may not display all suspended cables.
- **Panel Overlapping Behavior:** Multiple panels remain open instead of switching based on the active tool.

### ▶ Known Limitations

- **Upcoming Features:** A few features are still under development and will be introduced in the next release with a more refined and user-friendly UI/UX experience.
- **Menu Bar Behavior:** The menu bar dropdown closes by default when the user is in the Road tool. Otherwise, the user needs to reselect the dropdown to reopen it.

---

## ▶ v6.3.0

### ▶ Overview

This release focuses on improving elevation accuracy by integrating Leica point cloud data into the map authoring workflow. Users can add elevation from Leica data and visually compare elevations between created roads and point cloud data to validate alignment and improve map reliability.

Additionally, this release introduces support for importing signals from GeoJSON files into RepliMap using the **Add Signal** functionality within the GeoJSON feature, enhancing map data integration capabilities.

### ▶ Features & Enhancements

- **Elevation from Point Cloud (Leica Data):** Elevation from Leica point cloud data can be added to the map.
- **Elevation Comparison:** Compare elevation between created roads and Leica point cloud data.

- **GeoJSON Signal Support:** Added support to import signals from a GeoJSON file into RepliMap using the *Add Signal* option within the GeoJSON feature.

### ► Bug Fixes

- **Leica Z-Value Alignment:** Fixed Leica point cloud Z-value mismatch causing incorrect alignment with map data.

### ► Known Issues

- **Official Sign Names:** Some signs may still display empty placeholder labels in certain templates.
- **Lane Priority in 3D Scene:** Lane does not reflect accurately in the 3D view as per the set lane priority.
- **Signal Visibility on Hide:** Signal visualization may change when using the Hide option.
- **Road Anchor Behavior:** Extra road anchors sometimes get added automatically after export on newly created roads.
- **Polygon Node Creation:** Polygon nodes created using the “A” key sometimes originate from an unexpected source point.
- **Polygon Tool Performance:** Performance may degrade when working with large map files.
- **Polygon Property Updates:** Property changes may apply only to selected portions of a linked polygon.
- **Polygon Width Application:** Width values may not be applied uniformly across an entire linked polygon.
- **Combine Outline:** The Combine Outline tool fails to merge selected objects properly; artifacts may remain after merging.
- **Hierarchy Panel Deletion:** Deleting all objects from the Hierarchy Panel may not remove repeatable objects from the map.
- **Hierarchy Panel Search:** Minor edge cases may occur when using the search bar.
- **Speed Bump Selection:** Speed bumps are not selectable on the map but can be selected from the Hierarchy Panel.
- **Scenery View Visualization:** Trams, suspended tram cables, and light wires are not visible in Scenery View.
- **Scenery View Textures:** Some objects may appear without textures in Scenery view.
- **Material Rendering:** Materials assigned in 2D may not always appear consistently in 3D.
- **Object Orientation:** Object orientation may differ between 2D and 3D environments.
- **Gizmo Tool Availability:** Gizmo is available in 3D view but not in 2D; Z-offset changes may not always be retained.
- **Focus Shortcut Behavior:** Pressing “F” focuses the viewport even while typing in input fields.
- **Object Properties Panel:** Object images do not appear in the Properties panel.
- **Default Lat/Lon on New Maps:** New maps may save with default geographic coordinates rather than intended values.

- **Buffer Area Outline Workflow:** The tool may need to be toggled off/on between outline creations.
- **Repeatable Continuous Objects:** Repeatable continuous objects are not visible in scenery view.
- **GeoJSON Visibility Toggles:** Global GeoJSON visibility toggle is not synchronized with individual field-type toggles.
- **Console Window Positioning:** Console window can be moved beyond editor boundaries.
- **Sample Map Naming Errors:** Some sample maps contain mislabeled assets.
- **Compare Elevation of WGS/UTM:** Compare elevation is currently not working for UTM/WGS GeoJSON.

### ▶ Known Limitations

- **2D/3D Feature Parity:** Some tools (e.g., Gizmo) are not available in 2D and are limited to the 3D scenery view.

## ▶ v6.2.8

### ▶ Overview

This release focuses on improving map authoring reliability and expanding workflow automation. It introduces **ASAM QC-OpenDRIVE**-based XODR validation to catch standard compliance issues early, adds **HERE to ODR** → **OpenDRIVE** generation from a GeoJSON perimeter for faster area creation, and strengthens day-to-day editing with hierarchy panel upgrades, new assets (including **speed bumps**), sensor data usability improvements, and broader stability and interaction fixes across 2D/3D.

### ▶ Features & Enhancements

- **Map Validation (ASAM QC-OpenDRIVE):** Added built-in XODR validation using the ASAM QC-OpenDRIVE framework to help verify map correctness and detect standard compliance issues before downstream use.
- **HERE → ODR (Automated Map Generation):** Added automated HERE-to-OpenDRIVE map generation using a GeoJSON perimeter as input; road data is fetched from the HERE pipeline to produce standards-compliant OpenDRIVE output.
- **Hierarchy Panel Improvements:** Added an eye-toggle for hiding scene objects, improved search behavior, and introduced a “See XML” and “FOCUS” option for quick inspection and object identification.
- **Speed Bumps:** Added speed bump assets to the library for more realistic city scenes.
- **Suspended Cable Improvements:** Improved suspended cable behavior/handling for scenery workflows.
- **Asset Library Additions:** Integrated additional assets including Wooden Pole, Square Manhole, Guide pole, PoleCrissCross\_Oslo\_2m, and PoleCrissCross\_Oslo\_3m.
- **Lane Marking & Road Mark Updates:** Added new broken lane marking patterns (x2broken broken and broken x2broken) and introduced yellow filled road mark type.

- **Editor Shortcuts:** Added/extended shortcut keys for hide/show lanes; users can hide the selected road via **Ctrl+H** and unhide hidden roads (last-to-first) via **Shift+S**.
- **Sensor Data Improvements:** Increased the default tile generation limit from 5 to 10 (with a slider to adjust 1–100), added a Height Cutoff slider for point cloud display, and improved behaviors around road detection and focus reset when reactivating the sensor tool.
- **Pitch & Roll for Placed Objects:** Added pitch and roll properties to the object panel so placed objects can be aligned to sloped/elevated roads for better visual fit.
- **Repeat Tool Performance:** Optimized the Repeatable Objects tool responsiveness when activated from the toolbar.
- **Buffer Area Workflow Improvements:** Improved usability of the buffer area workflow from a user perspective.
- **Add Elevation from GeoJSON:** Elevations can be added from UTM/WGS GeoJSON data.

### ► Bug Fixes

- **Repeat Regeneration Fix:** Objects no longer reappear in the 3D view after regeneration when used on overlapping segments.
- **Continuous Value Sync:** Object values are now correctly applied across all segments for Line → Continuous objects.
- **Repeat List Accuracy:** The Repeat List now correctly displays objects drawn on segments.
- **XODR Object Naming:** Auto-selected objects now display the correct object name in exported XODR files.
- **Undo Selection Retained:** Objects remain selectable after undoing road deletion.
- **Visibility Isolation:** Hiding continuous repeatable objects no longer hides the entire road or associated objects.
- **Continuous Focus Handling:** Focus now correctly moves to the selected continuous repeatable object.
- **Polygon Selection Fix:** Polygon objects affected by road elevation are now selectable.
- **GeoJSON Feature Cleanup:** The feature dropdown no longer shows default options when JSON is not imported.
- **GeoJSON Property Reset:** Property values from previously imported GeoJSON files no longer persist when importing new data without selecting properties.
- **CEDA Elevation Accuracy:** UTM and WGS GeoJSON elevation values are now correctly reflected on the map.
- **Crash Stability:** Multiple RepliMap crash issues have been resolved.
- **Sign Properties Panel:** The sign object property panel now appears as expected.
- **3D to 2D Sync:** Double-clicking an object in 3D no longer causes it to appear in 2D.
- **Road Visibility Shortcut:** Shift + S now correctly hides and unhides roads.
- **RoadMarking Shortcut Fix:** The R shortcut and RoadMarking toggle now function correctly.
- **Signal Orientation Update:** Signal orientation changes are now reflected correctly at runtime.
- **Versioned Export:** Versioned export now works as expected.

- **Bridge Tunnel Mesh Fix:** Property changes no longer create ghost meshes or visibility conflicts.
- **Tram Elevation Dependency:** Dependent tram placement now correctly follows road elevation.
- **Central Marking Edit:** Central lane markings can now be modified using the R shortcut.
- **Lane Panel Access:** The lane property panel now opens correctly for continuous markings.
- **Runtime Hierarchy Update:** Roads created via split or junction operations now update correctly at runtime.
- **Road Mark Visibility:** Road marks can now be hidden using the hierarchy panel visibility toggle.

## ► Known Issues

- **Official Sign Names:** Some signs may still display empty placeholder labels in certain templates.
- **Lane Priority in 3D Scene:** Lane does not reflect accurately in the 3D view as per the set lane priority.
- **Signal Visibility on Hide:** Signal visualization may change when using the Hide option.
- **Road Anchor Behavior:** Extra road anchors sometimes get added automatically after export on newly created roads.
- **Polygon Node Creation:** Polygon nodes created using the "A" key sometimes originate from an unexpected source point.
- **Polygon Tool Performance:** Performance may degrade when working with large map files.
- **Polygon Property Updates:** Property changes may apply only to selected portions of a linked polygon.
- **Polygon Width Application:** Width values may not be applied uniformly across an entire linked polygon.
- **Combine Outline:** The Combine Outline tool fails to merge selected objects properly; artifacts may remain after merging.
- **Hierarchy Panel Deletion:** Deleting all objects from the Hierarchy Panel may not remove repeatable objects from the map.
- **Hierarchy Panel Search:** Minor edge cases may occur when using the search bar.
- **Speed Bump Selection:** Speed bumps are not selectable on the map but can be selected from the Hierarchy Panel.
- **Scenery View Visualization:** Trams, suspended tram cables, and light wires are not visible in Scenery View.
- **Scenery View Textures:** Some objects may appear without textures in Scenery view.
- **Material Rendering:** Materials assigned in 2D may not always appear consistently in 3D.
- **Object Orientation:** Object orientation may differ between 2D and 3D environments.
- **Gizmo Tool Availability:** Gizmo is available in 3D view but not in 2D; Z-offset changes via Gizmo may not always be retained.
- **Focus Shortcut Behavior:** Pressing "F" focuses the viewport even while typing in input fields.
- **Object Properties Panel:** Object images do not appear in the Properties panel.

- **Default Lat/Lon on New Maps:** New maps may save with default geographic coordinates rather than intended values.
- **Buffer Area Outline Workflow:** The tool may need to be toggled off/on between outline creations.
- **Repeatable Continuous Objects:** Repeatable continuous objects are not visible in scenery view.
- **GeoJSON Visibility Toggles:** The global GeoJSON visibility toggle is not synchronized with individual field-type toggles.
- **Console Window Positioning:** The console window can be moved beyond editor boundaries.
- **Sample Map Naming Errors:** Some sample maps contain mislabeled assets (e.g., tunnels labeled as trams).
- **Compare Elevation of WGS/UTM:** Compare elevation is currently not working for UTM/WGS GeoJSON.

### ▶ Known Limitations

- **2D/3D Feature Parity:** Some tools (e.g., Gizmo) are not available in 2D and are limited to the 3D Scenery view.
- 

## ▶ v6.2.7

### ▶ Overview

This release expands RepliMap's workflow capabilities with **Repeatable Objects** for faster multi-object placement, enhances **GeoJSON styling** with field selection and per-geometry-type color assignment, introduces flexible **elevation mapping** from GeoJSON fields for more accurate elevation representation and integrates **Oslo Streetlights** into the object library, improving visual design and simulation accuracy.

### ▶ Features & Enhancements

- **Repeatable Objects Tool:** The Repeat Tool has been added to simplify bulk placement of static scene objects such as trees, poles, and other assets along roads. It supports both **Line Mode** and **Spline Mode** for flexible placement.
  - **Line Mode:** Connects nodes with straight lines, ideal for uniform or straight road sections. Supports **Discrete** (spaced) and **Continuous** (seamless) placements.
  - **Spline Mode:** Connects nodes with smooth curved paths, ideal for curved or irregular road shapes. Supports **Discrete** placement only.
- **Oslo Streetlights Integration:** The Oslo streetlight model is now fully integrated into RepliMap's object library, allowing users to place and configure realistic lighting assets within maps.
- **Enhanced GeoJSON Feature Styling:** GeoJSON import now allows selecting specific fields instead of importing all by default. Field types can be individually configured for visibility, assigned colors, and styled

based on geometry type directly in the GeoJSON panel.

- **Elevation from GeoJSON Fields:** Added the ability to assign elevation values directly from imported GeoJSON files. The enhancement allows selecting the desired field and value type to define elevation on the map, providing greater flexibility and precision in elevation data handling.

### ► Bug Fixes

- **Country Code in Exported XODR Files:** Exported XODR files from “Export Versioned ODR” now correctly display the selected country instead of always defaulting to DEU.
- **Incorrect Default Object Heading:** Fixed a bug where newly created objects displayed incorrect default heading values.
- **Streetlamps Rotation Issue:** Streetlamp objects now properly rotate in both 2D and 3D views when the hdg value is changed.
- **Signal Orientation Not Reflected in Scenery View:** Corrected signal orientation mismatch between the 2D editor and 3D Scenery view.
- **GeoJSON Line Rendering:** Resolved projection and coordinate accuracy issues that caused visual distortions in line-based GeoJSON features.

### ► Known Issues

- **Official Sign Names:** Some signs may still display placeholder labels in certain templates.
- **Missing Visualization:** Trams, suspended tram cables, and light wires remain invisible in Scenery View.
- **Texture Issue in Scenery View:** Objects may appear without materials or textures in certain environments.
- **Sensor Data UI:** The Load Sensor Data feature needs improved filters and UI controls.
- **Default Lat/Lon on New Maps:** New maps may save with default geographic coordinates rather than intended values.
- **Buffer Area Outline Workflow:** The Buffer Area Outline tool must be toggled off/on between multiple outline creations.
- **Object Orientation Inconsistency:** Orientation of certain objects may differ between 2D and 3D environments.
- **Gizmo Tool 2D/3D Inconsistency:** The Gizmo tool is inactive in 2D view and functional only in 3D Scenery view.
- **Combine Outline Failure:** The Combine Outline tool may fail to merge selected objects properly.
- **Materials Not Rendered in Scenery View:** Materials assigned in 2D are not consistently displayed in 3D.
- **Signal Z-Offset Not Saved:** Moving signals using the Gizmo tool may not retain Z-offset values.
- **Focus Shortcut Behavior:** Pressing “F” focuses the viewport even while typing in input fields.
- **Sample Map Naming Errors:** Some sample maps contain mislabeled assets (e.g., tunnels labeled as trams).
- **Hierarchy Panel Filter:** Filtering is currently limited to objects, signals, tunnels, and bridges under the road list and not fully implemented across the editor.

- **Hierarchy Panel Search Limitation:** Only roads are searchable; objects, signals, and other assets are not yet supported.
- **Console Window Boundary Limitation:** The console window can move beyond editor boundaries; repositioning constraints are pending.
- **Visibility of Repositioned Repeatable Objects:** Repositioned repeatable objects may not always appear correctly in the 3D view.
- **Range Limitation of Repeatable Objects in Junctions:** Repeatable object placement range is currently limited when segments occur inside complex junctions.
- **GeoJSON and Field Type Toggles Not Synced:** The global GeoJSON visibility toggle is not synchronized with individual field-type toggles.

### ► Known Limitations

- **Panel Filtering:** Filtering of traffic signs and signals is not yet supported.
  - **UI Panel Overlap:** UI panels (e.g., Elevation Profile and GeoJSON) overlap when opened together, impacting usability.
- 

## ► v6.2.6

### ► Overview

This release enhances RepliMap's georeferencing workflow with automatic **GeoJSON CRS** handling and improved coordinate conversion accuracy, new **NCAP** sample maps, and additional editor flexibility. It also introduces a movable Console panel, a smarter Hierarchy filter, and updated user documentation for smoother and more accurate map creation.

### ► Features & Enhancements

- **GeoJSON CRS Prompt & Persistence:** On import, users are prompted to select a CRS (WGS84, ENU, UTM,). The choice is stored in the map's georeference tag for consistent reuse.
- **Automatic CRS → Cartesian Conversion:** Imported GeoJSON coordinates are automatically transformed from the selected CRS to the chosen Cartesian system (ENU/UTM), ensuring all features are correctly positioned in the simulation environment.
- **Euro NCAP Sample Maps (New):** A curated set of Euro NCAP-oriented maps is now available in RepliMap BUILD to explore and build scenarios. Each entry describes the map, its contents, suggested scenario uses, and includes links to official Euro NCAP references.
- **Movable Console Panel:** The Console panel in the editor is now movable and can be positioned anywhere within the editor workspace while creating maps.

- **Enhanced Hierarchy Panel Filter:** The filter functionality in the Hierarchy panel has been implemented to allow users to show or hide objects, signals, tunnels, and bridges under the Road list.
- **Oslo Streetlight Integration:** The Oslo streetlight has been added to the RepliMap object library for use in map creation.

### ► Bug Fixes

- **2D Primitive Dimensions and Rotation Fix:** Corrected 2D primitives' heading, width, and length. A 90° rotation had swapped width/length—objects.
- **Object Name Visibility Fix:** Fixed an issue where the full object name was not visible and could not be selected in the Name field.
- **Hierarchy Panel Road Selection Fix:** Addressed a problem where selecting a new road from the Hierarchy panel did not properly close the previously selected road.
- **Road Search Panel Fix:** The Road Search panel no longer appears when the Editor is initially loaded.
- **Mapbox georeference:** The map now correctly centers on the specified latitude and longitude without requiring a manual pan or zoom.

### ► Known Issues

- **Official sign names:** Some signs may still display placeholder labels in certain templates.
- **Undo/Redo shortcuts:** Menu options work; shortcut keys may not always trigger.
- **Missing visualization:** Trams, suspended tram cables, and light wires are currently not visible in Scenery View.
- **Texture issue in Scenery View:** Objects may appear without materials/textures in some scenes.
- **Sensor Data UI:** The Load Sensor Data feature needs additional filters and UI elements for better usability.
- **Default object heading:** Newly added objects may show an incorrect default heading (e.g., -0.432 instead of 0).
- **Signal orientation mismatch:** Signal orientation set in the 2D view does not display correctly in the 3D Scenery view.
- **Default lat/lon on new maps:** Newly created maps are saved with default latitude and longitude values which may not reflect the intended location.
- **Buffer Area Outline workflow:** The Buffer Area Outline tool requires manual deactivation and reactivation to create multiple buffer areas.
- **Object orientation inconsistency:** Object orientations are inconsistent between the 2D and 3D views.
- **Gizmo tool 2D/3D inconsistency:** The Gizmo tool is non-functional in the 2D viewport and works only in the 3D Scenery view.
- **Combine Outline failure:** The Combine Outline tool does not function properly and may fail to merge selected objects as expected.

- **Materials not rendered in Scenery View:** Materials assigned in the 2D view are not rendered in the 3D Scenery view.
- **Signal Z-offset not saved:** RepliMap does not save Z-offset values when moving signals using the Gizmo tool.
- **Focus shortcut behavior:** The Focus shortcut (“F”) triggers globally, even while typing in the Object Properties panel.
- **Sample map naming errors:** Sample map contains naming errors (a tunnel is labeled as “Tram” and vice versa).
- **Hierarchy panel Filter:** The filter functionality in the Hierarchy panel is currently limited to showing and hiding objects, signals, bridges, and tunnels within the road list. It has not yet been implemented on the editor. .
- **Hierarchy Panel Search Limitation:** Objects, signals, tunnels, lanes, and bridges are not searchable from the Hierarchy panel search bar; only roads can be searched at the moment.
- **Console Window Boundary Limitation:** The console window needs to be constrained at the bottom of the RepliMap editor to prevent it from moving beyond the editor boundaries.

### ▶ Known Limitations

- **Panel filtering:** Filtering of traffic signs and signals is not yet available.
- **UI panels:** UI panels overlap when multiple windows are opened (for example, the Elevation Profile panel and GeoJSON panel), affecting usability.

---

## ▶ v6.2.5

### ▶ Overview

This release improves map-saving reliability, georeferencing accuracy, and introduces easier access to user documentation for a smoother RepliMap experience.

### ▶ Features & Enhancements

- **Help Button:** Added a toolbar Help button for quick access to official documentation.
- **Mapbox Geo-Reference Fixes:** Manual latitude/longitude inputs now resolve to the exact location with zero X/Y/Z offset.
- **PP3 Heading Compensation on Save:** On Ctrl+S, `paramPoly3` headings are automatically adjusted for XODR compliance.
- **Continuation Report on Save:** After saving, a console report checks road continuity and junction alignment.

## ► Bug Fixes

- Resolved editing issues after reopening the right-side Hierarchy Panel.

## ► Known issues

- **Official sign names:** Some signs may still display placeholder labels in certain templates.
- **Undo/Redo shortcuts:** Menu options work; shortcut keys may not always trigger.
- **Missing visualization:** Trams, suspended tram cables, and light wires are currently not visible in **Scenery View**.
- **Texture issue in Scenery View:** Objects may appear without materials/textures in some scenes.
- **Sensor Data UI:** The *Load Sensor Data* feature needs additional filters and UI elements for better usability.
- **Mapbox Georeference:** The map may not center correctly on the specified lat/lon until after a manual pan/zoom.
- **Default object heading:** Newly added objects may show an incorrect default heading (e.g.,  $-0.432$  instead of  $0$ ).
- **Signal orientation mismatch:** Signal orientation set in the 2D view does not display correctly in the 3D Scenery view.
- **Default lat/lon on new maps:** Newly created maps are saved with default latitude and longitude values which may not reflect the intended location.
- **Buffer Area Outline workflow:** The Buffer Area Outline tool requires manual deactivation and reactivation to create multiple buffer areas.
- **Object orientation inconsistency:** Object orientations are inconsistent between the 2D and 3D views.
- **Gizmo tool 2D/3D inconsistency:** The Gizmo tool is non-functional in the 2D viewport and works only in the 3D Scenery view.
- **Combine Outline failure:** The Combine Outline tool does not function properly and may fail to merge selected objects as expected.
- **Materials not rendered in Scenery View:** Materials assigned in the 2D view are not rendered in the 3D Scenery view.
- **Installer directory choice:** The installer does not provide an option to select a preferred installation directory.
- **Signal Z-offset not saved:** RepliMap does not save Z-offset values when moving signals using the Gizmo tool.
- **Focus shortcut behavior:** The Focus shortcut ('F') triggers globally, even while typing in the Object Properties panel.
- **Sample map naming errors:** Sample map contains naming errors (a tunnel is labeled as 'Tram' and vice versa).
- **Hierarchy panel persistence:** The Hierarchy panel may retain the road list from the previously loaded map even after starting a new map via the File menu.

## ► Known Limitations

- **Hierarchy Panel filtering:** Filtering of traffic signs and signals is not yet available.
  - **Overlapping UI panels:** UI panels overlap when multiple windows are opened (for example, the Elevation Profile panel and GeoJSON panel), affecting usability.
- 

## ► v6.2.4

### ► Features & Enhancements

- **Leica LiDAR Data Integration** : Import and visualize Leica drive-collected LiDAR datasets in 2D & 3D with GeoJSON overlays and frame-skipping.

**i** This feature leverages several open-source libraries under their own licenses. See “Third-Party Software” below for details.

- **Structured Hierarchy Panel** : Collapsible tree with lock/hide controls, roads search bar, element filters, and a “Hide Unselected Roads” button.
- **Advanced Filtering Options** : Filter map elements such as signs, lights, trees, etc., for targeted display and editing.
- **Polygon & Bounding Box Visibility Selection**: Isolate road visibility using area-based selection to focus on specific map segments.
- **Sample Map Differentiation** : Separate sample and user maps in the viewer and documentation for clear distinction.
- **Expanded US Traffic Sign Library** : Add more US traffic signs to the object library for richer simulation scenarios.

### ► Bug Fixes

- Resolved performance degradation when loading extensive maps.
- Fixed re-addition of user-defined objects in the library.
- Some roads become unselectable in large maps – now resolved.
- Fixed the Versioned Exporter bug: maps can now be exported for 3D RoadRunner and ModelDesk.

### ► Third-Party Software

We’re using these libraries under the licenses shown to power our LiDAR visualization pipeline:

- PDAL – BSD license
- GDAL – MIT/X style license

- PROJ – MIT license
- GEOS – LGPL v2.1 or later (dynamic linking)
- LASzip – LGPL v2.1 or later (dynamic linking)
- zlib – zlib license
- libdeflate – MIT license
- libcurl – MIT license
- OpenSSL 3.x – Apache License 2.0
- SQLite – Public Domain (SQLite)

### ► Known Issues

- Signal drag-and-drop on roads sometimes fails to attach correctly.
- Default object heading may appear incorrect (e.g., defaults to  $-0.432$  instead of 0).
- Road list in Versioned Export does not display properly.
- Buffer area tool occasionally fails to display the created buffer.
- Signal orientation in scenario view not reflected accurately.
- Editor canvas can become unresponsive at the screen edges.
- Signal Object panel does not switch correctly after closing the Object Properties pane.
- Leica data UI design changes are pending full implementation.
- Hierarchy panel does not fully support road locking or isolating selected roads on top.
- Hierarchy panel is currently not filtering traffic signs, lights, or other elements.

---

## ► v6.2.2

### ► Features & Enhancements

- **Asset Library interface redesigned for improved accessibility and consistency.**

The asset management panel has been modernized with intuitive navigation and visual consistency. Users can now browse, search, and place assets more efficiently.

- **New toggle added to control automatic road selection during object placement.**

A toggle lets you choose between automatic and manual road-selection modes to suit different workflows.

- **Object creation now supports input by type, sub-type, and name.**

More flexible instancing: specify type, sub-type, and label for rule-based simulation setups.

- **Sample maps added to HTML documentation including Urban Junctions, Highways, Tunnels, etc.**

Five example map types are now documented with descriptions to help new users grasp supported data formats.

- **Version update notifier introduced to alert users of new RepliMap releases.**

Automatic in-app/email notifications ensure you never miss a new build.

- **US traffic signs added to the object library for simulation and mapping scenarios.**

Includes regulatory, warning, and guide signs to improve fidelity for U.S. environments.

- **Additional object support added for ASSIST integration: round bases, horizontal poles, traffic lights.**

ASSIST-compliant infrastructure objects are now built into the library for seamless external model compatibility.

### ► Bug Fixes

- Resolved UI overlap issue between GeoJSON features panel and name display panel.
- Fixed overlapping of the Polygon Properties panel and corrected 'Save as Preset' behavior.
- Fixed the image load tool to allow creation of presets using PNG/JPG image regions.
- Reinstated the search bar for locating Signal IDs and Object IDs.
- Fixed junction grid issue where gaps appeared between junction tiles.
- Resolved signal visibility issue when using the 'hide' button.
- Corrected map box behavior to reflect accurate real-world coordinates.
- Fixed unresponsiveness of RepliMap during editing sessions.
- Corrected bug where map name would not update in the UI.
- Resolved issue with deleted objects reappearing unexpectedly.
- Fixed overlap between lane height panel and name box.
- Resolved UI overlap caused by the Combine Outline panel.
- Fixed snapping/linking feature behavior in editor mode.
- Addressed reference image issues affecting display or interaction.
- Corrected blurry logo rendering on the splash screen.

### ► Known Issues

- The view toggle popup stays open after switching between 2D and 3D views.
- Hovering over objects does not display the 3D preview or details pane.
- A semi-transparent screen shade remains after importing a map until the Mapbox layer is switched off and on.

- The buffer outline tool sometimes does not draw correctly around selected areas.
  - The 'Cut Road' icon may look blurry after selecting it.
  - Some tool tags show an extra border on the left side.
  - Pop-up windows (like console messages or errors) can overlap or spill outside the main application window.
  - Pressing Enter in the properties panel can accidentally switch you back to the object panel.
  - In the Obstacle Advertisement panel, certain assets default to the wrong rotation and need correction (users can still rotate them manually using the rotation tool).
- 

## ► v6.2.1

We are excited to announce the product launch of **RepliMap v6.2.1**, the latest version of our unified mapping and scene editing platform.

### ► Features & Enhancements

- **Comprehensive Map Editing**
  - **Road & Lane Editing**: Intuitive tools for creating, modifying, and customizing roadways.
  - **Junction Creation**: Design simple or complex intersections to suit any network layout.
  - **Object & Signal Placement**: Add traffic signs, signals, and roadside objects with full property control.
  - **ASAM OpenDRIVE Support**: Edit and export fully standards-compliant maps for simulation.
- **Scene Enrichment**
  - **3D Asset Library**: Access a broad collection of buildings, vegetation, streetlights, and more.
  - **Scene Enhancement**: Enrich your maps by placing and customizing 3D models.
  - **Realistic Textures & Materials**: Apply high-quality materials to surfaces and assets for immersion.
- **Advanced Export Capabilities**
  - **Export to OpenDRIVE**: Save maps in OpenDRIVE format for immediate use in simulators.
  - **Platform Compatibility**: Export for use with tools like ReplicaGr, dSPACE, MathWorks RoadRunner, etc.
  - **FBX Scene Files**: Export entire scenes as FBX for downstream 3D applications.
- **Additional Functionalities**
  - **GeoJSON Support**: Import and edit GeoJSON files to integrate real-world geographic data.
  - **Mapbox Integration**: Leverage Mapbox basemaps and imagery for background context.
  - **Sensor Data & Trajectory Editing**: Load real-world sensor logs and actor trajectories for fine-tuned testing.